




Ref No	Part No	Description
1	11401-06840	Gasket Set
2	11141-02F01	. Gasket, Cylinder Head
3	11173-02F00	. Gasket, Cylinder Head Cover No.1
4	11178-17E00	. Gasket, Cylinder Head Cover No.2
5	11182-35F00	. Gasket, 2nd Air Passage
6	11241-02F01	. Gasket, Cylinder Front
7	11242-02F01	. Gasket, Cylinder Rear
8	11482-06G00	. Gasket, Clutch Cover
8	11482-06G10	. Gasket, Clutch Cover
9	11483-02F10	. Gasket, Magneto Cover
10	11485-02F10	. Gasket, Gear Shift Cover
11	12837-19B10	. Gasket, Tensioner Adjuster
12	12837-24A10	. Gasket, Tensioner Adjuster
13	14181-31D00	. Gasket, Exhaust Pipe
14	14771-02F00	. Connector, Exhaust
15	15201-35F00	. O Ring, Fuel Pump
16	17689-50F00	. O Ring
17	09168-14002	. Gasket (13.8x18.8x0.4)
17	09168-14002	. Gasket (13.8x18.8x0.4)
18	09168-14011	. Gasket (14x20x1.5)
18	09168-14015	. Gasket (14x20x1.5)
19	09280-33004	. O Ring (d:3.1,id:32.7)
20	09280-55005	. O Ring (d:2.4,id:55.6)

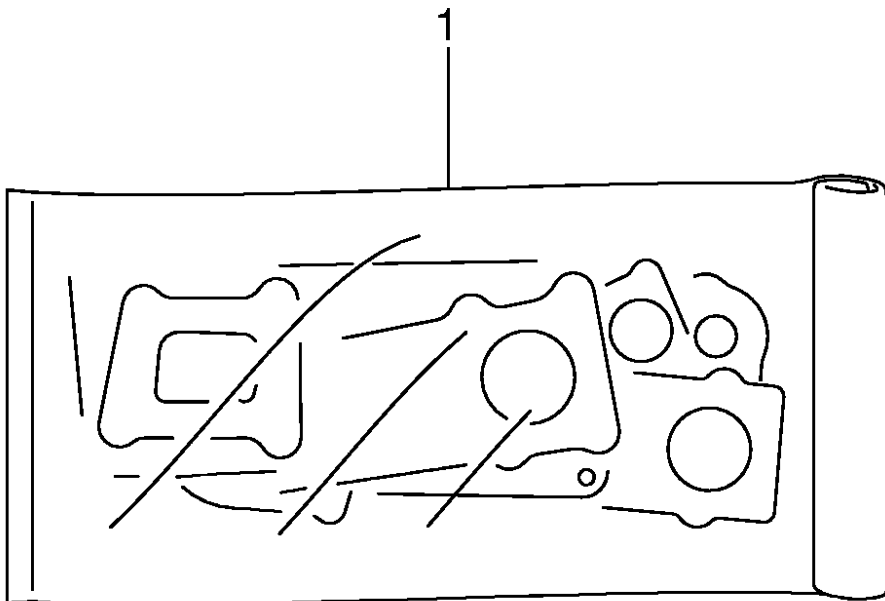

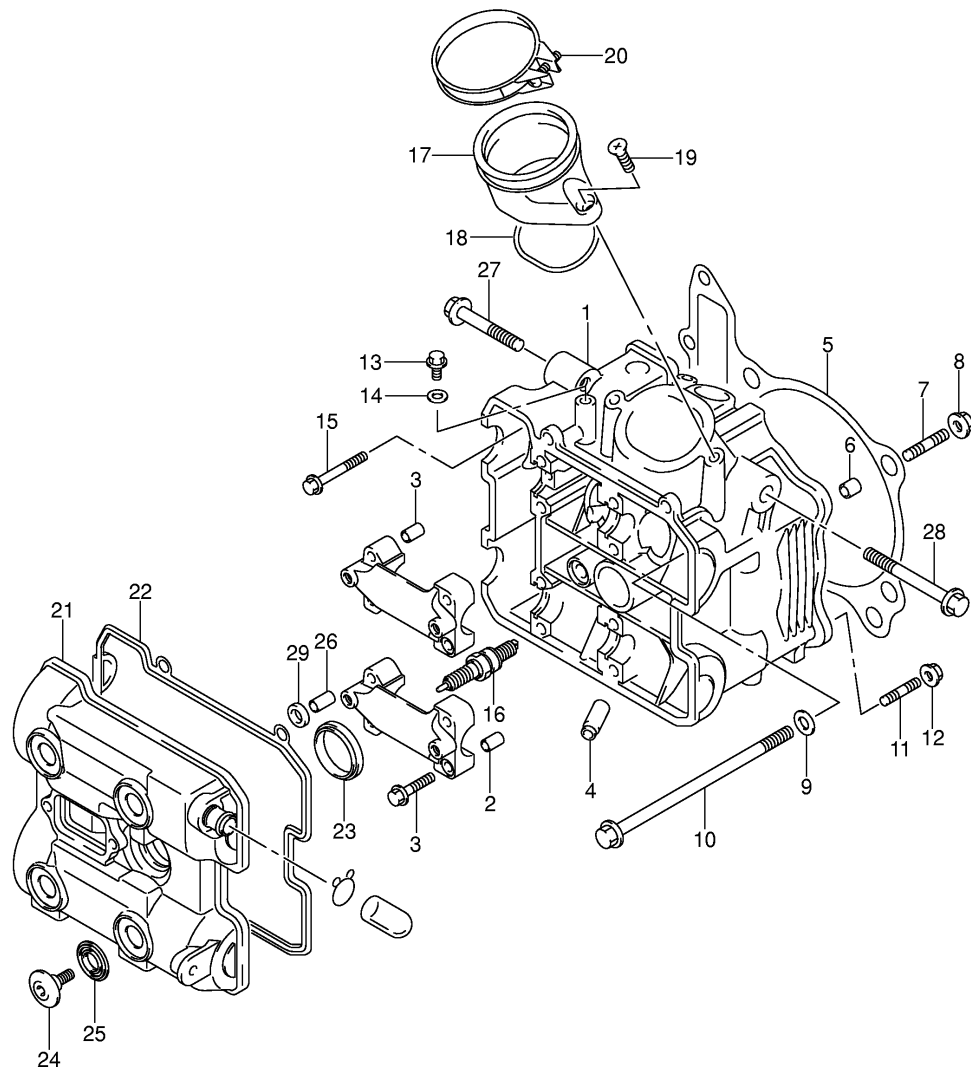

Ref No	Part No	Description
1	11100-06G00	Head Assy, Cylinder Front
2	09206-08001	• Pin
3	09103-06026	• Bolt (6x39)
4	11115-32E70	Guide, Valve (os:0.3)
5	11141-02F01	Gasket, Cylinder Head
6	04211-13189	Pin
7	09108-08143	Stud Bolt (8x35)
8	08316-10083	Nut
9	09160-10082	Washer
10	09103-10276	Bolt (10x175)
11	09108-06096	Stud Bolt (6x30)
12	08316-10063	Nut
13	07120-06123	Plug
14	09168-06023	Gasket
15	09103-06103	Bolt (6x70)
16	09482-00412	Spark Plug (ngk,cr8ek)
16	09482-00413	Spark Plug (denso,u24etr)
16	09482-00410	Spark Plug (ngk,cr9ek)
16	09482-00411	Spark Plug (denso,u27etr)
16	09482-00462	Spark Plug (ngk,cr10ek)
16	09482-00463	Spark Plug (denso,u31etr)
17	13101-06G00	Pipe, Intake Front
18	09280-55005	• O Ring
19	02122-06163	Screw
20	09402-70203	Clamp
21	11171-06G01	Cover, Cylinder Head
22	11173-02F00	Gasket, Cylinder Head Cover
23	11178-17E00	Gasket
24	09106-07009	Bolt (7x17.5)
25	09161-11008	Washer
26	09206-08007	Pin
27	09103-10381	Bolt (10x65)
28	09103-10382	Bolt (10x85)
29	11182-35F00	Gasket, 2nd Air Passage

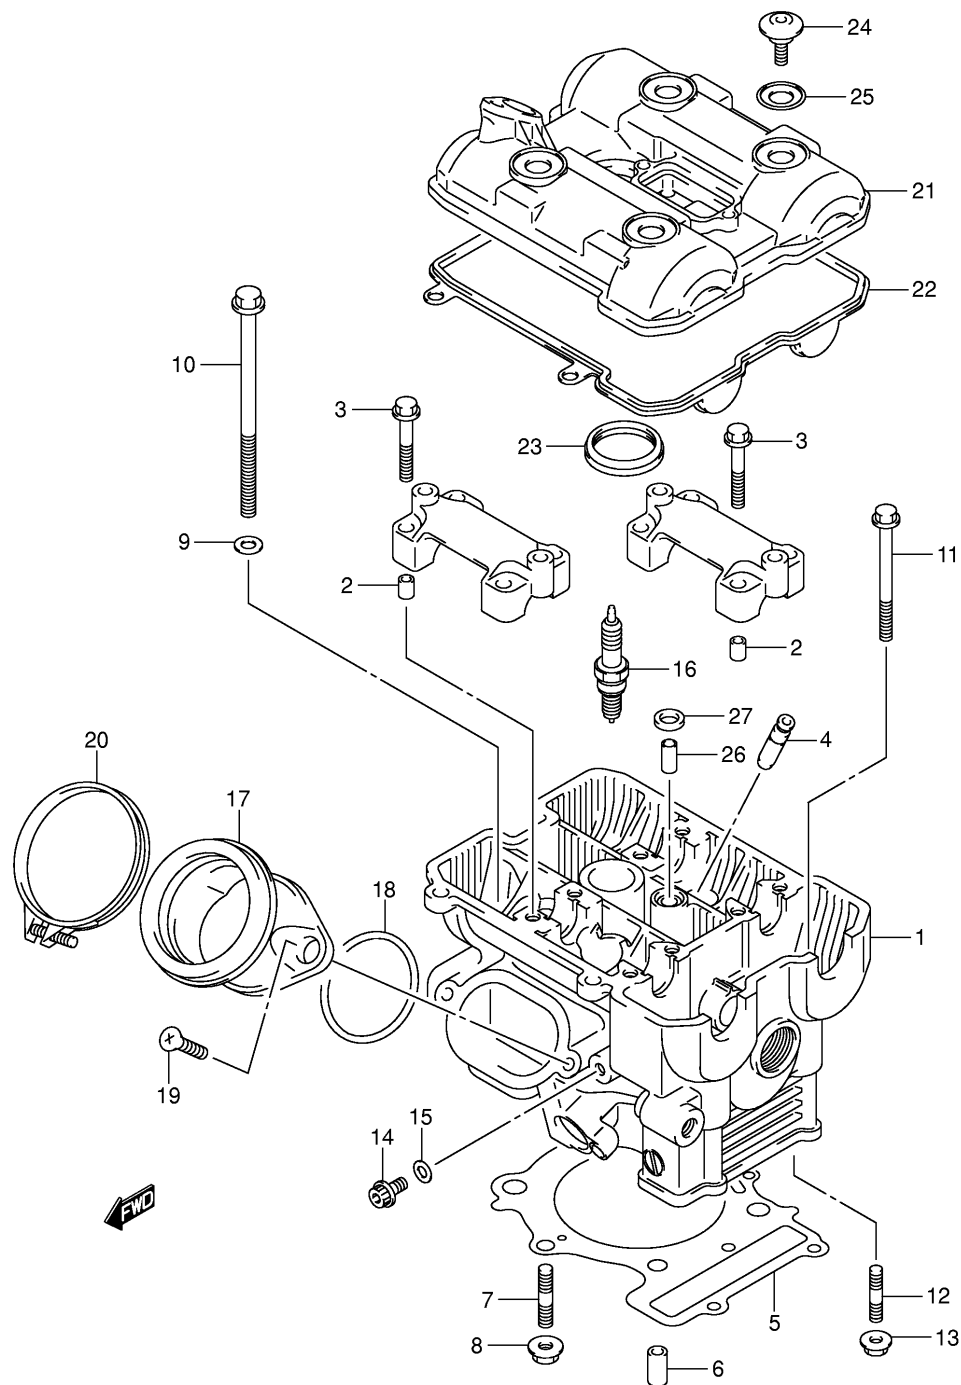

Ref No	Part No	Description
1	11100-06G00	Head Assy, Cylinder Rear
2	09206-08001	• Pin
3	09103-06026	• Bolt (6x39)
4	11115-32E70	Guide, Valve (os:0.3)
5	11141-02F01	Gasket, Cylinder Head
6	04211-13189	Pin
7	09108-08143	Stud Bolt (8x35)
8	08316-10083	Nut
9	09160-10082	Washer
10	09103-10276	Bolt (10x175)
11	09103-06103	Bolt (6x70)
12	09108-06096	Stud Bolt (6x30)
13	08316-10063	Nut
14	07120-06123	Plug
15	09168-06023	Gasket
16	09482-00412	Spark Plug (ngk,cr8ek)
16	09482-00413	Spark Plug (denso,u24etr)
16	09482-00410	Spark Plug (ngk,cr9ek)
16	09482-00411	Spark Plug (denso,u27etr)
16	09482-00462	Spark Plug (ngk,cr10ek)
16	09482-00463	Spark Plug (denso,u31etr)
17	13102-06G00	Pipe, Intake Rear
18	09280-55005	• O Ring
19	02122-06163	Screw
20	09402-70203	Clamp
21	11172-06G00	Cover, Cylinder Head
22	11173-02F00	Gasket, Cylinder Head Cover
23	11178-17E00	Gasket
24	09106-07009	Bolt (7x17.5)
25	09161-11008	Washer
26	09206-08007	Pin
27	11182-35F00	Gasket, 2nd Air Passage

Ref No	Part No	Description
1	11211-06G00-0F0	Cylinder, Front
2	11221-06G00-0F0	Cylinder, Rear
3	11241-02F01	Gasket, Cylinder Front
4	11242-02F01	Gasket, Cylinder Rear
5	04211-13189	Pin
6	09108-06118	Stud Bolt
7	01421-06203	Stud Bolt
8	08316-10063	Nut



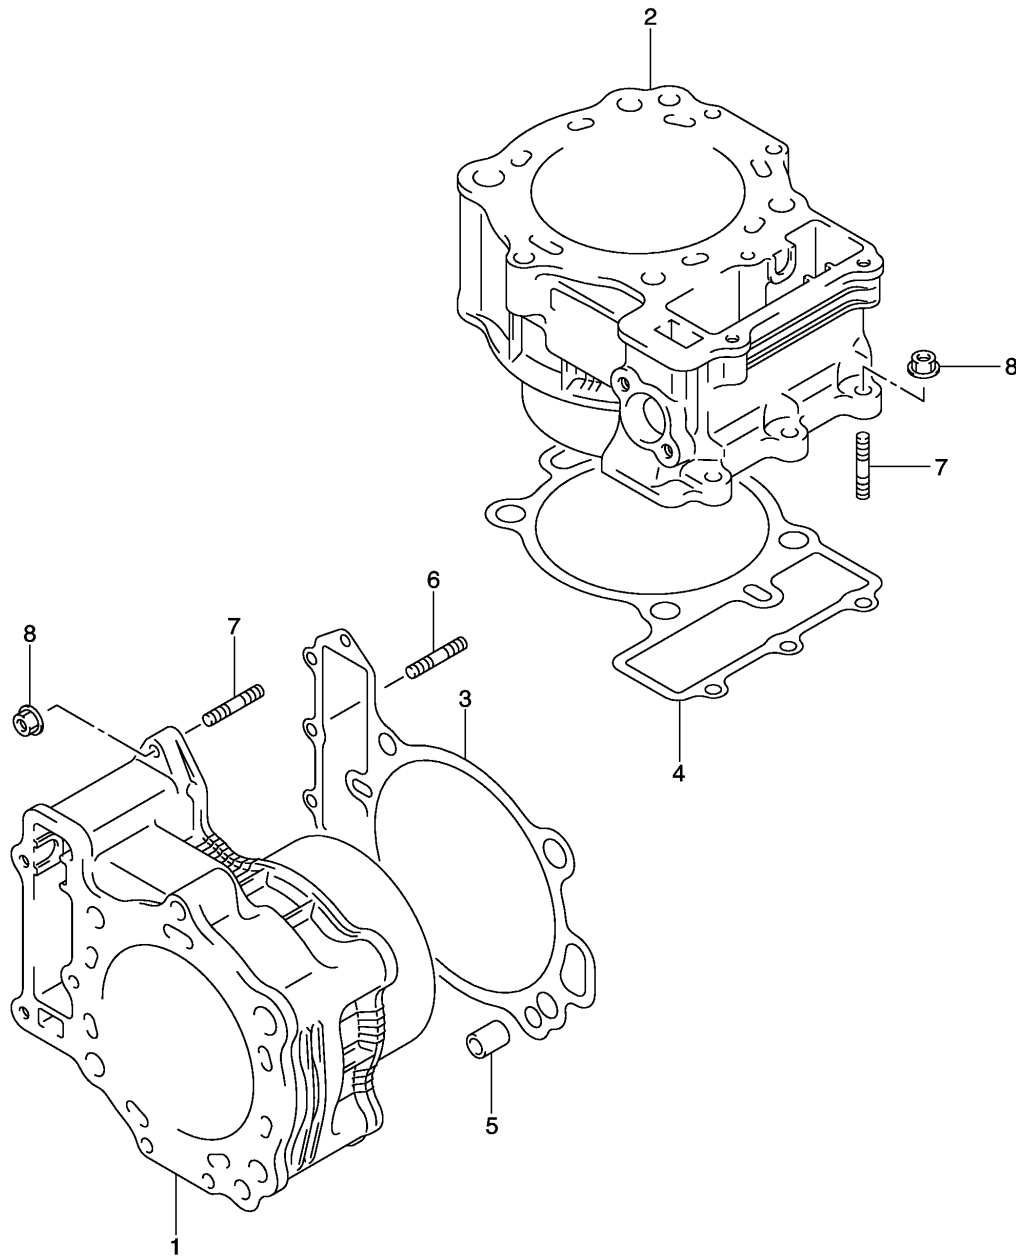


FIG.5

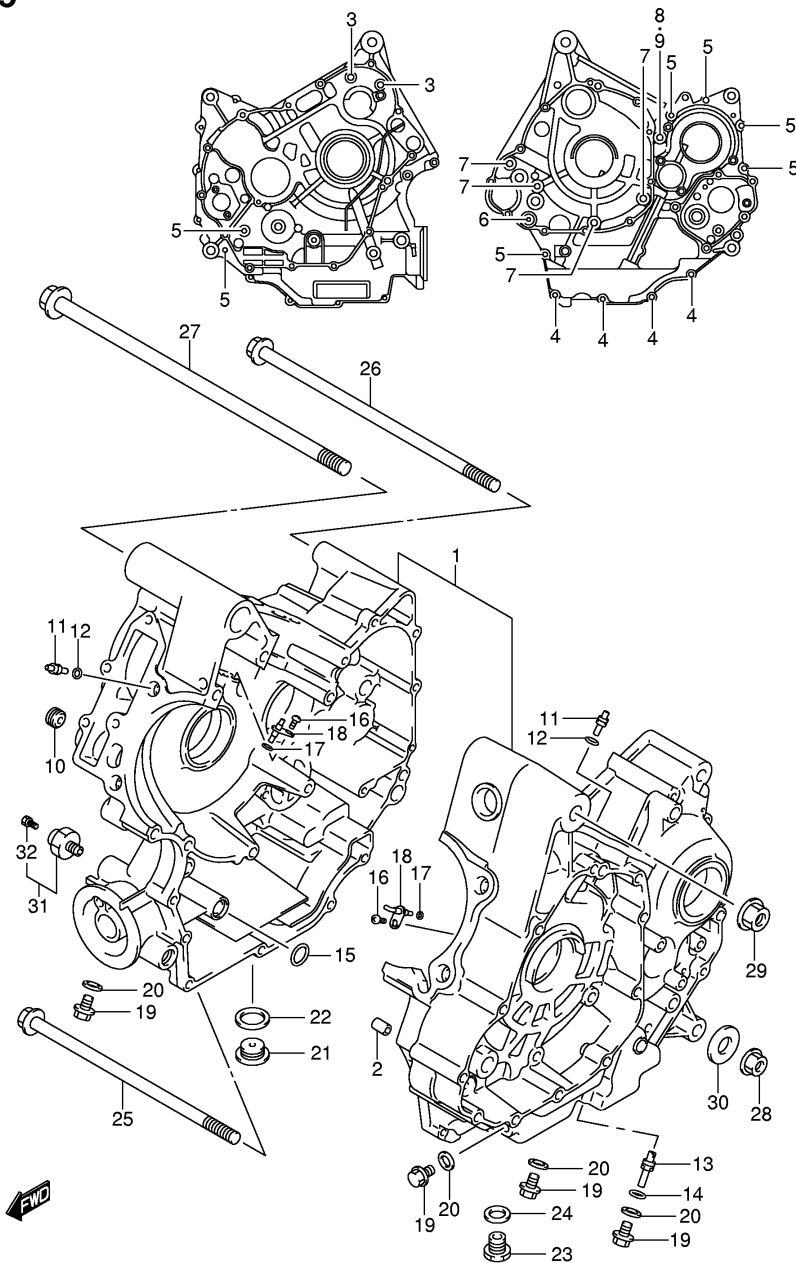

Ref No	Part No	Description
1	11302-06821	Crankcase Set
2	11319-33E00	. Pin
3	09106-08142	. Bolt (l:110)
4	01547-06303	. Bolt
5	01547-06703	. Bolt
6	01547-06853	. Bolt
7	07120-08903	. Bolt
8	09106-08136	. Bolt (l:125)
9	08322-01083	. Washer, Crankcase Bolt
10	11329-02F00	. Jet, Oil Gallery 3.6
11	09493-20014	. Jet, Oil Gallery
12	09280-04004	. O Ring (d:1.2,id:4.0)
13	09493-20014	. Jet, Oil Gallery Mission
14	09280-04004	. O Ring
15	09280-12009	. O Ring, Crankcase
16	09106-06075	Bolt
17	09280-04004	O Ring (d:1.2,id:4.0)
18	11390-06G00	Jet, Piston Cooling
19	01550-08123	Bolt
20	09168-08016	Gasket
21	09248-16012	Plug
22	09168-16002	Gasket
23	09247-14036	Plug, Oil Drain
24	09168-14002	Gasket
25	09103-10205	Bolt (l:225)
26	09103-10347	Bolt (l:275)
27	09103-12073	Bolt (l:330)
28	08319-31103	Nut
29	09159-12054	Nut
31	37820-33D10	Switch Assy, Oil Pressure
32	37822-33D00	. Bolt


FIG.5A

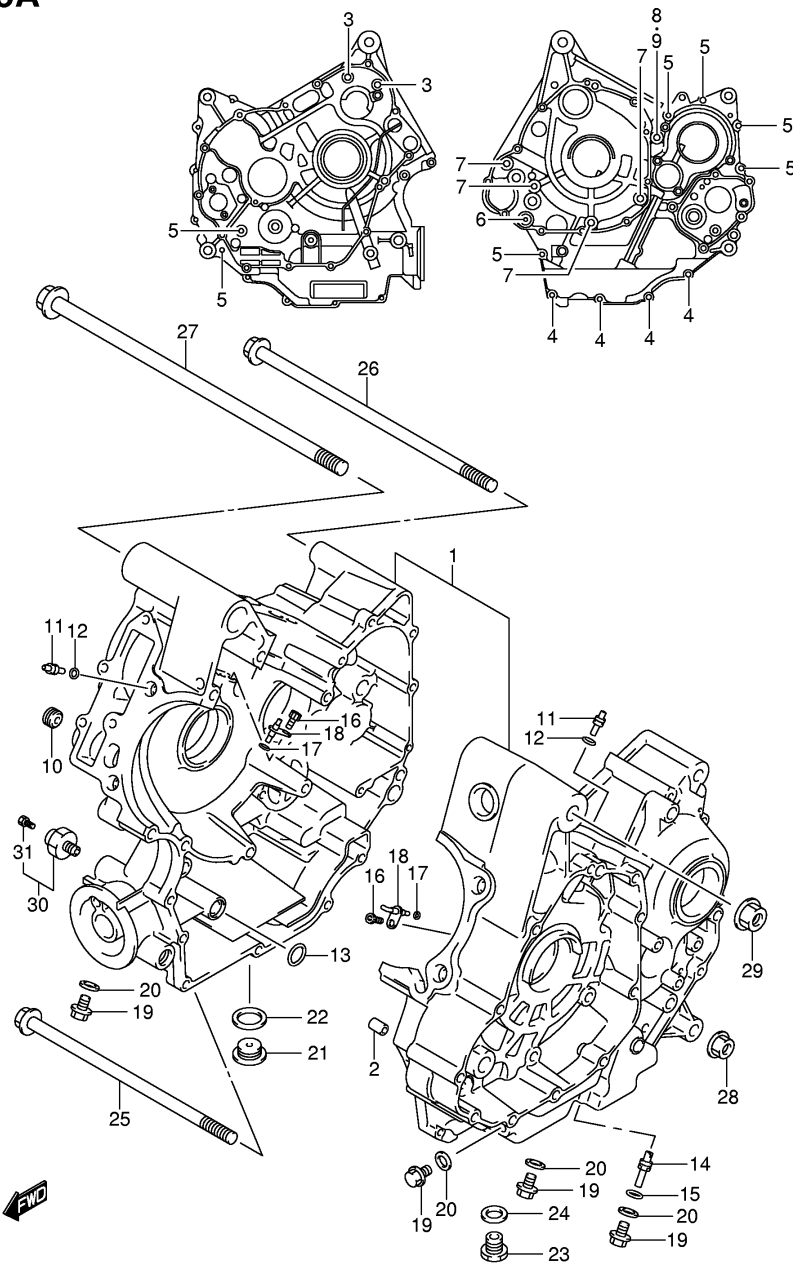

Ref No	Part No	Description
1	11306-06820	Crankcase Set
2	11319-33E00	• Pin
3	09106-08142	• Bolt (l:110)
4	01547-06303	• Bolt
5	01547-06703	• Bolt
6	01547-06853	• Bolt
7	07120-08903	• Bolt
8	09106-08136	• Bolt (l:125)
9	08322-01083	• Washer, Crankcase Bolt
10	11329-02F00	• Jet, Oil Gallery 3.6
11	09493-28010	• Jet, Oil Gallery
12	09280-04004	• O Ring (d:1.2,id:4.0)
13	09280-12009	• O Ring, Crankcase
14	09493-20014	Jet, Oil Gallery Mission
15	09280-04004	O Ring
16	09106-06075	Bolt
17	09280-05007	O Ring (d:1.2,id:4.0)
18	11390-06G10	Jet, Piston Cooling
19	01550-08123	Bolt
20	09168-08016	Gasket
21	09248-16012	Plug
22	09168-16002	Gasket
23	09247-14036	Plug, Oil Drain
24	09168-14002	Gasket
25	09103-10205	Bolt (l:225)
26	09103-10347	Bolt (l:275)
27	09103-12073	Bolt (l:330)
28	08319-31103	Nut
29	09159-12054	Nut
30	37820-33D10	Switch Assy, Oil Pressure
31	37822-33D00	• Bolt


DL1000K2 E02_005A

CRANKCASE

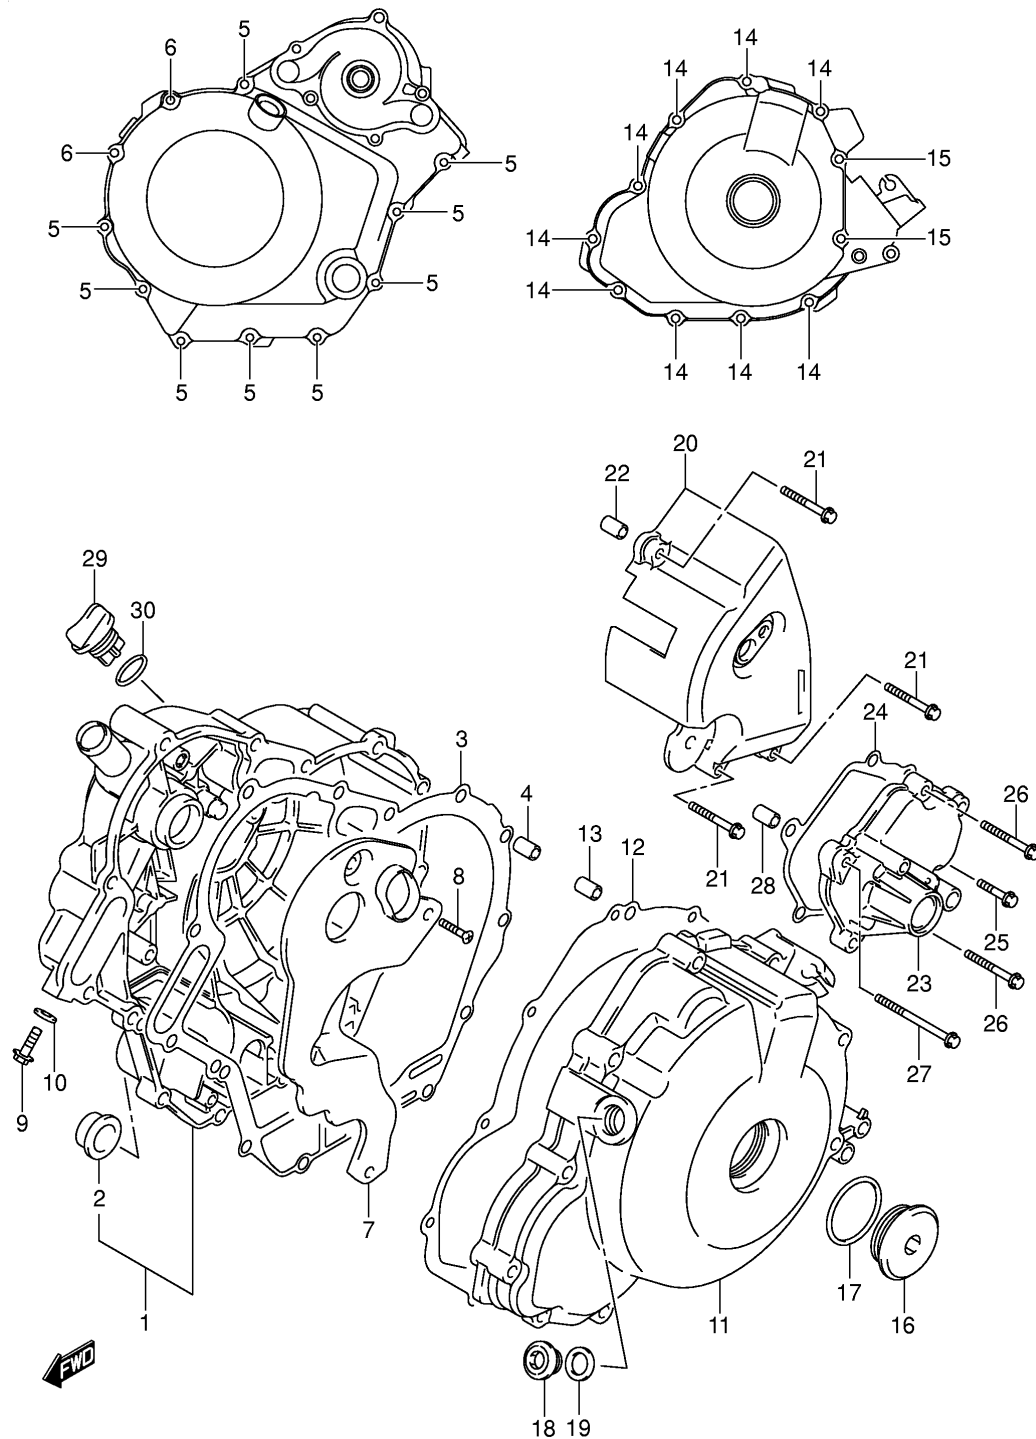


Ref No	Part No	Description
1	11340-06G20	Cover, Clutch
2	11971-33210	• Lens, Oil Level Check
3	11482-06G10	Gasket, Clutch Cover
4	04211-09149	Pin
5	09103-06213	Bolt (l:30)
6	09103-06257	Bolt (l:75)
7	11342-06G00	Separator, Oil
8	02112-06123	Screw, Oil Separator
9	01550-06103	Bolt, Clutch Cover Water Drain
10	09168-06004	Gasket, 6.2x11x1.2
11	11351-02F51	Cover, Magneto
12	11483-02F10	Gasket, Magneto Cover
13	04211-09149	Pin
14	09103-06214	Bolt (l:35)
15	09103-06225	Bolt (l:70)
16	09259-36016-20H	Plug, Crankshaft Hole
17	09280-33004	O Ring (d:3.1,id:32.7)
18	09248-14005	Plug
19	09168-14002	Gasket
20	11360-06G00	Cover, Engine Sprocket
21	09103-06214	Bolt
22	04211-09149	Pin
23	11381-06G00	Cover, Gear Shift
24	11485-02F10	Gasket
25	09103-06126	Bolt
26	01547-06253	Bolt
27	01547-06353	Bolt
28	04211-09149	Pin
29	11971-25D00	Plug, Oil Filler
30	09280-17003	O Ring


FIG.7

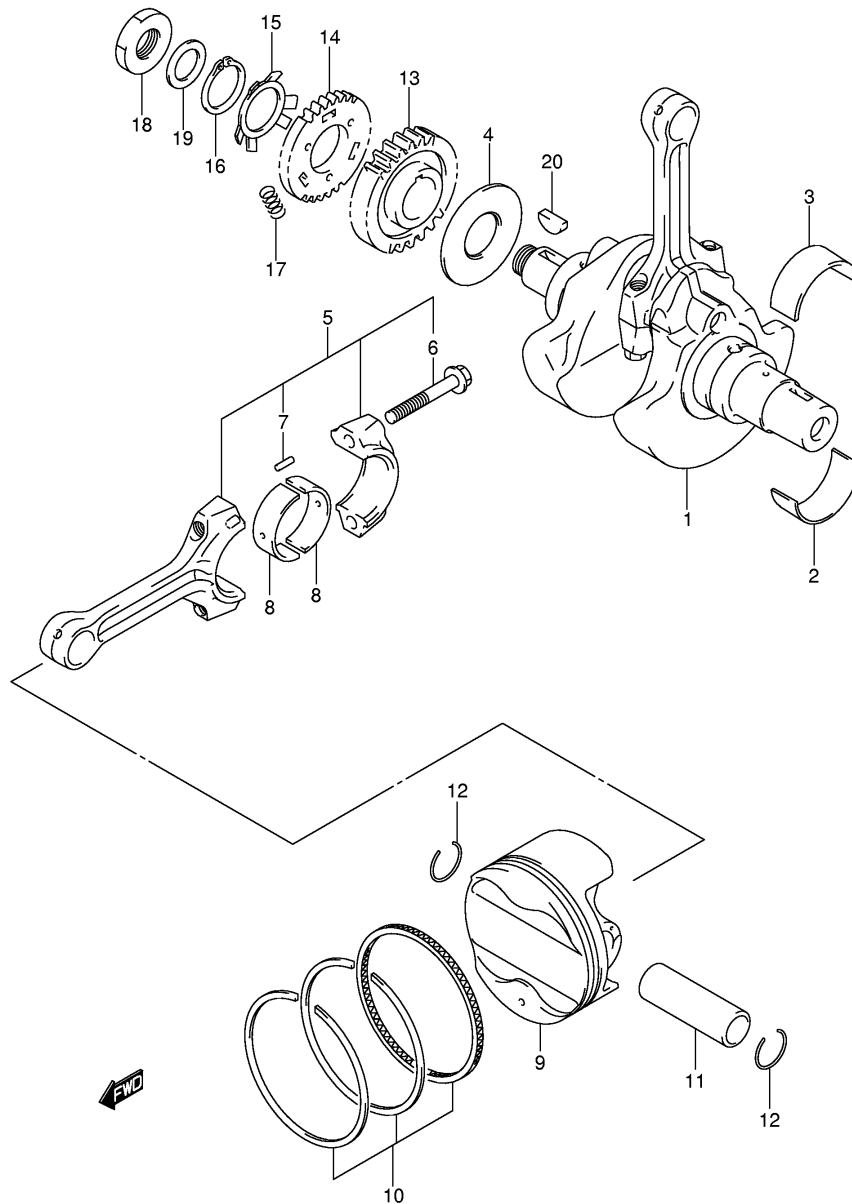


Ref No	Part No	Description
1	12220-06G00	Crankshaft
2	12229-16G00-0A0	Bearing, Lower (green)
2	12229-16G00-0B0	Bearing, Lower (black)
2	12229-16G00-0C0	Bearing, Lower (brown)
3	12229-16G00-0A0	Bearing, Upper (green)
3	12229-16G00-0B0	Bearing, Upper (black)
3	12229-16G00-0C0	Bearing, Upper (brown)
4	12652-38B00	Washer, Crank Thrust
5	12160-06G00	Connecting Rod Assy
6	12163-06G00	• . Bolt
7	12165-27A50	• . Pin
8	12164-02F11-0A0	Bearing, Crank Pin (green)
8	12164-02F11-0B0	Bearing, Crank Pin (black)
8	12164-02F11-0C0	Bearing, Crank Pin (brown)
8	12164-02F11-0D0	Bearing, Crank Pin (yellow)
9	12111-06G00-0F0	Piston
10	12140-02F42	Ring Set, Piston
11	12151-02F00	Pin, Piston
12	09381-22002	Circlip
13	21111-02F11	Gear, Primary Drive
14	21112-02F00	Gear, Primary Drive Scissors
15	21114-02F00	Washer
16	08331-31406	Circlip
17	09440-07001	Spring
18	09140-22012	Nut
19	09164-22007	Washer
20	09420-06001	Key

Ref No	Part No	Description
1	12612-06G00	Gear, Starter Idle
2	09206-12002	Pin
3	09180-12140	Spacer
4	12600-06811	Clutch Set, Starter
5	09106-08106	Bolt
6	12600-06G00	Limiter Assy, Starter Idle Gear
7	12618-31D01	Bush
8	08211-10221	Washer

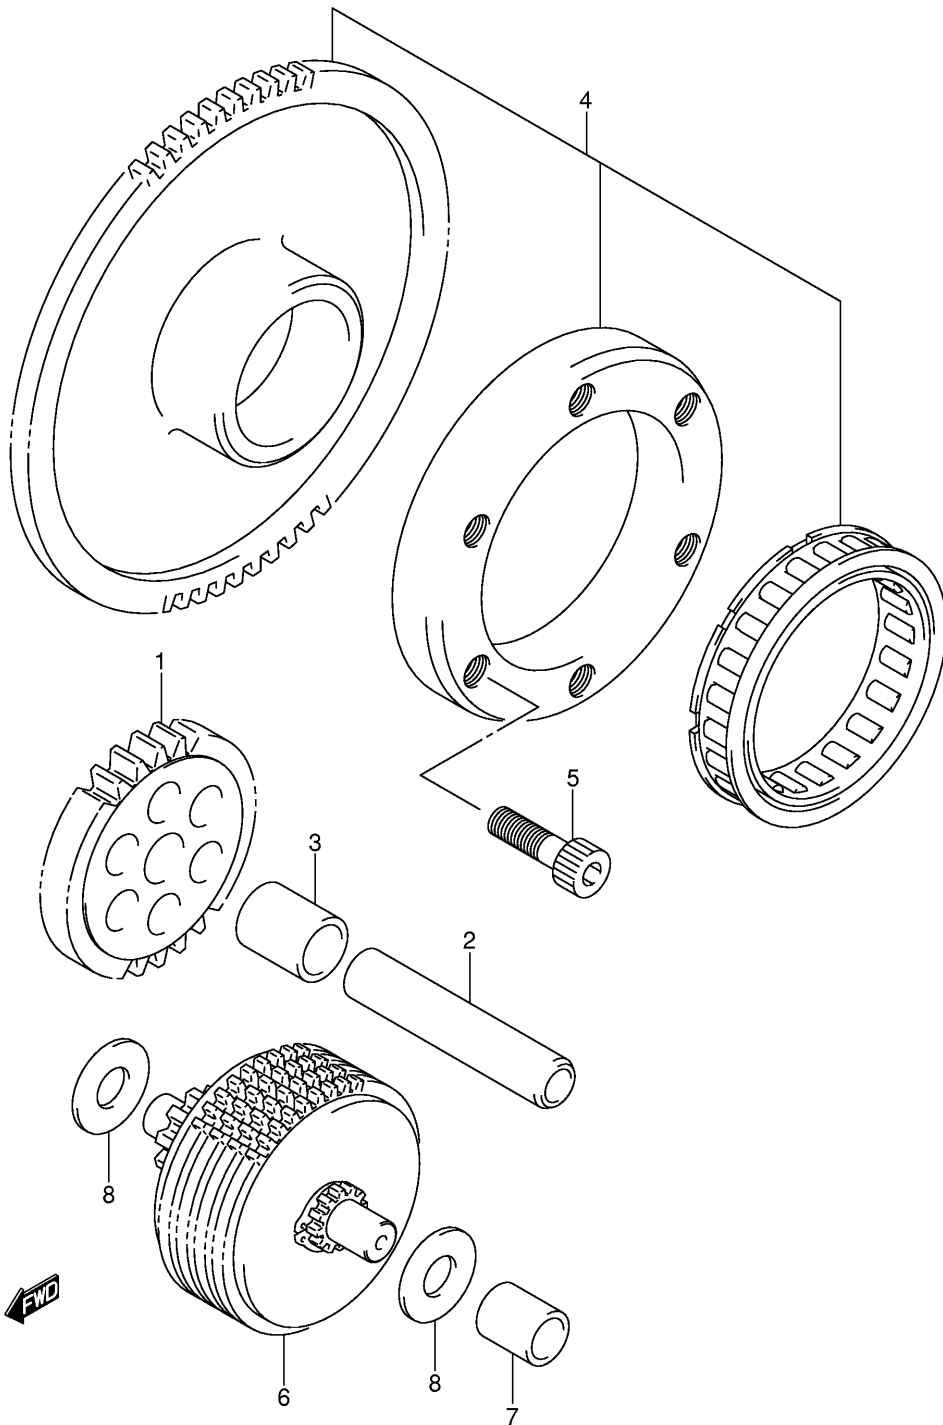


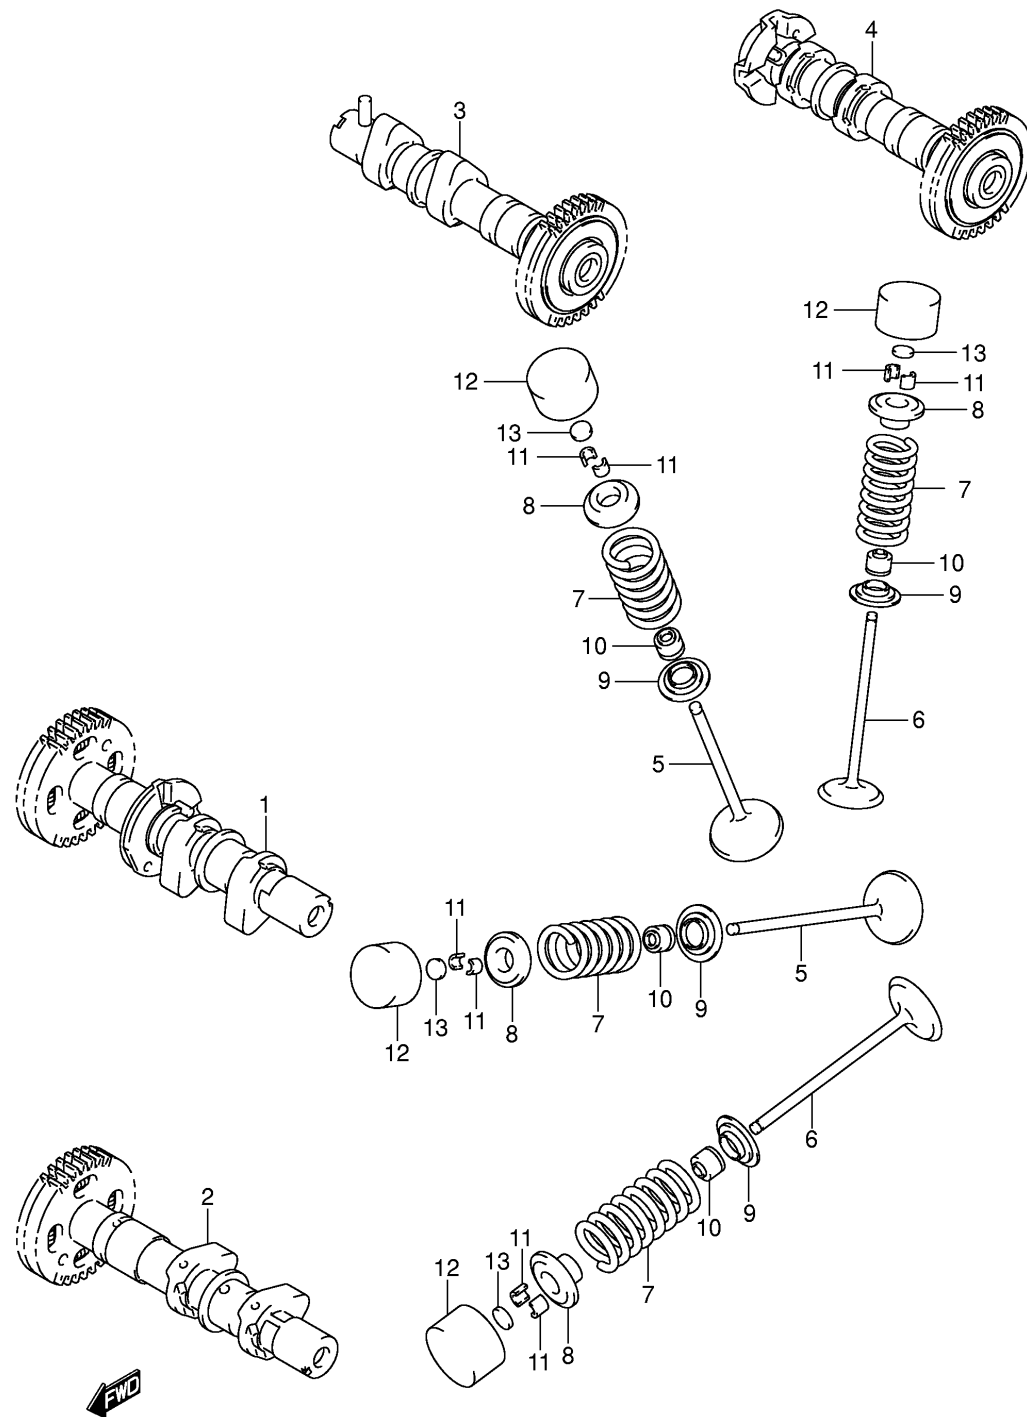


Ref No	Part No	Description
1	12701-06G00	Camshaft Assy, Intake Front
2	12702-06G00	Camshaft Assy, Exhaust Front
3	12703-06G00	Camshaft Assy, Intake Rear
4	12704-06G00	Camshaft Assy, Exhaust Rear
5	12911-16G00	Valve, Intake
6	12912-02F00	Valve, Exhaust
7	12921-06G00	Spring Valve
8	12931-06G00	Retainer, Valve Spring
9	12933-06G00	Seat, Valve Spring
10	09289-05015	Seal, Valve Stem Oil
11	12932-24400	Cotter, Valve
12	12891-02F00	Tappet
13	12892-41C00-230	Shim, Tappet (t:2.30)
13	12892-41C00-235	Shim, Tappet (t:2.35)
13	12892-41C00-240	Shim, Tappet (t:2.40)
13	12892-41C00-245	Shim, Tappet (t:2.45)
13	12892-41C00-250	Shim, Tappet (t:2.50)
13	12892-41C00-255	Shim, Tappet (t:2.55)
13	12892-41C00-260	Shim, Tappet (t:2.60)
13	12892-41C00-265	Shim, Tappet (t:2.65)
13	12892-41C00-270	Shim, Tappet (t:2.70)
13	12892-41C00-275	Shim, Tappet (t:2.75)
13	12892-41C00-280	Shim, Tappet (t:2.80)
13	12892-41C00-285	Shim, Tappet (t:2.85)
13	12892-41C00-290	Shim, Tappet (t:2.90)
13	12892-41C00-295	Shim, Tappet (t:2.95)
13	12892-41C00-300	Shim, Tappet (t:3.00)
13	12892-41C00-305	Shim, Tappet (t:3.05)
13	12892-41C00-310	Shim, Tappet (t:3.10)
13	12892-41C00-315	Shim, Tappet (t:3.15)
13	12892-41C00-320	Shim, Tappet (t:3.20)
13	12892-41C00-325	Shim, Tappet (t:3.25)
13	12892-41C00-330	Shim, Tappet (t:3.30)
13	12892-41C00-335	Shim, Tappet (t:3.35)
13	12892-41C00-340	Shim, Tappet (t:3.40)
13	12892-41C00-345	Shim, Tappet (t:3.45)
13	12892-41C00-350	Shim, Tappet (t:3.50)
14	12800-41810	Shim Set, Tappet Inc.ref.no.13-1~13-25 (5pcs.each) & No.15
15	99000-69471	. Case, Tappet Shim

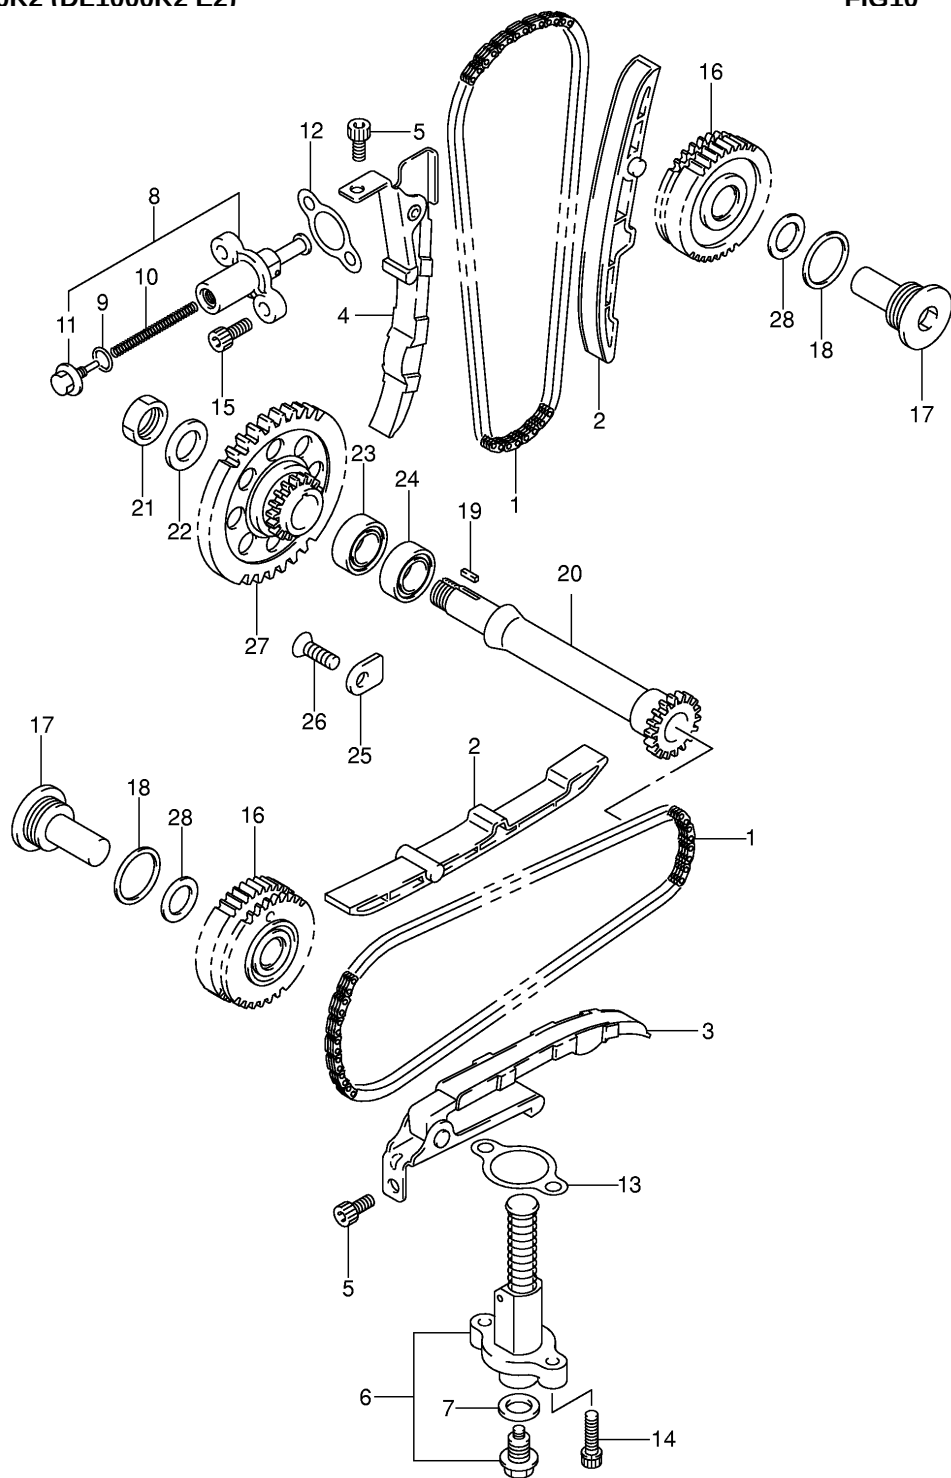

Ref No	Part No	Description
1	12760-23F00	Chain, Cam Shaft Drive
2	12771-06G00	Guide, Cam Chain
3	12810-06G00	Tensioner, Front Cam Chain
4	12815-06G00	Tensioner, Rear Cam Chain
5	07120-06123	Bolt
6	12832-05A10	Adjuster Assy, Front Tensioner
7	09168-12018	• . Gasket
8	12830-30A01	Adjuster Assy, Rear Tensioner
9	12832-02A00	• . O Ring
10	12833-30A01	• . Spring
11	12834-02A00	• . Plug
12	12837-19B10	Gasket
13	12837-24A10	Gasket
14	07130-06253	Bolt
15	07130-06203	Bolt
16	12750-06G00	Gear, Cam Chain Idler No.2
17	12755-02F01	Shaft, Idler No.2
18	09168-26001	Gasket
19	09421-04004	Key
20	12716-06G00	Shaft, Idler
21	09140-16001	Nut
22	09181-16212	Washer
23	08112-63030	Bearing, Rh
24	09262-25006	Bearing, Lh
25	24741-20A00	Retainer, Bearing
26	09126-06011	Screw
27	12731-06G01	Sprocket, Idler No.1
28	09181-15164	Shim, Cam Chain Idler, T:0.9
28	09181-15166	Shim, Cam Chain Idler, T:1.0
28	09181-15172	Shim, Cam Chain Idler, T:1.1
28	09181-15176	Shim, Cam Chain Idler, T:1.2
28	09181-15181	Shim, Cam Chain Idler, T:1.3
28	09181-15182	Shim, Cam Chain Idler, T:1.4

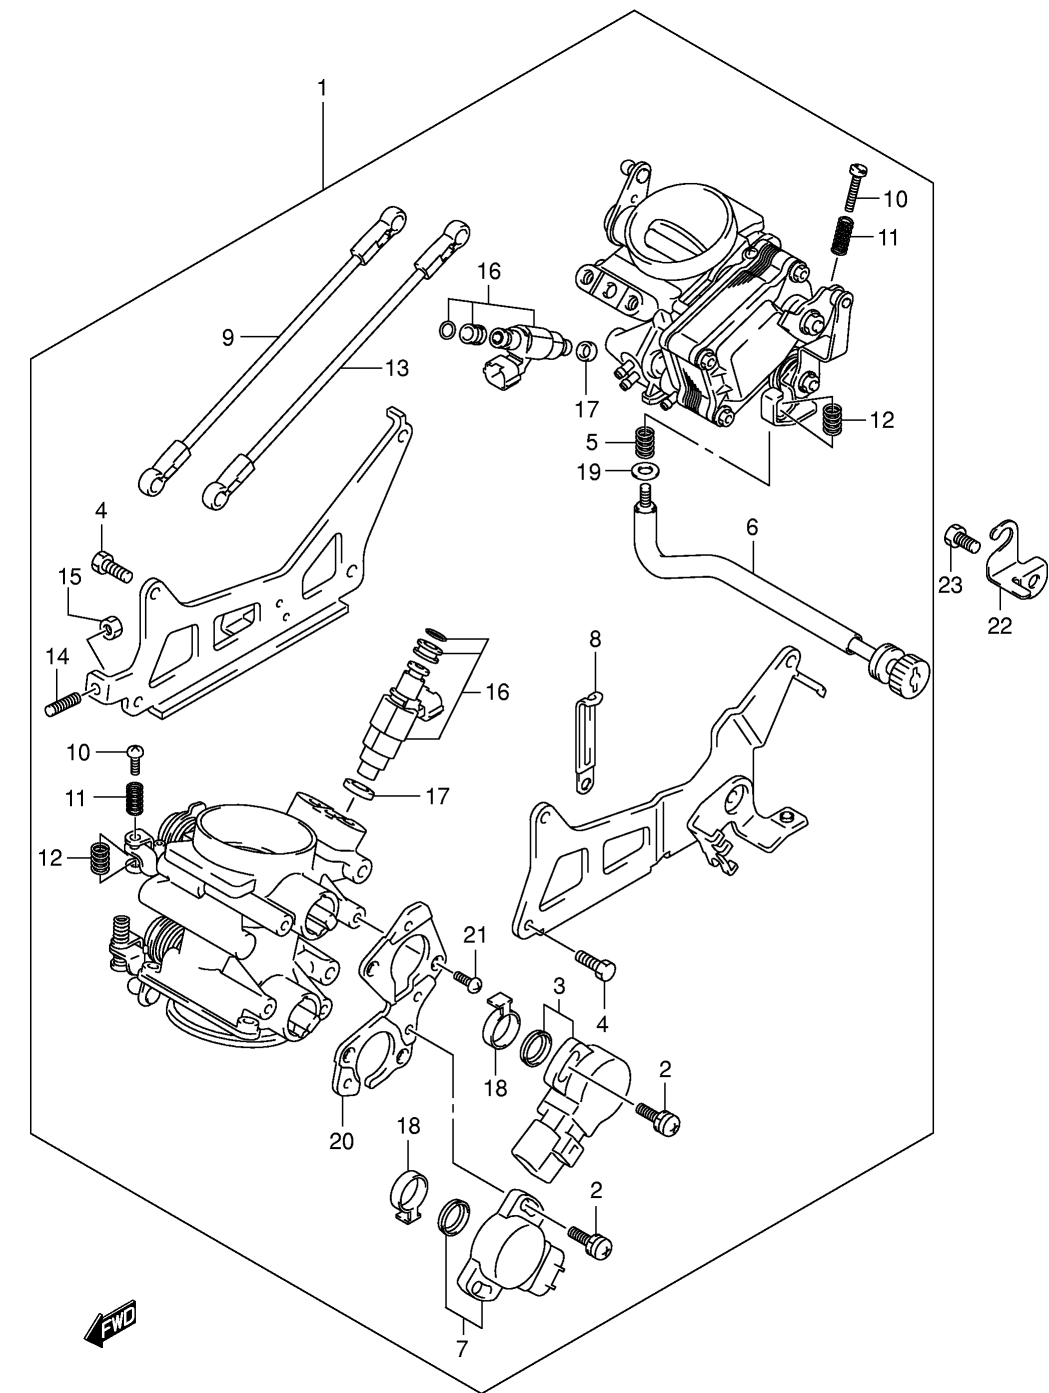


Ref No	Part No	Description
1	13405-06G30	Injection Assy
1	13405-06G50	Injection Assy
2	13605-02F00	• Screw
3	13580-06G00	• Sensor Assy
4	13612-02F00	• Bolt
5	13271-93011	• Spring
6	13270-06G00	• Adjust Screw Assy
7	13580-02F00	• Sensor Assy
8	09404-06429	• Clamp
9	13552-06G10	• Rod Assy
10	13548-42F00	• Screw
11	13271-44B00	• Spring
12	13268-89J00	• Spring
13	13552-06G00	• Rod Assy
14	13605-06G00	• Adjust Screw
15	13607-47070	• Nut
16	15710-06G00	• Injector Assy
17	13672-33E00	• Cushion
18	13311-06G00	• Ring
19	13386-09410	• Washer
20	13627-06G00	• Plate
21	02112-04107	• Screw
22	13279-06G00	Plate, Idle Adjust
23	01500-06123	Bolt, Idle Adjust Plate

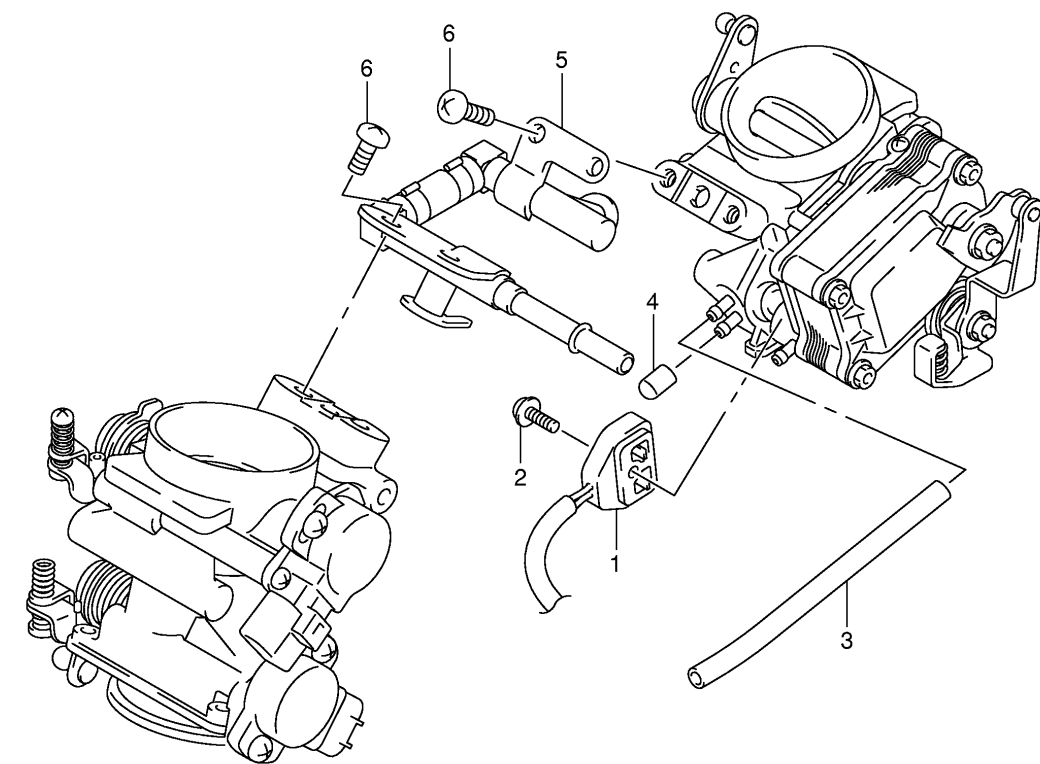


Ref No	Part No	Description
1	13477-39F00	Harness Assy
2	02112-34163	Screw
3	13683-10F60	Hose
4	13274-84000	Cap
4	13274-84000	Cap
5	15730-06G00	Delivery Pipe Assy
6	13602-06128	Screw



FIG.13

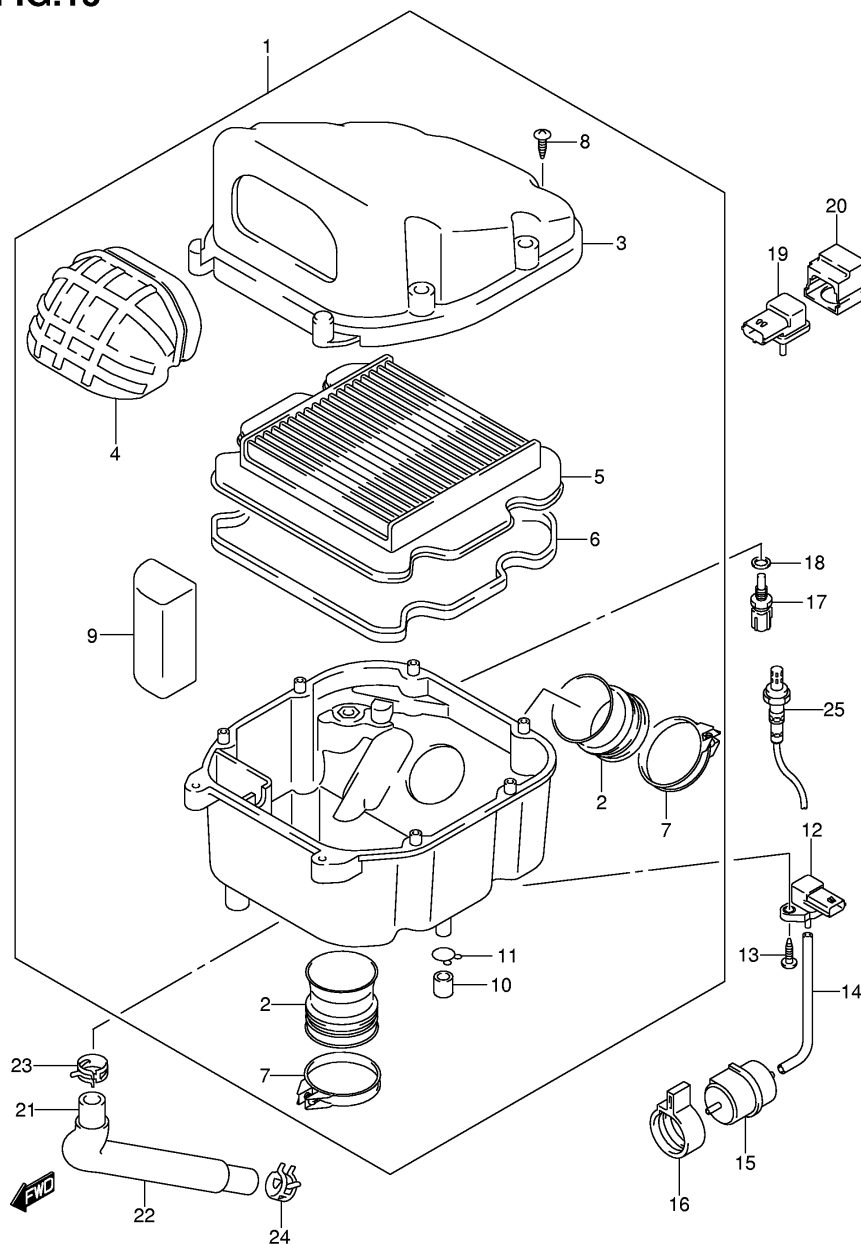



Ref No	Part No	Description
1	13700-06G00	Cleaner Assy, Air
2	13881-06G00	. Tube, Outlet
3	13741-06G00	. Cap, Air Cleaner
4	13891-06G00	. Tube, Inlet
5	13780-06G00	. Filter, Air Cleaner
6	13746-06G00	. Gasket, Air Cleaner
7	13170-06G00	. Clamp, Outlet Tube Front
8	03142-05163	. Screw
9	13788-06G00	. Filter, Breather
10	13859-41B10	. Plug
11	09401-14301	. Clip
12	18590-80C40	Sensor Boost
13	03541-05163	Screw
14	13697-17F00	Hose, Boost Sensor
15	13715-06G00	Chamber, Vacuum
16	13912-02FA0	Band, Vacuum Chamber
17	13650-57F00	Sensor, Air Temp
18	09168-12017	Gasket, Temp Sensor
19	18591-42F00	Sensor, Pressure
20	18595-42F00	Holder, Sensor
21	13851-06G00	Tube, Breather
22	13858-06G00	Protector, Breather Tube
23	09401-22405	Clip
24	09402-28511	Clamp
25	18213-06G00	Sensor, Oxygen

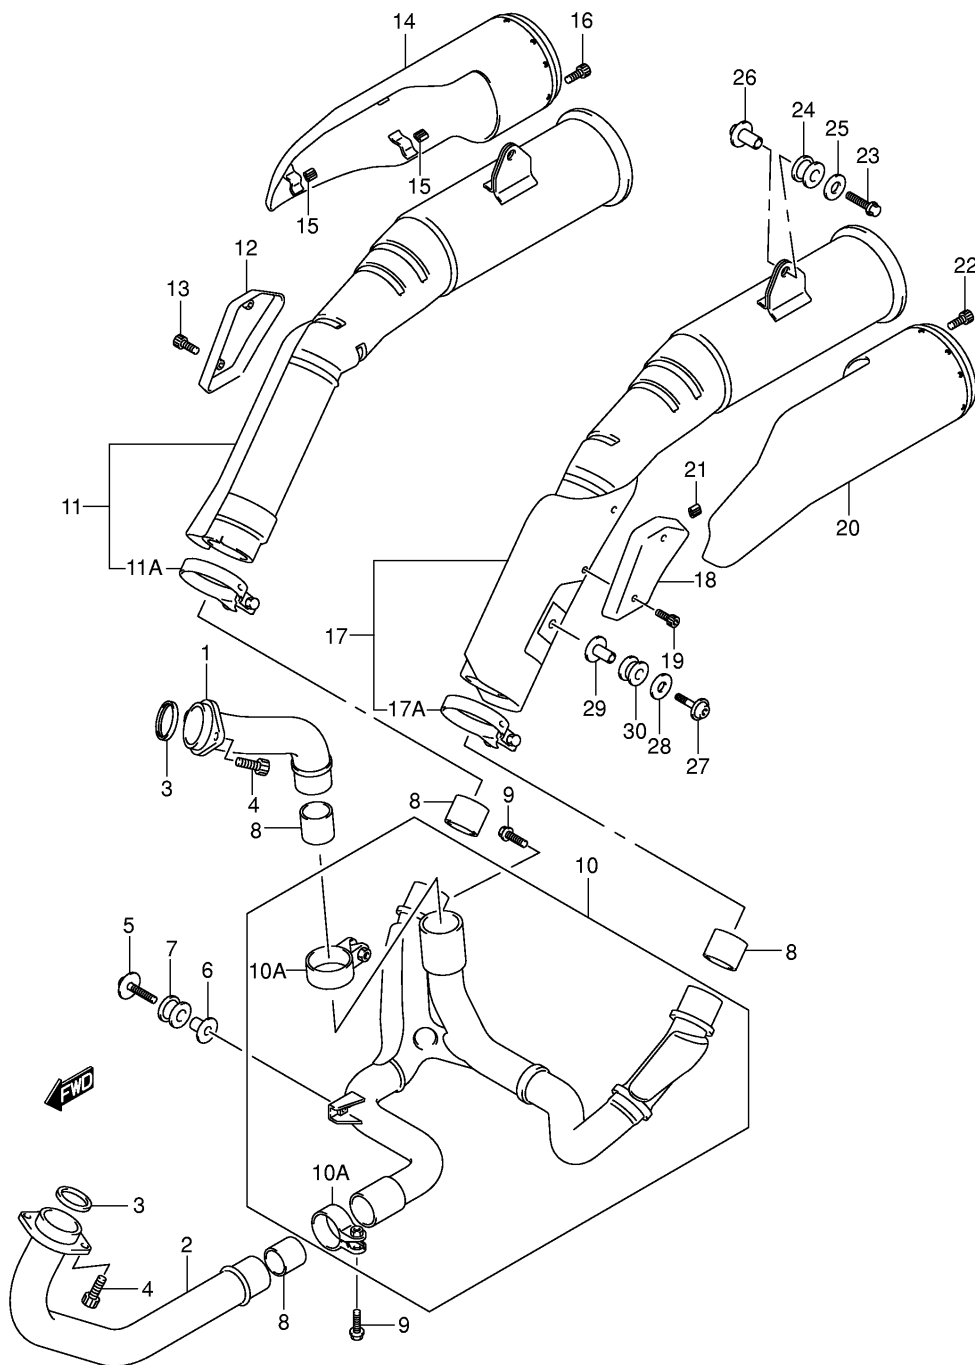

Ref No	Part No	Description
1	14150-06G00	Pipe, Exhaust Rh
2	14160-06G00	Pipe, Exhaust Lh
3	14181-31D00	Gasket, Exhaust Pipe
4	09106-08165	Bolt, Exhaust Pipe
5	09118-08152	Bolt, Exhaust Support
6	09180-08152	Spacer, Exhaust Support
7	09320-12048	Cushion, Exhaust Support
8	14771-02F00	Connector, Exhaust
9	09103-08392	Bolt, Connector
10	14205-06G00	Pipe, Exhaust Center
10	14205-06G10	Pipe, Exhaust Center
11	14305-06G02	Muffler, Rh
11	14305-06G11-H01	Muffler, Rh
12	14186-06G00	Protector, Muffler Cover Rh
13	07130-05123	Screw, Protector Muffler
14	14780-06G01	Cover, Muffler Rh
15	14795-06G00	Grommet, Muffler Cover
16	09106-06076	Screw, Muffler Cover
17	14306-06G02	Muffler, Lh
17	14306-06G11-H01	Muffler, Lh
18	14196-06G00	Protector, Muffler Cover Lh
19	07130-05123	Screw, Protector Muffler
20	14790-06G01	Cover, Muffler Lh
21	14795-06G00	Grommet, Muffler Cover
22	09106-06076	Screw, Muffler Cover
23	09103-08358	Bolt, Muffler Support
24	09320-12049	Cushion, Muffler Support
25	09160-08146	Washer, Muffler Support
26	14414-06G00	Nut, Muffler Support
27	09106-08147	Bolt, Muffler Support Front
28	09160-08134	Washer, Muffler Support Front
29	09180-08151	Spacer, Muffler Support Front
30	09320-12043	Cushion, Muffler Support Front

Ref No	Part No	Description
1	16400-02FB0	Pump Assy, Engine Oil
2	02112-06253	Screw
3	16331-02F00	Gear, Oil Pump Driven
4	09181-10158	Washer
5	09261-04009	Pin
6	08331-31106	Circlip
7	16440-24F00	Valve Assy, Oil Relief
8	09280-13004	• O Ring
9	16510-03G00-X07	Filter Assy, Engine Oil
10	16520-32E00	Strainer, Engine Oil
11	16321-02F00	Gear, Oil Pump Drive
12	09261-06002	Pin
13	08331-31506	Circlip

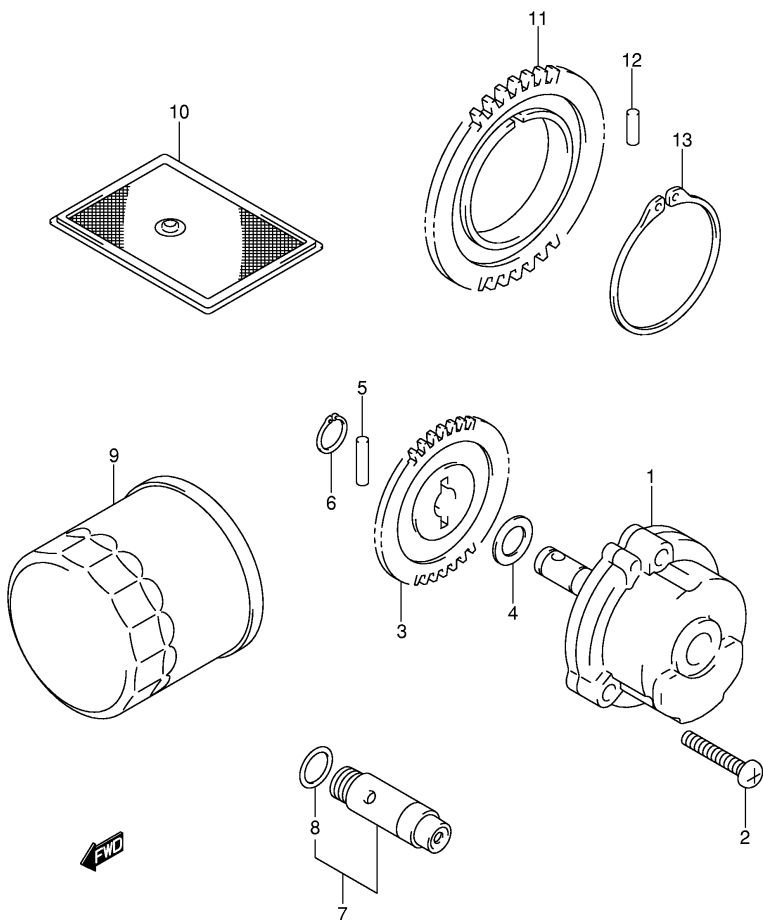

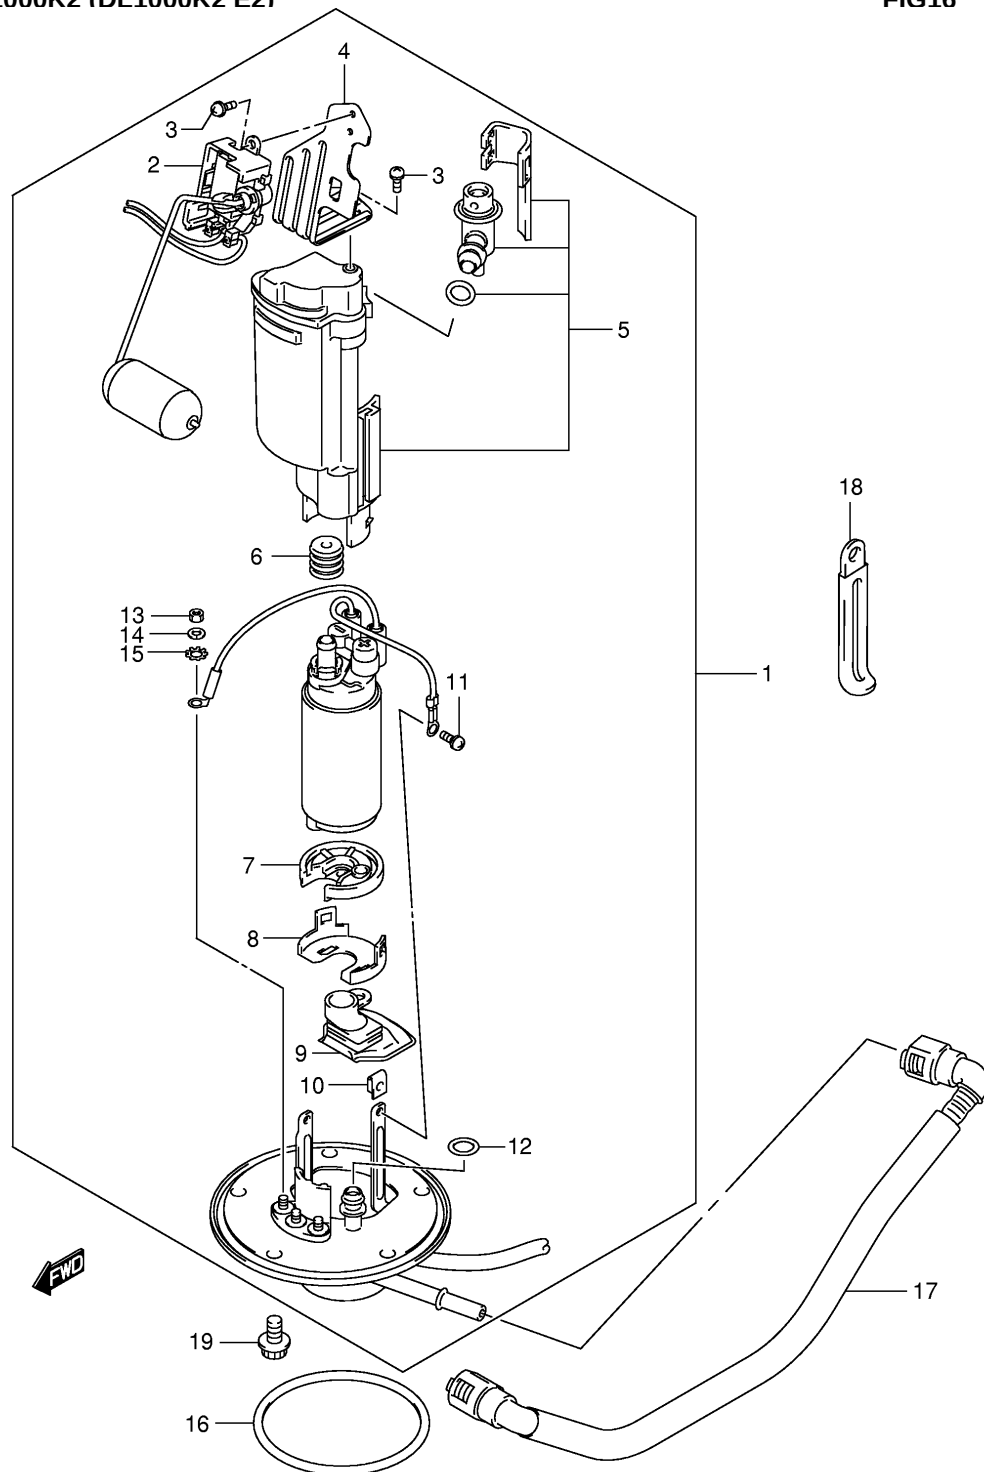


Ref No	Part No	Description
1	15100-06G00	Pump Assy, Fuel
2	34810-06G00	• . Gauge Assy, Fuel Lever
3	15116-35F10	• . Screw
4	15181-06G00	• . Bracket, Fuel Gauge
5	15410-24FB0	• . Fuel Filter
6	15114-35F00	• . Bush
7	15111-35F00	• . Cushion, Fuel Pump
8	15112-42F00	• . Holder, Fuel Pump
9	15420-24FB0	• . Strainer, Fuel
10	15115-35F00	• . Nut
11	15116-35F10	• . Screw
12	15113-35F00	• . O Ring
13	15173-35F00	• . Nut
14	15172-35F00	• . Spring Washer
15	15171-35F00	• . Washer
16	15201-35F00	O Ring
17	15810-06G00	Fuel Hose
18	09404-06432	Clamp, Fuel Pump Harness
19	07120-06123	Bolt, Fuel Pump


DL1000K2 (DL1000K2 E2)

FIG16A

FUEL PUMP (MODEL K4/K5/K6)

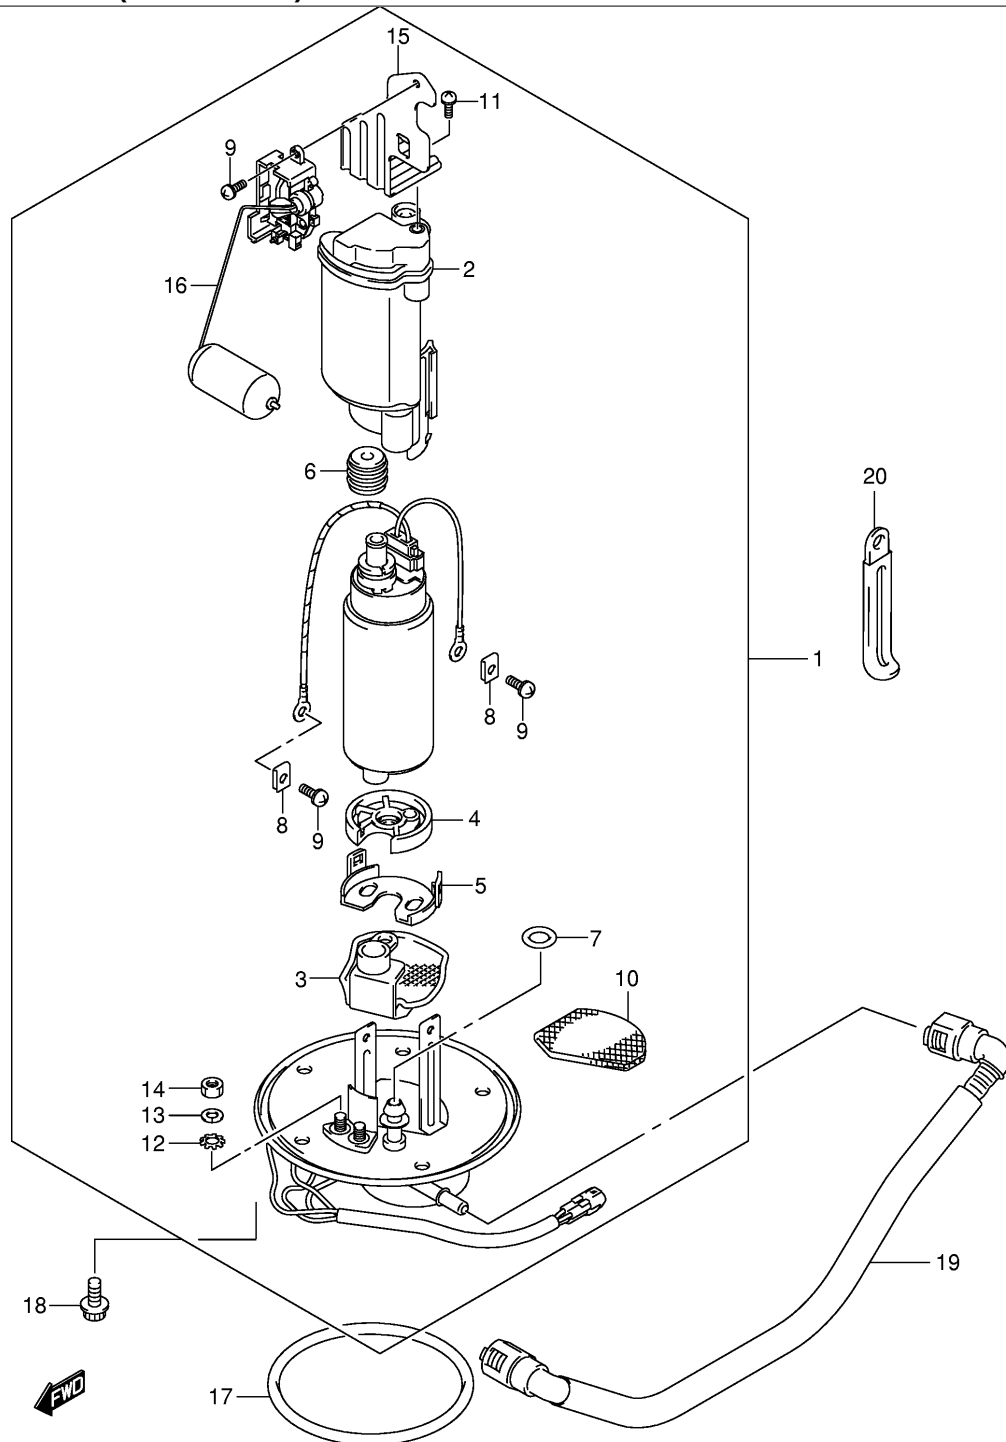


Ref No	Part No	Description
1	15100-06G10	Pump Assy, Fuel
2	15410-24FB0	• . Filter Assy, Fuel
3	15420-35F01	• . Strainer, Fuel Pump
4	15111-35F00	• . Cushion, Fuel Pump
5	15112-42F00	• . Holder, Fuel Pump
6	15114-35F00	• . Bush, Fuel Pump
7	15113-35F00	• . O Ring
8	15115-35F00	• . Nut
9	15116-06G10	• . Screw
10	15117-06G10	• . Sheet
11	15116-35F10	• . Screw
12	15171-35F00	• . Washer
13	15172-35F00	• . Spring Washer
14	15173-35F00	• . Nut
15	15181-06G00	• . Bracket, Fuel Gauge
16	34810-06G10	• . Gauge Assy
17	15201-35F00	O Ring, Fuel Pump
18	07120-06123	Bolt
19	15810-06G00	Hose, Fuel
20	09404-06429	Clamp

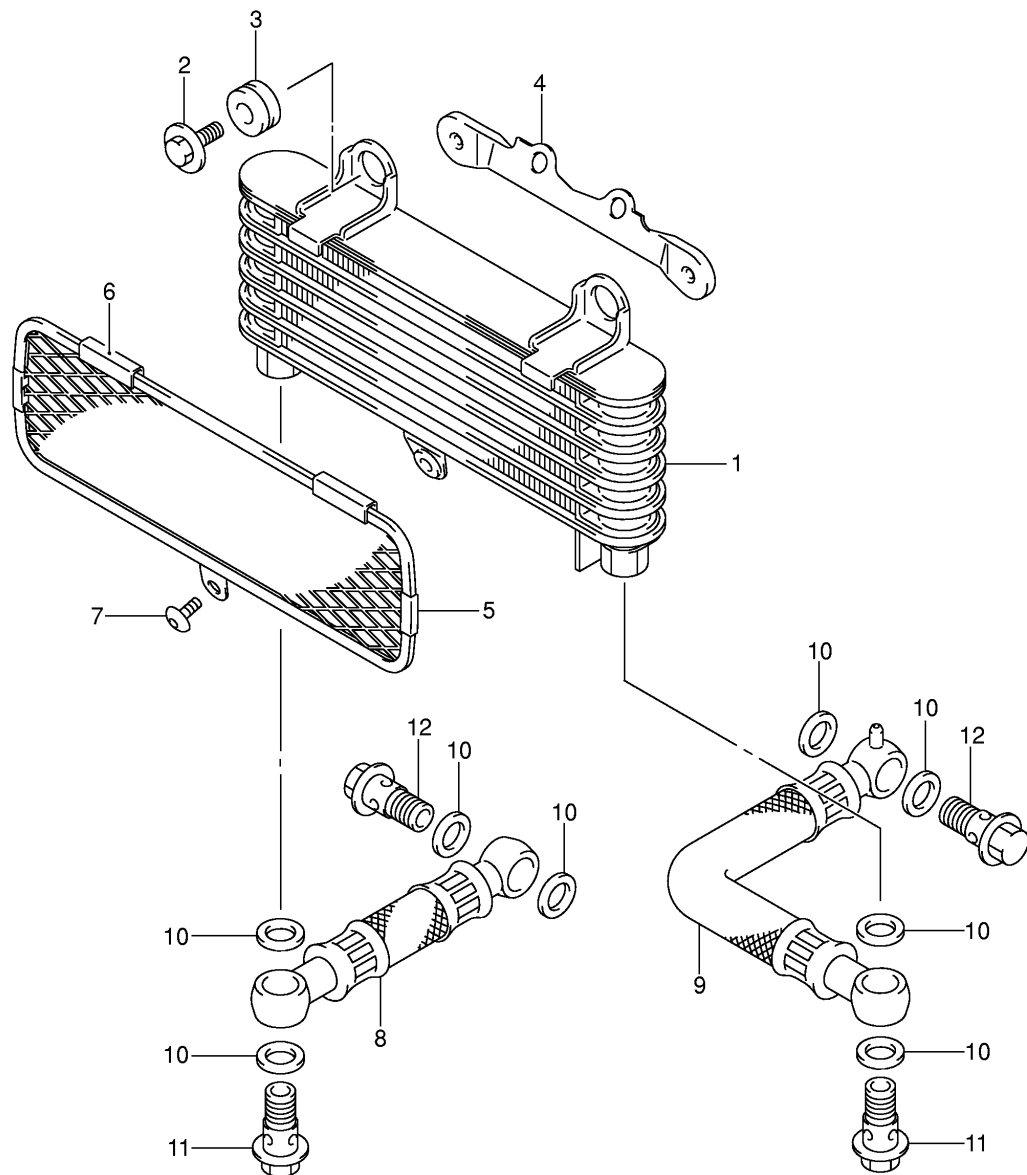


Ref No	Part No	Description
1	16600-16G00	Cooler Assy, Oil
2	09116-06167	Bolt
3	09320-09009	Cushion
4	16620-02F00	Bracket, Oil Cooler
5	16650-16G00	Guard, Oil Cooler
6	17765-09F00	• . Protector, Center
7	02142-05103	Bolt
8	16460-16G00	Hose, Oil Cooler Rh
9	16470-16G00	Hose, Oil Cooler Lh
10	09168-14015	Gasket
11	09360-12012	Bolt, Union
12	09360-14012	Bolt




Ref No	Part No	Description
1	17410-02F41	Case, Water Pump
2	17491-16G00	Impeller
3	17470-02F10	Seal, Mechanical
4	09283-10005	Oil Seal
5	17435-02F00	O Ring
6	09262-10016	Bearing, Water Pump
7	08332-11086	E Ring
8	09103-06213	Screw
9	09103-06239	Bolt
10	04211-09149	Pin
11	09352-42703-600	Hose
12	09404-06431	Clamp

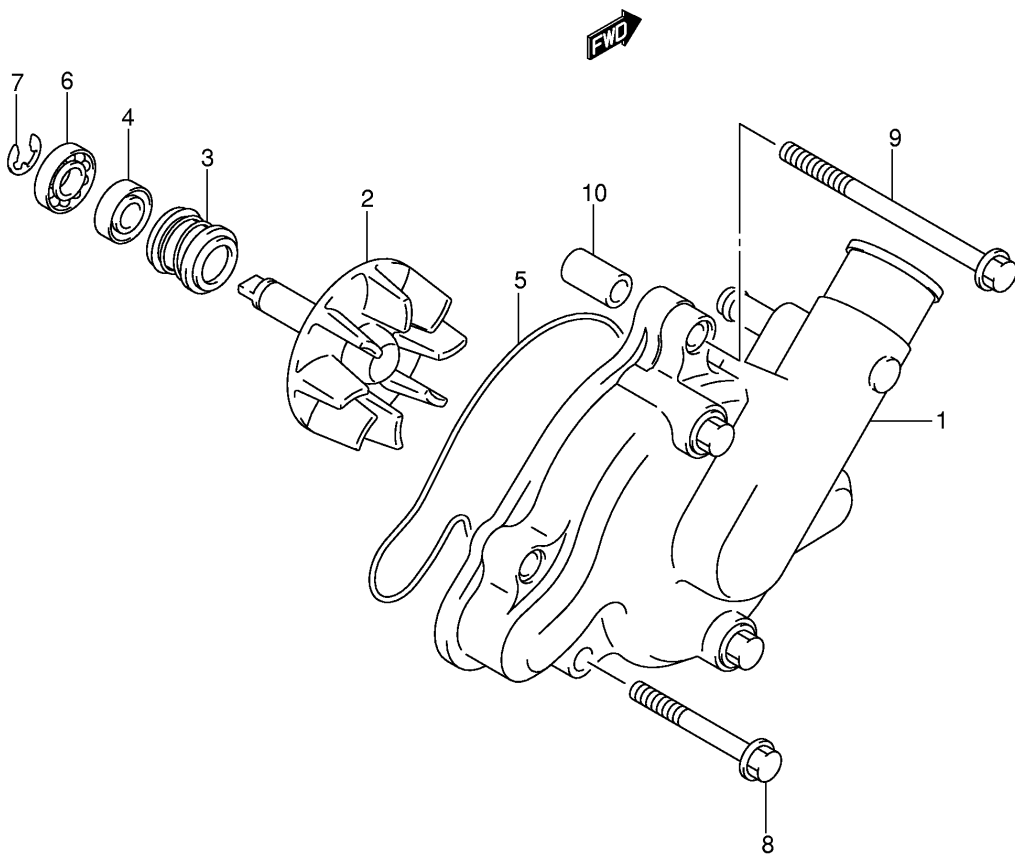


Ref No	Part No	Description
1	17710-06G00	Radiator Assy, Water
2	17800-06G00	Fan Assy
3	09320-10051	Cushion
4	09180-06290	Spacer
5	09118-06097	Bolt (6x20)
6	17760-06G00	Shield, Radiator Heat
7	17711-40F00	Bolt
8	17712-40F00	Nut

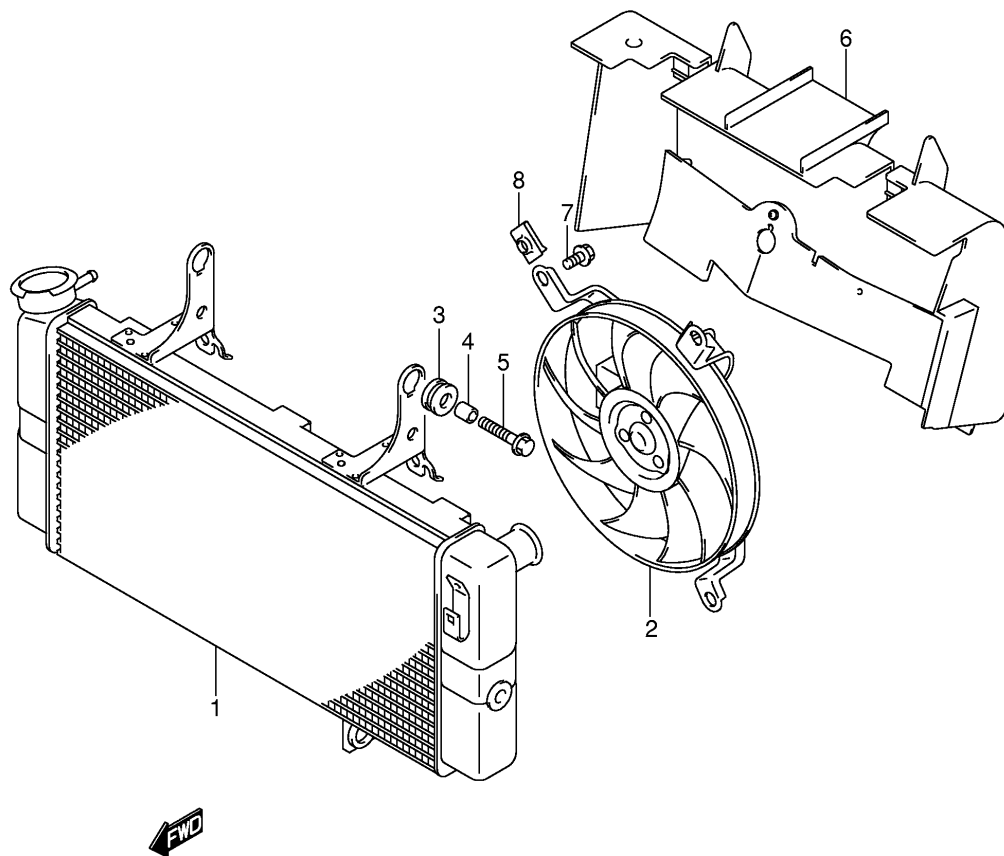

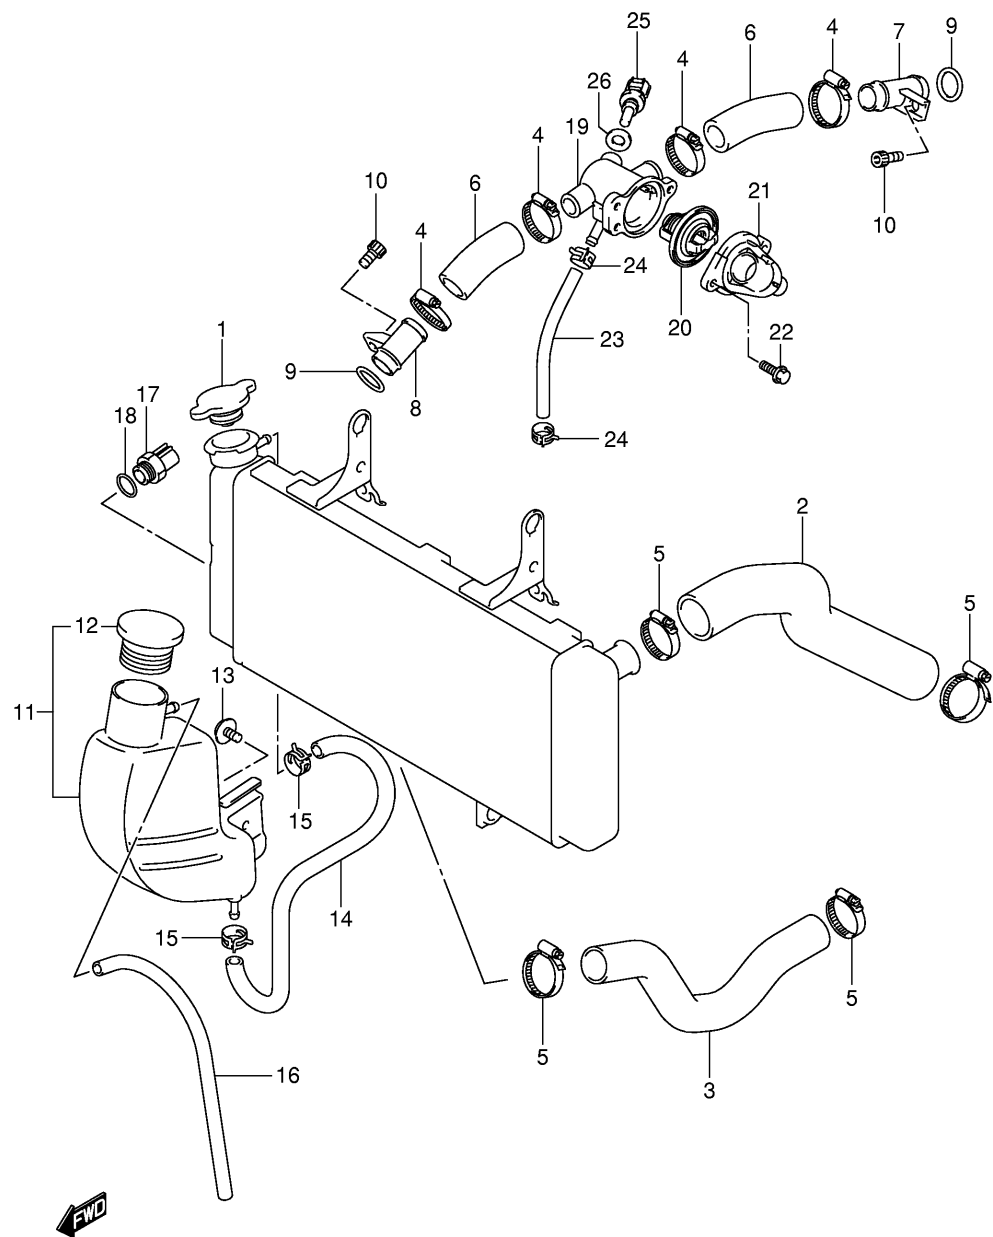


Ref No	Part No	Description
1	17730-12C20	Cap, Radiator
2	17851-06G00	Hose, Radiator Inlet
3	17852-06G00	Hose, Radiator Outlet
4	09402-28511	Clamp
5	09402-38511	Clamp
6	17853-02F00	Hose, Connector Inlet
7	17890-06G20	Union, Connector Hose
8	17890-06G20	Union, Connector Hose
9	09280-18009	O Ring
10	07130-06123	Bolt
11	17910-06G10	Tank Assy, Reservoir
12	17931-06G00	• . Cap
13	09111-06085	Bolt
14	17981-19F00	Hose, Reservoir Tank Inlet
15	09401-08411	Clip
16	09352-50901-00B	Hose, Reservoir Tank
17	17680-33E00	Switch, Radiator Fan
18	17689-50F00	• . O Ring
19	17662-02F11	Connector, Thermostat Inlet
20	17670-06G50	Thermostat
21	17663-42E00	Cap, Thermostat Connector
22	01550-06163	Bolt, Connector
23	17856-16G10	Hose, Water Bypass
24	09401-12409	Clip
25	13650-57F00	Sensor, Water Temp
26	09168-12017	Gasket, Temp Sensor

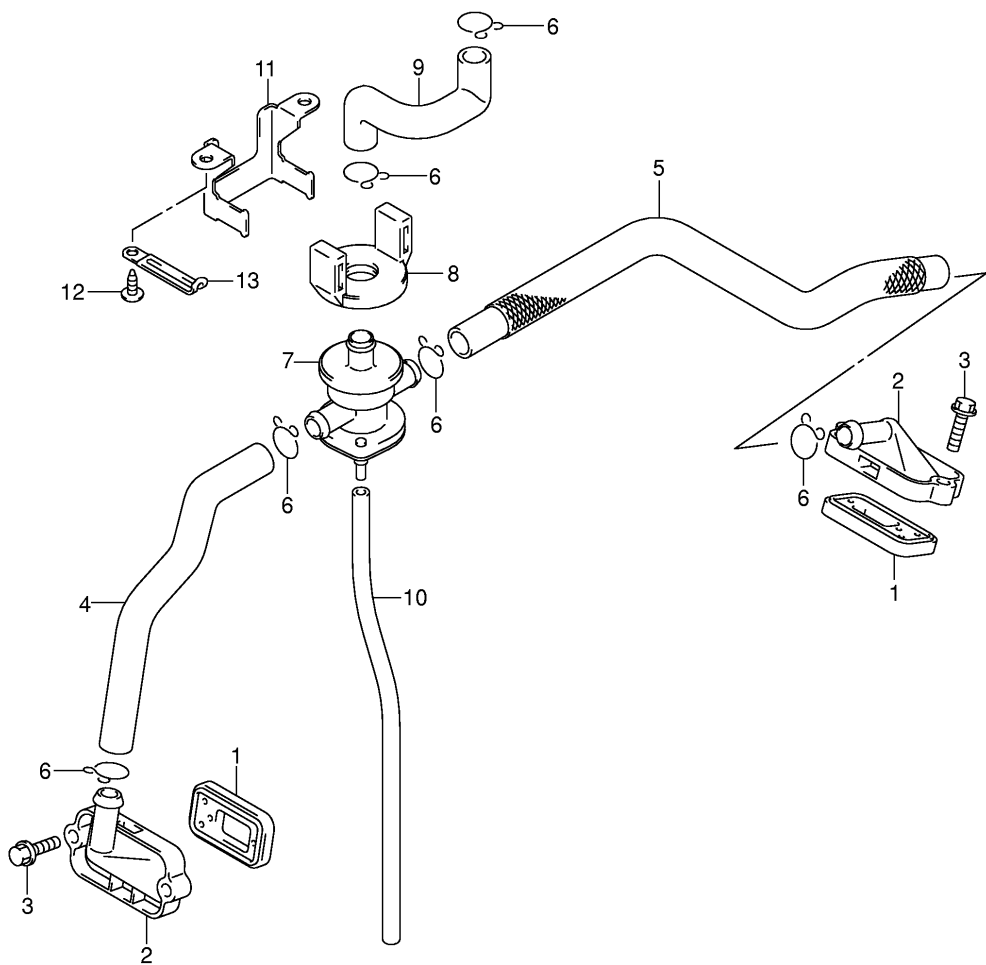


Ref No	Part No	Description
1	18450-06G00	Valve Assy, 2nd Air Reed
2	18531-06G01	Cover, 2nd Air Reed Valve
3	09103-06201	Bolt
4	18461-06G00	Hose, 2nd Air Valve Front
5	18471-06G00	Hose, 2nd Air Valve Rear
6	09401-15101	Clip
7	18510-06G00	Valve Assy, Air Cut
7	18510-35F00	Valve Assy, Air Cut
8	18517-06G10	Cushion, 2nd Air Cleaner
9	18711-06G00	Hose, 2nd Air Cleaner
9	18711-06G10	Hose, 2nd Air Cleaner
10	13697-02A00	Hose, 2nd Air Valve Vacuum
11	18610-06G00	Bracket, 2nd Air Valve
12	03542-06123	Screw
13	09404-06429	Clamp




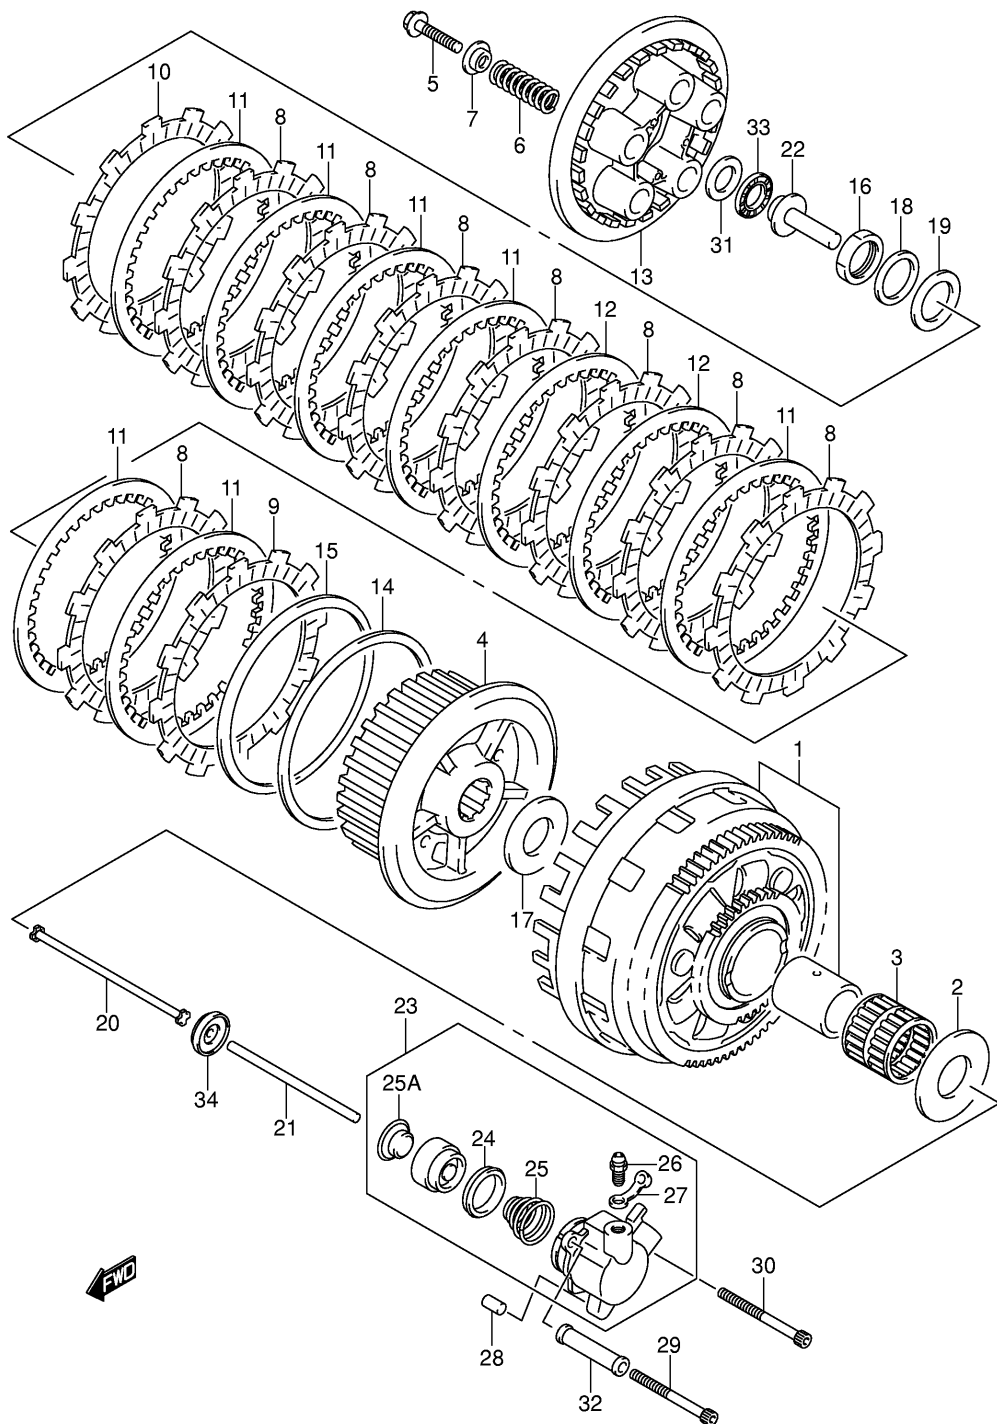


Ref No	Part No	Description
1	21200-06811	Gear Assy, Primary Driven
2	09160-25074	Washer (25x52x2.5)
3	09263-35013	Bearing (35x40x39.8)
4	21410-06G00	Hub, Clutch Sleeve
5	21412-06G00	Bolt, Spring Support
6	21413-06G10	Spring, Clutch
7	21414-29F00	Washer
8	21441-24F20	Plate, Clutch Drive No.1
9	21442-24F00	Plate, Clutch Drive No.2
10	21441-24F10	Plate, Clutch Drive No.3
11	21451-24F00	Plate, Clutch Driven
12	21451-24F10	Plate, Clutch Driven
13	21462-06G00	Disk, Clutch Pressure
14	21471-06G00	Seat, Wave Washer
15	21472-06G00	Washer, Clutch Plate Wave
16	09159-24010	Nut, Clutch Sleeve Hub
17	09160-25056	Washer, Clutch Sleeve
18	09164-24006	Washer, Clutch Sleeve
19	09181-25223	Washer, Sleeve Hub Nut
20	23110-27A00	Rod, Clutch Push Rh
21	23111-26D00	Rod, Clutch Push Lh
22	23121-31E00	Piece, Clutch Push
23	23160-06G01	Cylinder, Clutch Release
24	23163-06B00	• . Cup
25	23164-05A00	• . Spring
25a	23166-02F20	• . Cover, Dust
26	59121-01A00	• . Bleeder
27	59122-01A00	• . Cap, Bleeder
28	04221-08149	Pin, Clutch Release Cylinder
29	07130-06653	Bolt, Clutch Release Cylinder
30	07130-06703	Bolt, Clutch Release Cylinder
31	09160-15045	Washer, Clutch Push
32	23171-06G00	Spacer, Clutch Release
33	09263-15003	Bearing, Clutch Push
34	09283-06008	Seal, Clutch Push (6x34x10.5)

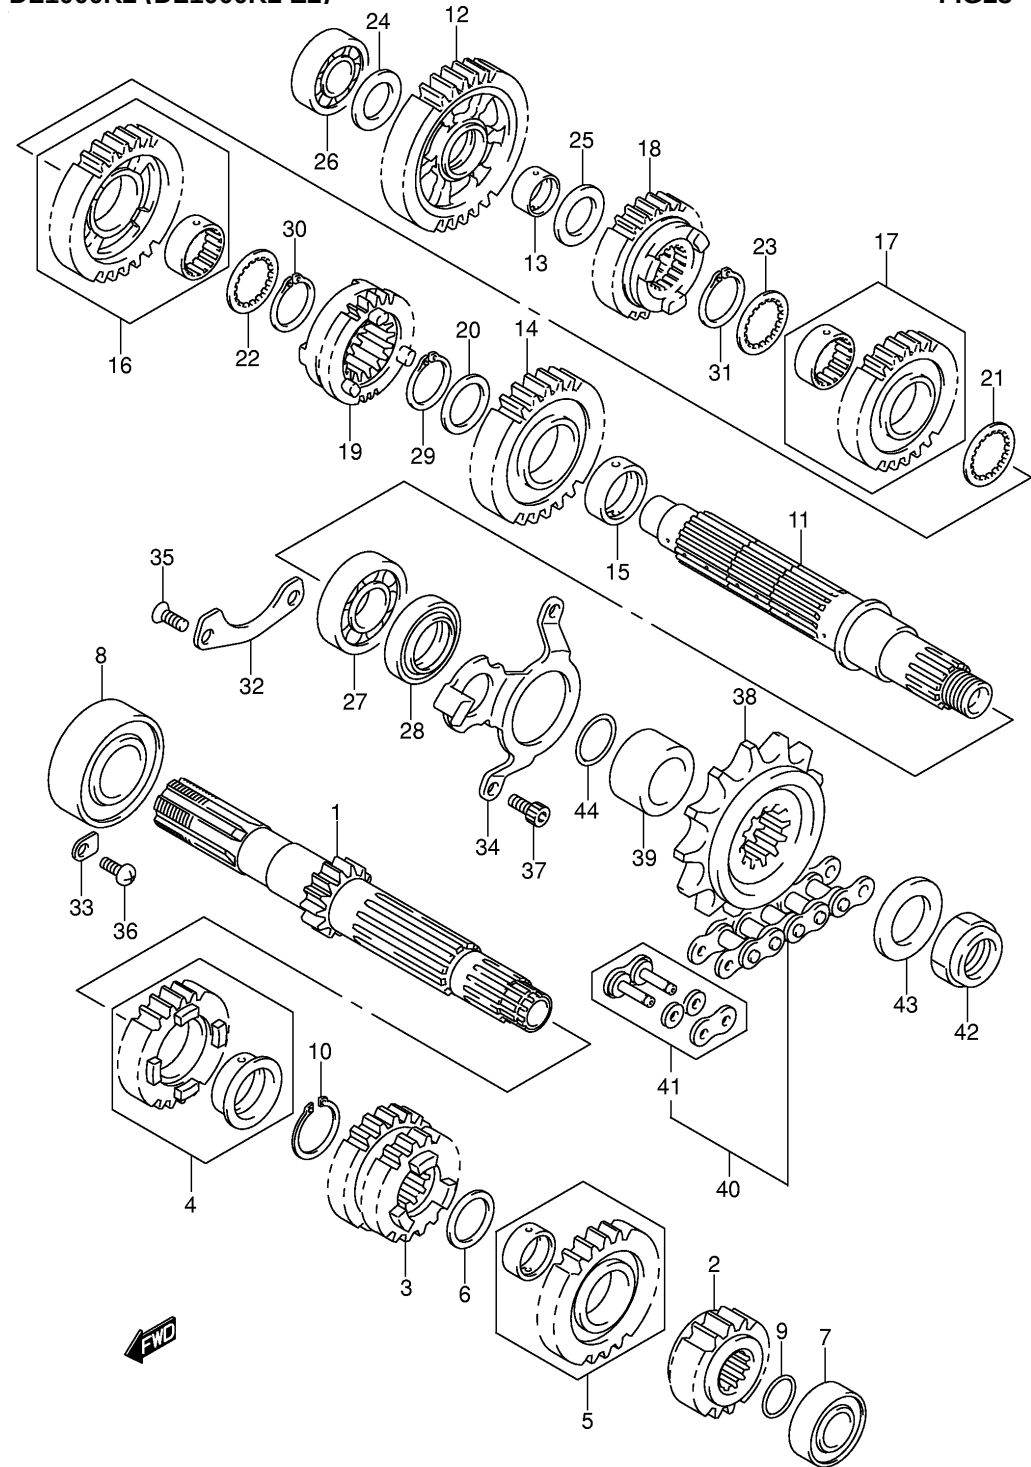


Ref No	Part No	Description
1	24120-06G00	Shaft, Counter (nt:12)
2	24221-02F01	Gear, 2nd Drive (nt:15)
3	24231-02F13	Gear, 3rd & 4th Drive
4	24251-02811	Gear Set, 5th Drive (nt:23)
5	24261-02820	Gear Set, 6th Drive (nt:23)
6	09181-22167	Washer, 6th Drive
7	09262-20139	Bearing, Center Shaft Lh
8	09262-25073	Bearing, Center Shaft Rh
9	09280-17004	O Ring, Center Shaft
10	09380-27001	Circlip, 5th Drive
11	24130-02F10	Shaft, Drive
12	24311-06G00	Gear, 1st Driven (nt:36)
13	24312-02F00	Bush, 1st Driven
14	24321-02F11	Gear, 2nd Driven (nt:29)
15	24322-02F01	Bush, 2nd Driven
16	24331-02811	Gear Set, 3rd Driven (nt:27)
17	24341-02811	Gear Set, 4th Driven (nt:27)
18	24351-02F13	Gear, 5th Driven (nt:25)
19	24361-06G00	Gear, 6th Driven (nt:21)
20	09160-27008	Washer, 2nd Driven Gear
21	09167-27002	Washer, 3rd & 4th Driven
22	24333-02F00	Washer, 3rd Driven
23	24333-02F00	Washer, 4th Driven
24	09181-20251	Washer, 1st Driven Rh
25	09181-22223	Washer, 1st Driven Lh
26	09262-20082	Bearing, Drive Shaft Rh
27	09262-28040	Bearing, Drive Shaft Lh
28	09283-38020	Seal, Drive Shaft
29	09380-27001	Circlip, 2nd Driven
30	09380-27001	Circlip, 3rd Driven
31	09380-27001	Circlip, 4th Driven
32	24741-06G00	Retainer, Drive Shaft
33	24741-21A00	Retainer, Center Shaft
34	24751-06G00	Retainer, Drive Shaft
35	09126-06011	Screw, Drive Shaft (6x12)
36	02112-06123	Screw, Center Shaft
37	07130-06123	Bolt, Drive Shaft Oil
38	27510-20A20	Sprocket, Engine (nt:17)
39	27531-24B13	Spacer, Sprocket
40	27600-06G00-112	Chain Assy (rk525smoz7)
41	27620-06G00	Joint Set, Chain
42	09159-20004	Nut
43	09160-25009	Washer (25x41x3)
44	09280-24010	O Ring (d:2.4,id:23.7)

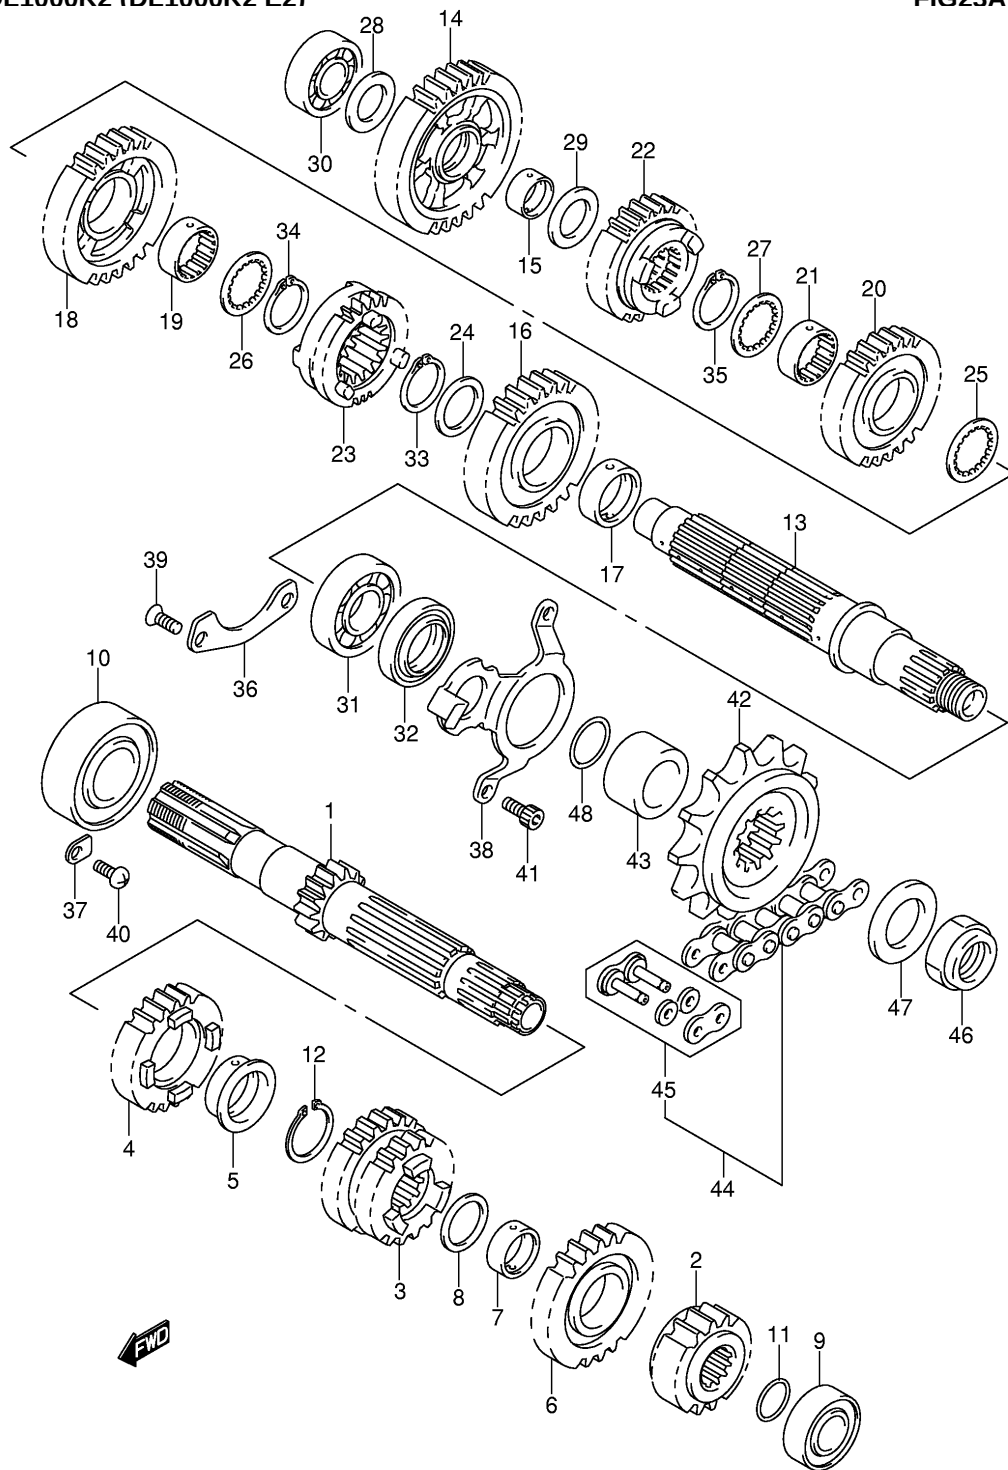

Ref No	Part No	Description
1	24120-06G00	Shaft, Counter (nt:12)
2	24221-02F01	Gear, 2nd Drive (nt:15)
3	24231-02F20	Gear, 3rd & 4th Drive
4	24251-02F11	Gear, 5th Drive (nt:23)
5	24252-02F10	Bush, 5th Drive Gear
6	24261-06G00	Gear, 6th Drive (nt:23)
7	24262-02F00	Bush, 6th Drive Gear
8	09181-22167	Washer, 6th Drive
9	09262-20139	Bearing, Center Shaft Lh
10	09262-25073	Bearing, Center Shaft Rh
11	09280-17004	O Ring, Center Shaft
12	09380-27001	Circlip, 5th Drive
13	24130-02F10	Shaft, Drive
14	24311-06G00	Gear, 1st Driven (nt:36)
15	24312-02F00	Bush, 1st Driven
16	24321-02F11	Gear, 2nd Driven (nt:29)
17	24322-02F01	Bush, 2nd Driven
18	24331-02F12	Gear, 3rd Driven (nt:27)
19	24332-17E20	Bush, 3rd Driven Gear
20	24341-02F20	Gear, 4th Driven (nt:27)
21	24332-17E20	Bush, 4th Driven Gear
22	24351-02F13	Gear, 5th Driven (nt:25)
23	24361-06G00	Gear, 6th Driven (nt:21)
24	09160-27008	Washer, 2nd Driven Gear
25	09167-27002	Washer, 3rd & 4th Driven
26	24333-02F00	Washer, 3rd Driven
27	24333-02F00	Washer, 4th Driven
28	09181-20251	Washer, 1st Driven Rh
29	09181-22223	Washer, 1st Driven Lh
30	09262-20082	Bearing, Drive Shaft Rh
31	09262-28040	Bearing, Drive Shaft Lh
32	09283-38020	Seal, Drive Shaft
33	09380-27001	Circlip, 2nd Driven
34	09380-27001	Circlip, 3rd Driven
35	09380-27001	Circlip, 4th Driven
36	24741-06G00	Retainer, Drive Shaft
37	24741-21A00	Retainer, Center Shaft
38	24751-06G00	Retainer, Drive Shaft
39	09126-06011	Screw, Drive Shaft (6x12)
40	02112-06123	Screw, Center Shaft
41	07130-06123	Bolt, Drive Shaft Oil
42	27510-20A20	Sprocket, Engine (nt:17)
43	27531-24B13	Spacer, Sprocket
44	27600-06G00-112	Chain Assy (rk525smoz7)
45	27620-06G00	Joint Set, Chain
46	09159-20004	Nut
47	09160-25009	Washer (25x41x3)
48	09280-24010	O Ring (d:2.4,id:23.7)

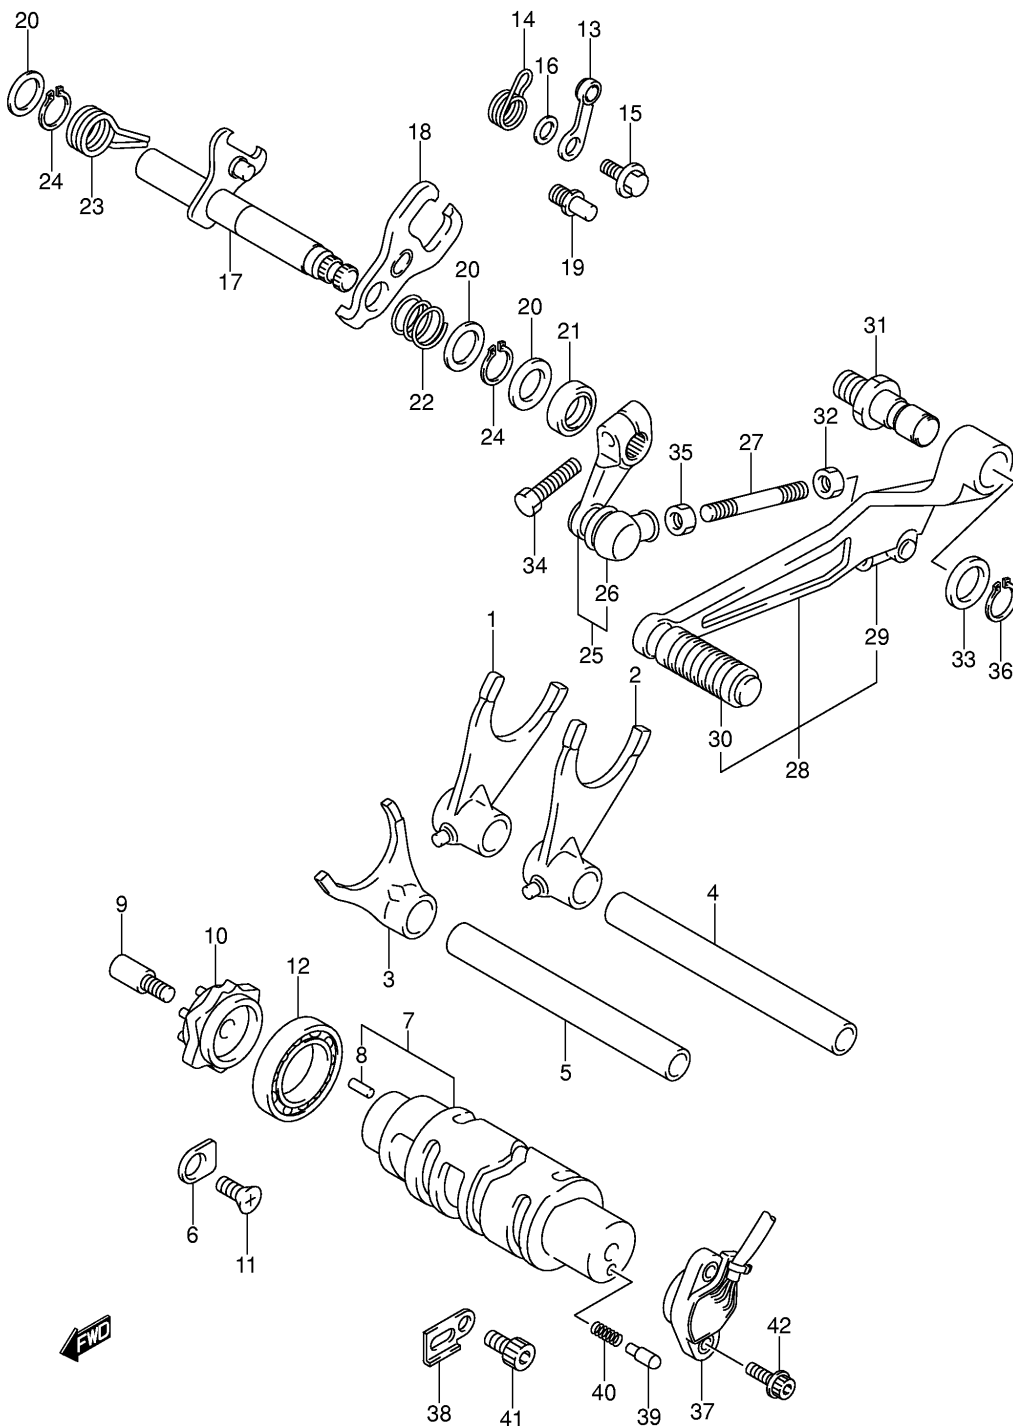



Ref No	Part No	Description
1	25211-17E01	Fork, Gear Shift No.2
2	25211-35F00	Fork, Gear Shift No.1
3	25231-35F00	Fork, Gear Shift No.3
4	25411-02F20	Shaft, Gear Shift Fork No.2
5	25411-02F20	Shaft, Gear Shift Fork No.1
6	24741-21A00	Retainer, Shift Cam
7	25310-02F10	Cam, Gear Shift
8	04221-04089	• . Pin, Shift Cam
9	25312-12C00	Stopper, Shift Cam
10	25381-13E00	Plate, Gear Shift
11	09125-06110	Screw, Shift Cam, 6x12
12	08113-69050	Bearing, Shift Cam
13	25350-06G00	Stopper, Shift Cam
14	25355-38F00	Spring, Stopper Arm
15	09111-06041	Bolt (6x14.3)
16	08211-06141	Washer
17	25510-06G10	Shaft, Gear Shift
18	25512-06G00	Plate, Gear Shift
19	25671-01011	Stopper, Gear Shift
20	09181-14167	Washer, Gear Shift Rh
21	09283-14006	Seal, Shift Shaft Oil
22	09440-17009	Spring, gear Shift Plate
23	09444-20001	Spring, Shift Shaft
24	08331-31146	Circlip, Gear Shift
25	25520-06G00	Arm, Gear Shift Link
26	25526-47000	• . Cover, Dust
27	25525-43510	Rod, Gear Shift Link
28	25600-06G10	Lever Assy, Gear Shift
29	25526-47000	• . Cover, Dust
30	25652-20C00	• . Rubber
31	25617-03F00	Shaft, Gear Shift Lever
32	09140-06011	Nut
33	09160-12011	Washer (12.5x20x1)
34	01500-06203	Bolt
35	08310-00067	Nut
36	08331-31126	Circlip
37	37730-06G00	Base Assy, Gear Shift Term
38	31497-45000	Clamp, Gear Shift
39	09209-05011	Contact, Gear Shift
40	09440-04010	Spring, Gear Shift Sw
41	07130-05103	Screw, Clamp
42	07120-05163	Screw, Gear Shift Sw

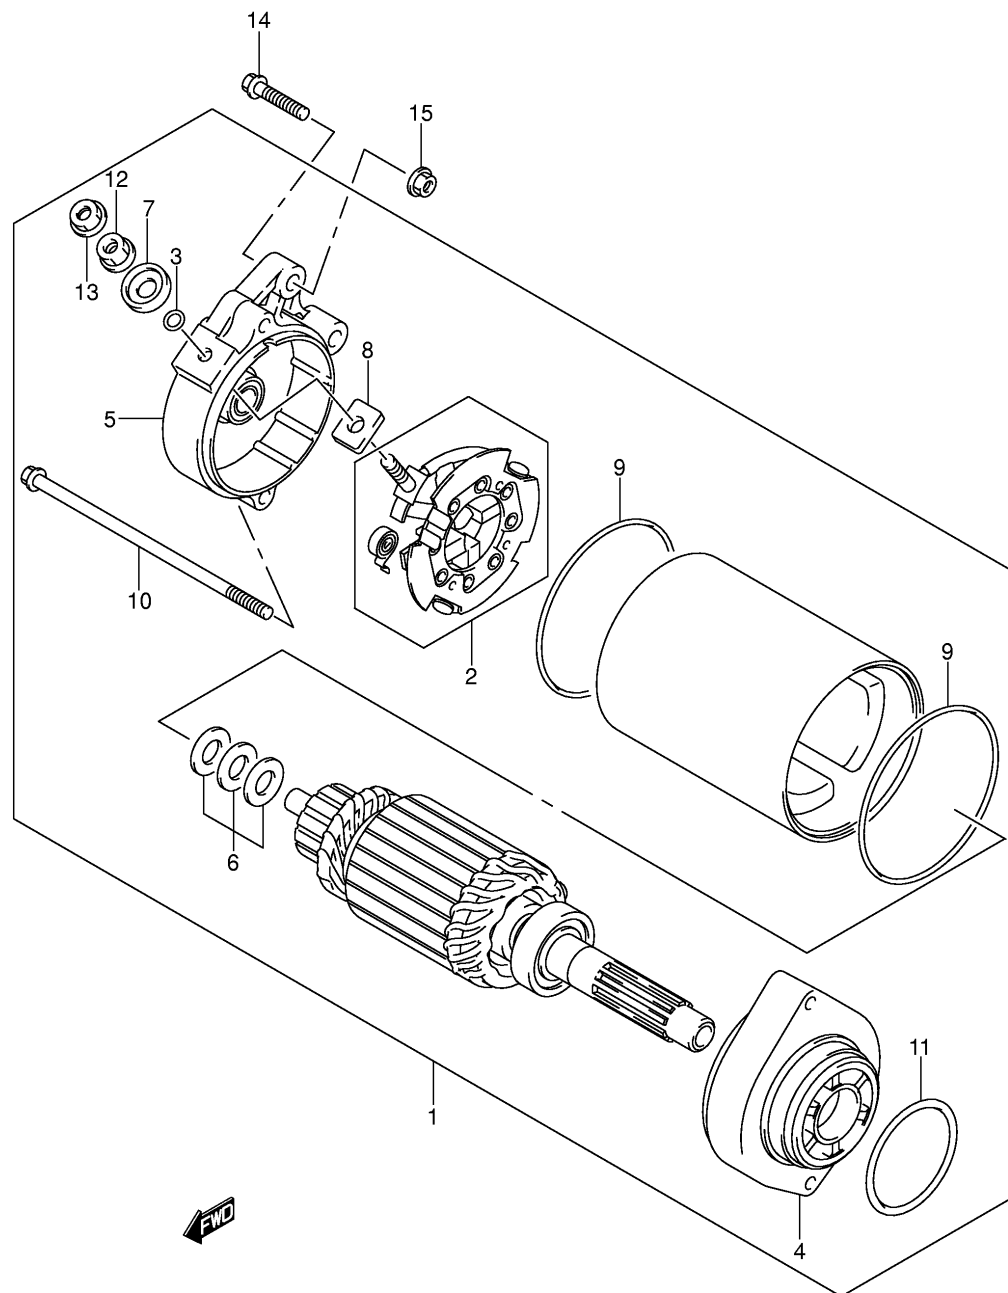

Ref No	Part No	Description
1	31100-06G01	Motor Assy, Starting
2	31132-45C00	• . Holder Set, Brush
3	31143-38300	• . O Ring
4	31150-44B10	• . Housing
5	31170-02F10	• . Frame
6	31170-43400	• . Shim Set
7	31172-38300	• . Bushing
8	31173-88C00	• . Bushing
9	31264-44110	• . O Ring
10	31281-31D01	• . Bolt
11	31156-48B00	• . O Ring
12	08310-00067	• . Nut
13	08361-35068	• . Nut
14	09103-06212	Bolt (6x25)
15	08361-35068	Nut

Ref No	Part No	Description
1	32101-06G10	Stator Assy
2	32102-06G10	Rotor Assy
3	32371-13E00	Clamp, Magneto
4	32491-06G00	Bolt, Rotor
5	09420-04008	Key
6	07130-05103	Bolt, Pick Up
7	07130-06353	Bolt, Stator

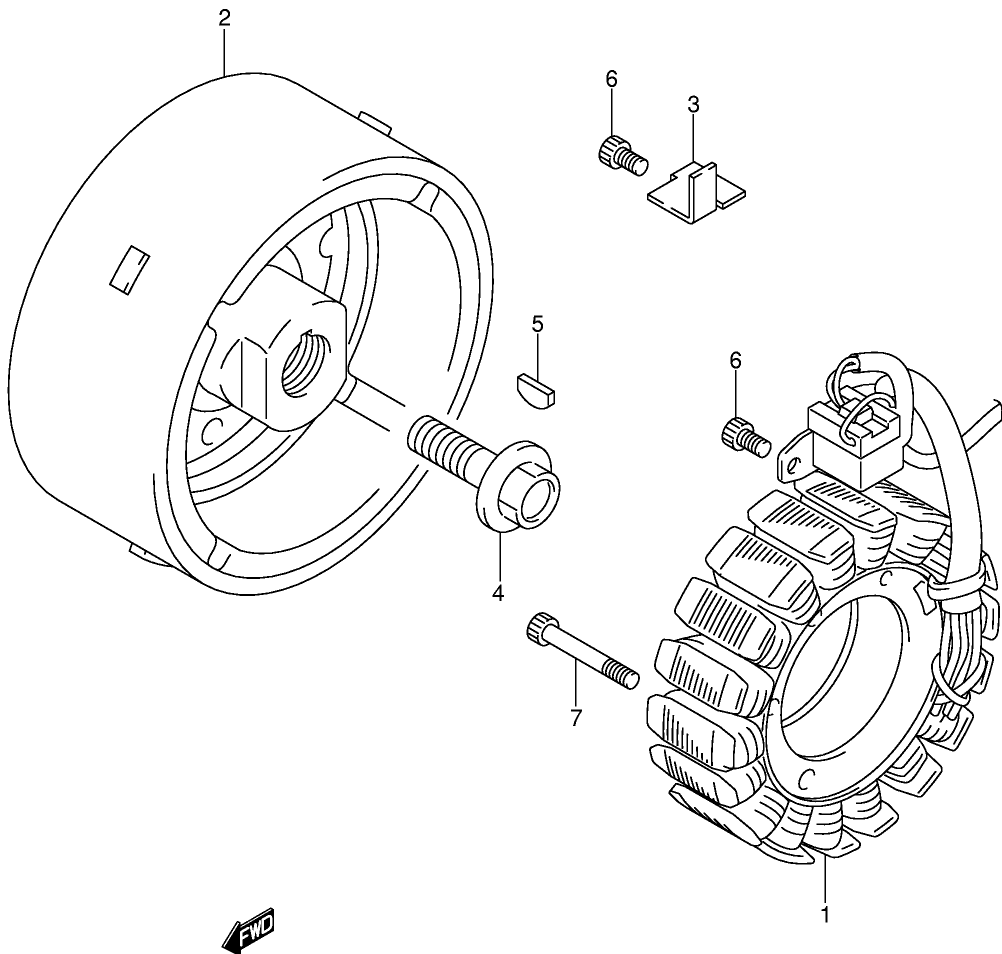


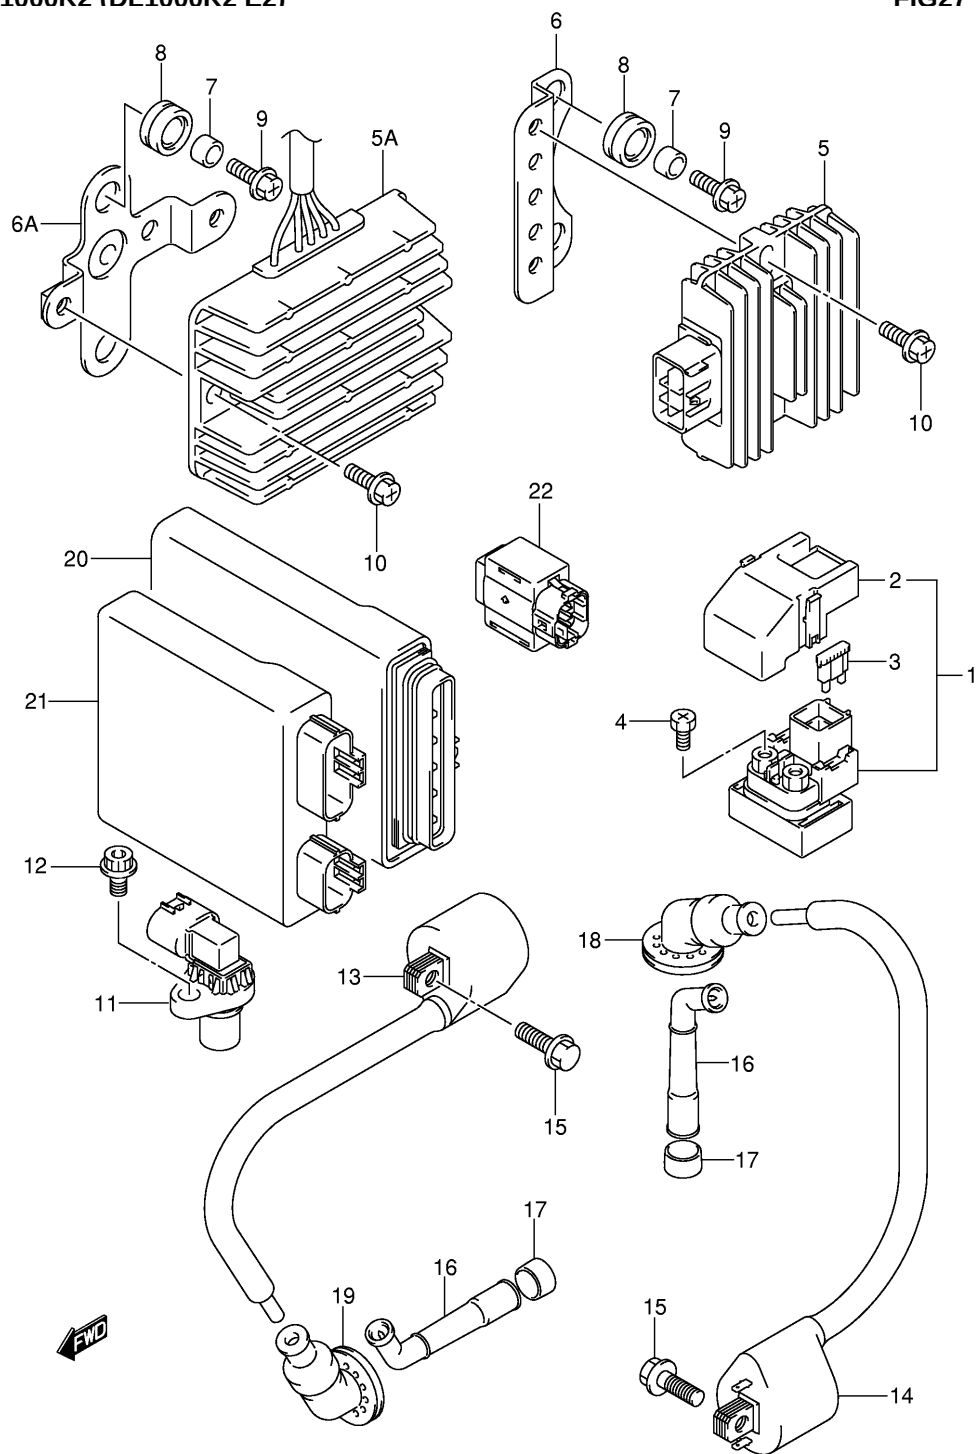


ELECTRICAL


Ref No	Part No	Description
1	31800-06G00	Relay Assy, Starting
2	31861-47E00	• . Cover, Relay Assy
3	09481-30101	• . Fuse, 30a
4	09128-06013	Bolt (6x8)
5a	32800-06G00	Rectifier Assy
6a	32831-06G10	Bracket, Rectifier
7	09180-06258	Spacer (6.5x9x6.7)
8	09320-09036	Cushion
9	02162-06203	Bolt, Bracket
10	02162-06203	Bolt, Rectifier
11	33220-80G00	Sensor Assy, Cam Position
12	07130-06163	Bolt
13	33410-06G00	Coil Assy, Ignition
14	33420-06G00	Coil Assy, Ignition
15	01547-06203	Bolt
16	33510-17G00	Cap Assy, Spark Plug
17	33541-23E01	Seal, Spark Plug Cap
18	33542-06G00	Seal, High Tension Cord, Rr
19	33542-06G10	Seal, High Tension Cord, Fr
21	32920-06G40	Control Unit, Fi
21	32920-06G50	Control Unit, Fi
21	32920-06G80	Control Unit, Fi
22	33960-06G10	Sensor Assy, Fuel Cut

Ref No	Part No	Description
1	33610-26D10	Battery Assy
2	33652-16G00	Protector
2a	33652-08420	Protector (70x100x6)
2b	33651-37000	Protector (170x95x3)
3	09462-00007	Band, Battery
4	33810-06G00	Wire, Starter Motor Lead
5	36618-43410	• . Cap, Oil Pressure
6	33810-06G10	Wire, Starter Motor Lead
7	36618-43410	• . Cap, Oil Pressure
8	33820-06G00	Wire, Battery Plus Lead
9	33624-27G00	• . Cap, Battery Plug
10	33860-06G00	Wire, Battery Minus

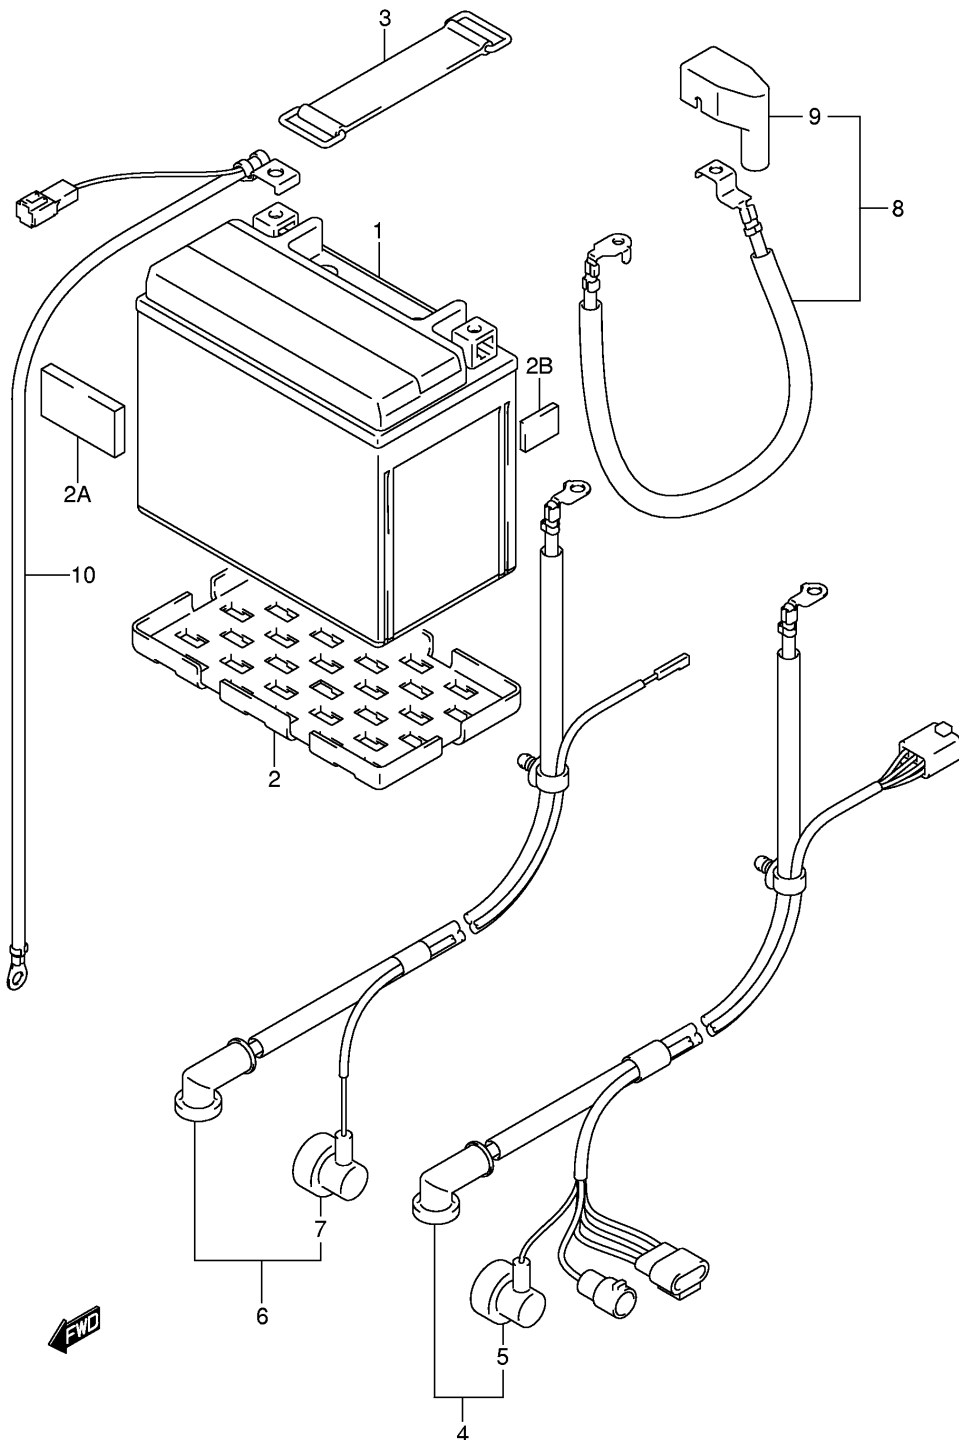

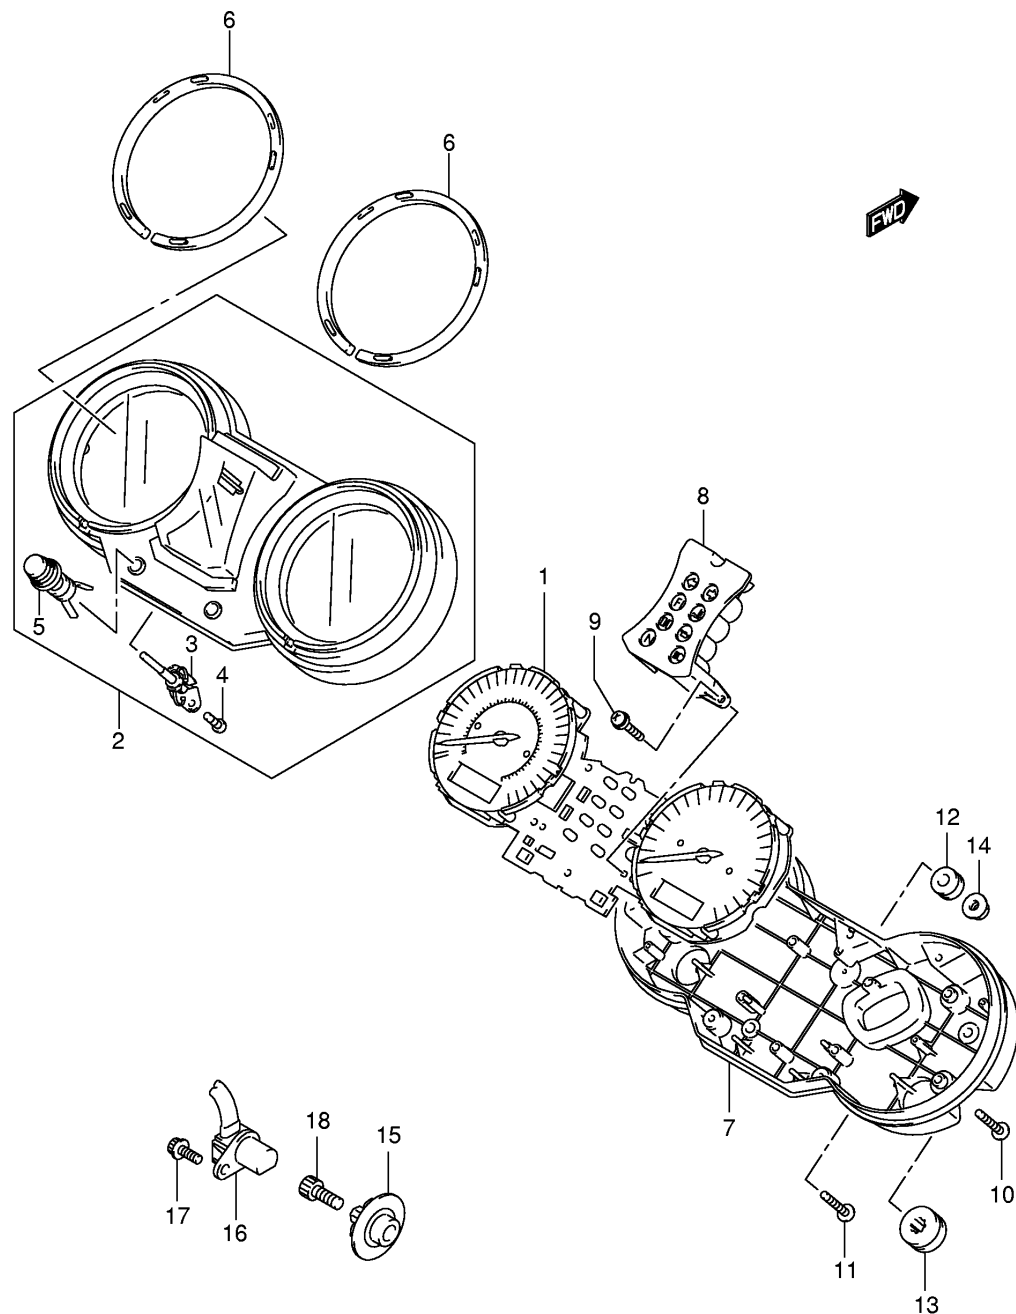



Ref No	Part No	Description
2	34150-06G00	Upper Case
3	34123-06G00	• . Switch Lever
4	34183-06G00	• . Screw (3x10)
5	34124-06G00	• . Switch Gum
6	34188-06G00	Damper
7	34111-06G00	Lower Case
8	34165-06G00	Inner Case
9	34149-31F10	Screw (3x14)
10	09132-03008	Screw (3x16)
11	34383-31F10	Screw (3x16)
12	34189-32B00	Cushion, Meter No.1
13	34955-13E00	Cushion, Meter No.2
14	09159-05044	Nut
15	34981-35F00	Rotor, Speed
16	34990-47F00	Sensor, Speed
17	07120-05103	Bolt, Speed Sensor
18	07130-08253	Bolt, Speed Rotor

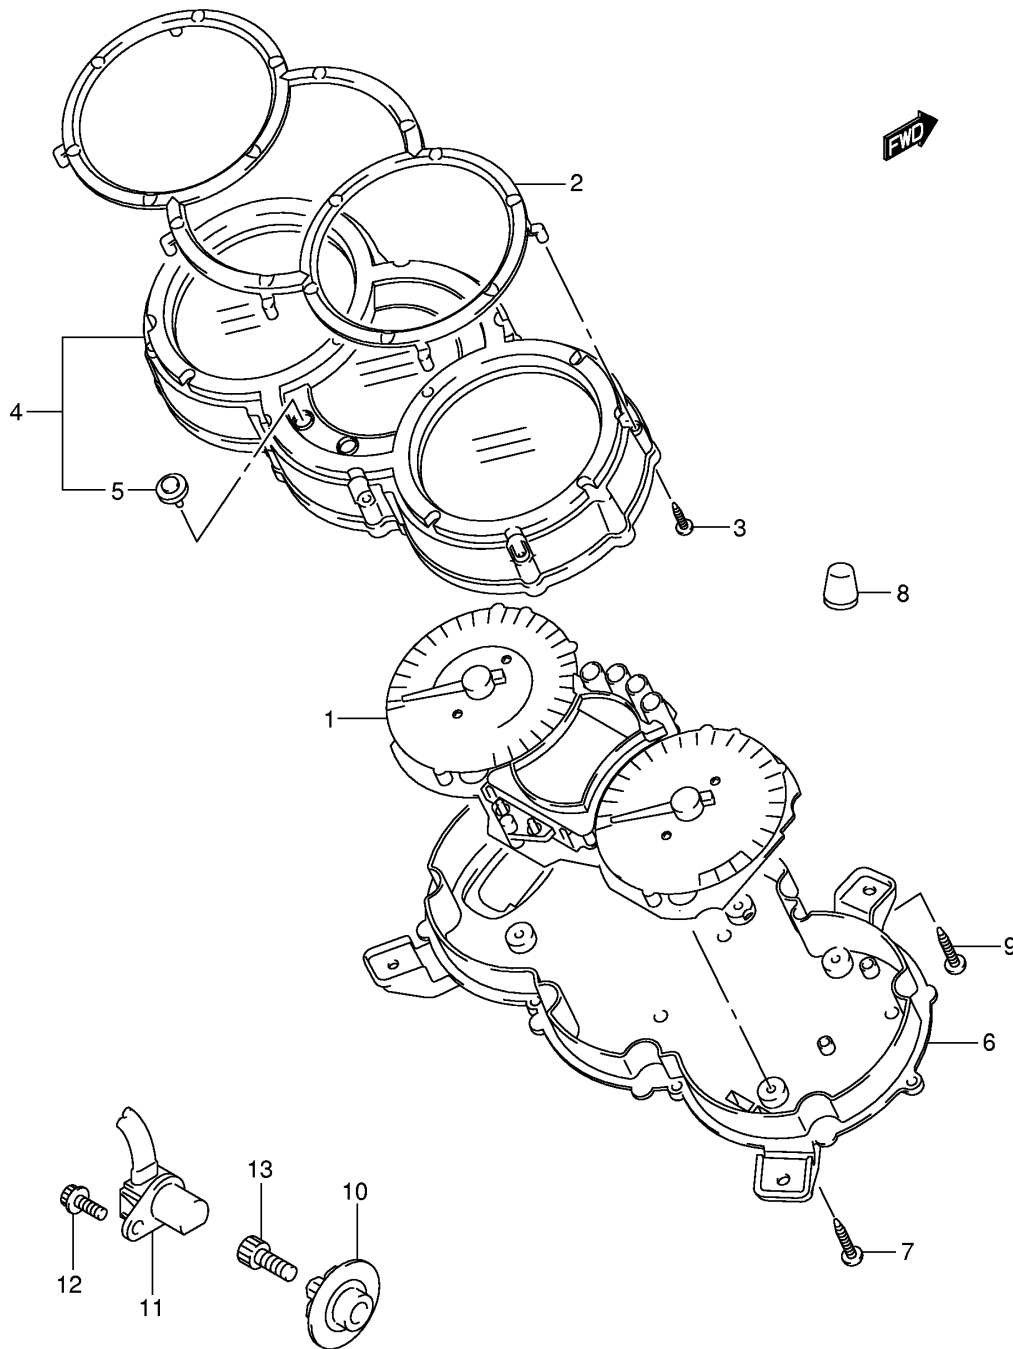


Ref No	Part No	Description
1	34120-06G60	Speedometer (mile/kilo)
1	34120-06G50	Speedometer (kilo)
2	34193-06G50	Ring
3	34183-31F10	Screw
4	34150-27G00	Case, Upper
5	34124-24F00	• . Knob
6	34111-27G00	Case, Lower
7	09132-03008	Screw (3x16)
8	34955-10G00	Cushion, Speedometer
9	03541-05203	Screw
10	34981-35F00	Rotor, Speed
11	34990-47F00	Sensor, Speed
12	07120-05103	Bolt, Speed Sensor
13	07130-08253	Bolt, Speed Rotor

Ref No	Part No	Description
1	35100-06G20-999	Headlamp Assy
2	35125-77A00	• . Socket, Cover
3	36118-06G50	• . Core Assy
4	09471-12182	Bulb (12v,60/55w,h4)
5	09471-12216	Bulb (12v,5w)
6	09320-09010	Cushion
8	09160-06088	Washer, 6.5x20x1.6
9	08310-00063	Nut
10	33652-06G10	Cushion, Headlamp

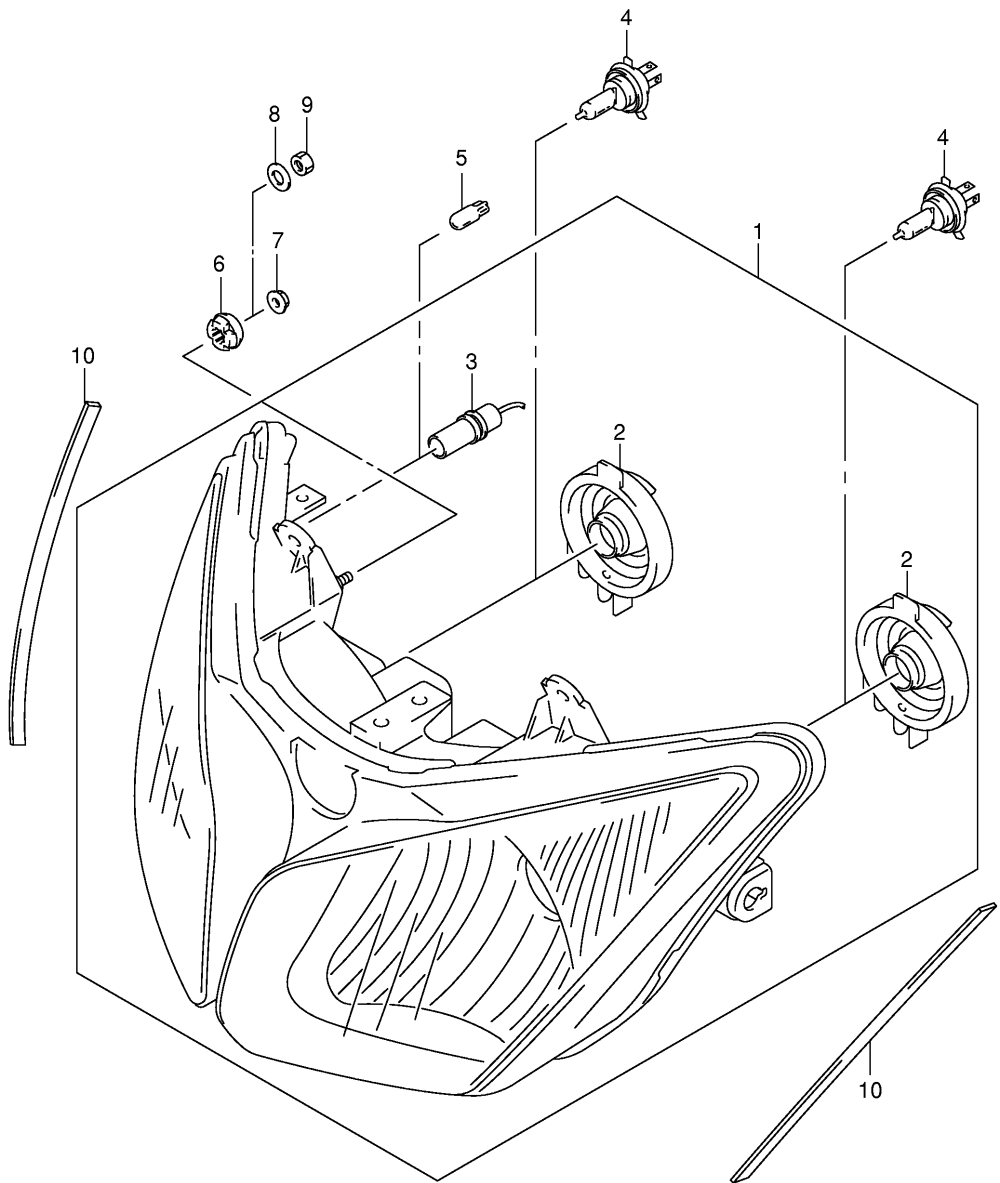


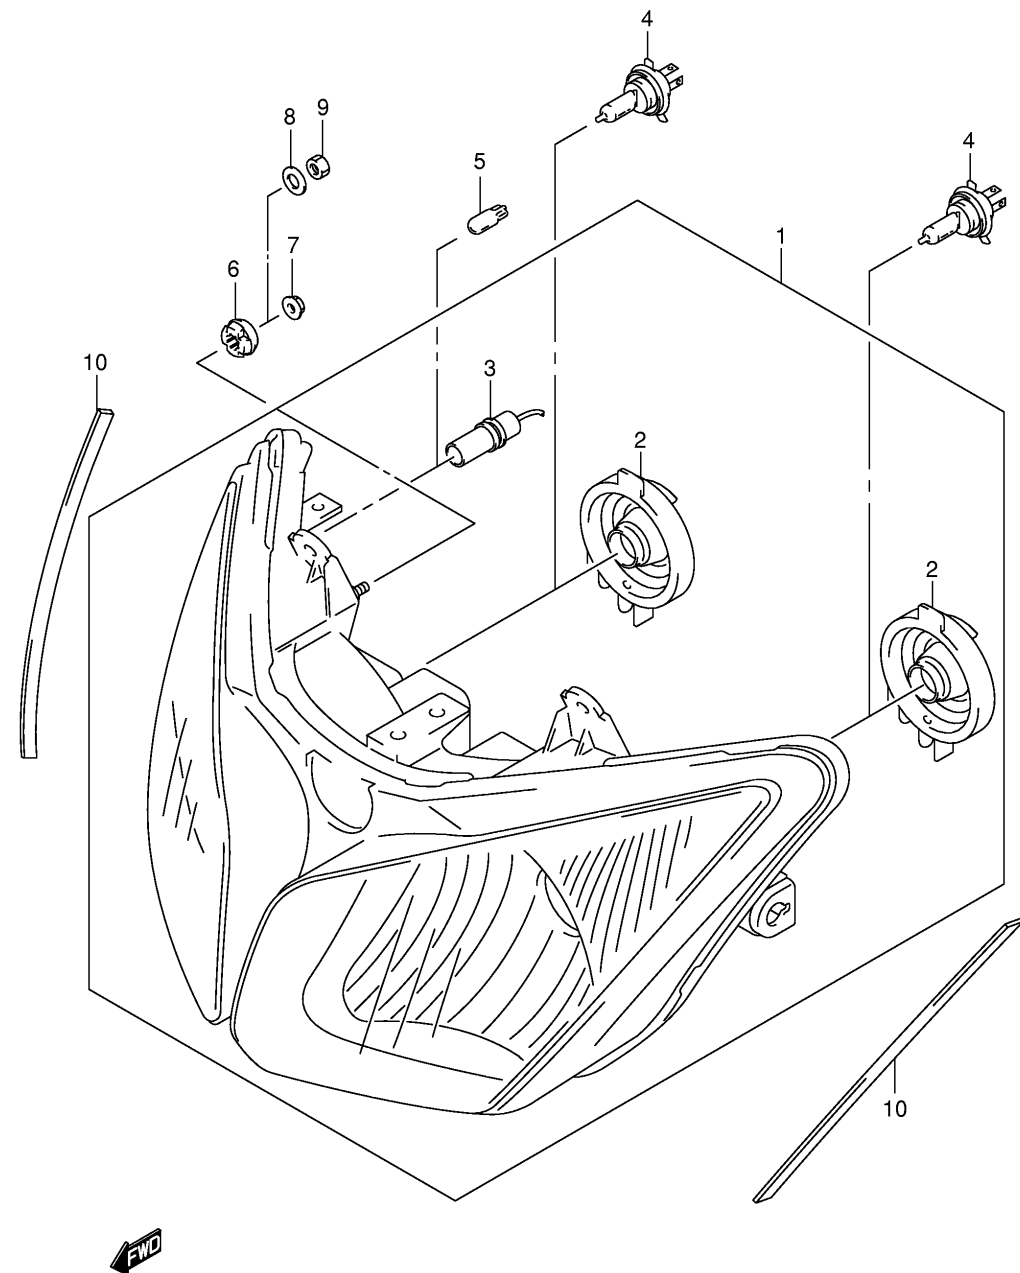

Ref No	Part No	Description
1	35100-06G50-999	Headlamp Assy
2	35125-77A00	• . Socket, Cover
3	36118-06G50	• . Cord Assy
4	09471-12182	Bulb (12v,60/55w,h4)
5	09471-12216	Bulb (12v,5w)
6	09320-09010	Cushion
8	09160-06088	Washer, 6.5x20x1.6
9	08310-00063	Nut
10	33652-06G10	Cushion, Headlamp

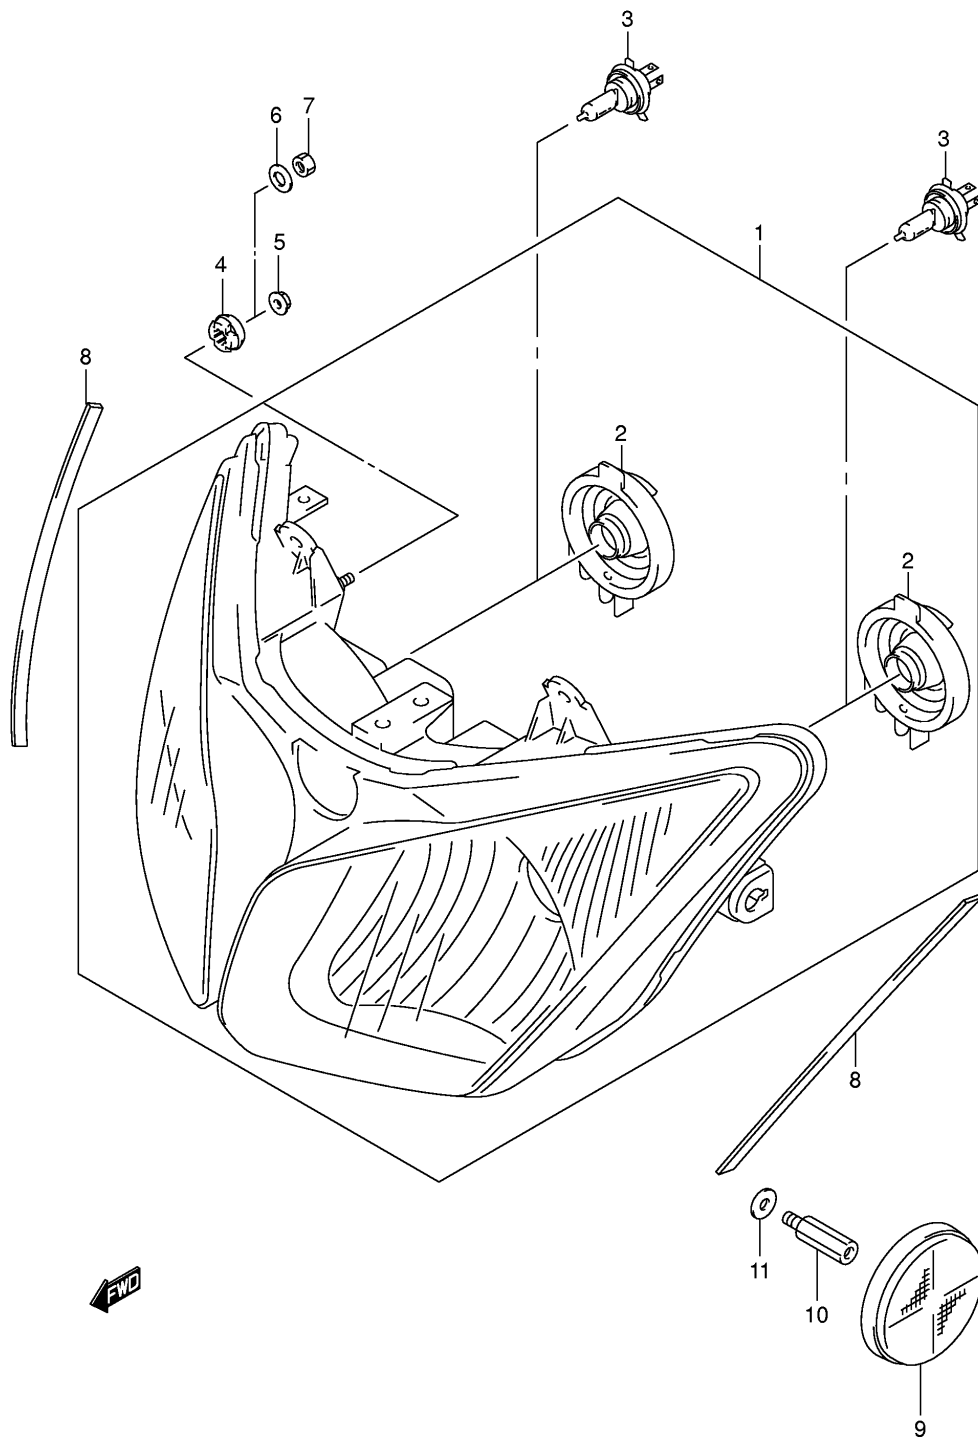



Ref No	Part No	Description
1	35100-06G30-999	Headlamp Assy
2	35125-77A00	• . Socket, Cover
3	09471-12182	Bulb (12v,60/55w,h4)
4	09320-09010	Cushion
6	09160-06088	Washer, 6.5x20x1.6
7	08310-00063	Nut
8	33652-06G10	Cushion, Headlamp
9	35950-14A00	Reflex Reflector Assy, Front
10	09119-05023	Bolt
11	08322-01053	Washer

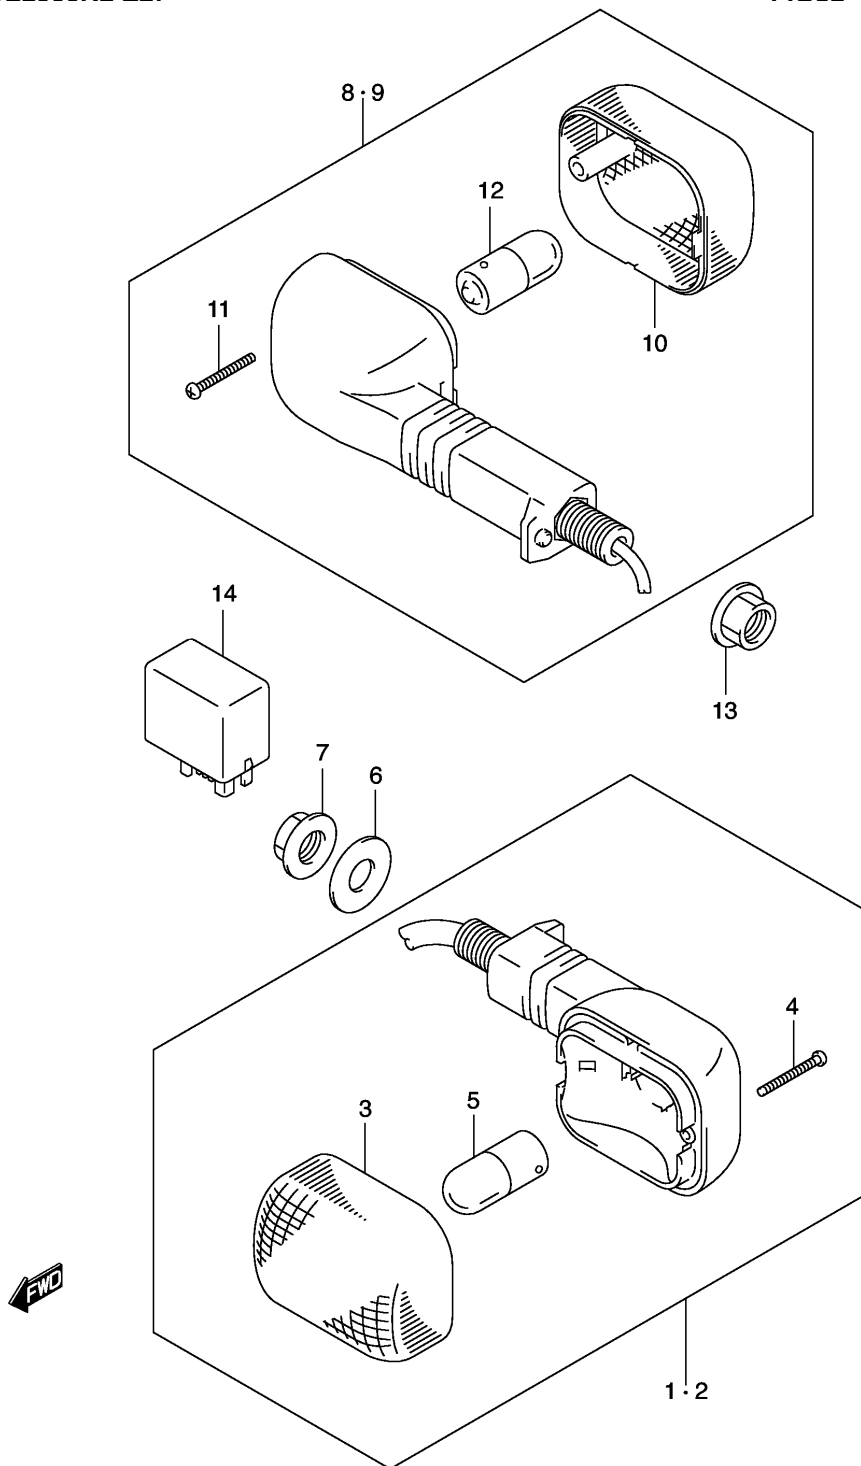


Ref No	Part No	Description
1	35601-06G00	Lamp Assy, Front Turnsignal Rh
1	35601-06G30	Lamp Assy, Front Turnsignal Rh
2	35602-06G00	Lamp Assy, Front Turnsignal Lh
2	35602-06G30	Lamp Assy, Front Turnsignal Lh
3	35612-06G00	• . Lens
4	35623-06G00	• . Screw
5	09471-12177	• . Bulb (12v,10w)
6	09160-12092	Washer
7	08316-10123	Nut
8	35601-06G00	Lamp Assy, Rear Turnsignal Rh
9	35602-06G00	Lamp Assy, Rear Turnsignal Lh
10	35612-06G00	• . Lens
11	35623-06G00	• . Screw
12	09471-12177	• . Bulb (12v,10w)
13	08316-10123	Nut
14	38610-12FA0	Relay Assy, Turnsignal Lamp

Ref No	Part No	Description
1	35601-27G00	Lamp Assy, Front Turnsignal Rh
2	35602-27G00	Lamp Assy, Front Turnsignal Lh
3	35612-31F30	• . Lens, Rh
4	35632-31F30	• . Lens, Lh
5	03242-04163	• . Screw
6	09471-12045	• . Bulb (12v,21w)
7	09202-04017	• . Pin
8	09160-12092	Washer
9	08316-10123	Nut
10	35603-06G10	Lamp Assy, Rear Turnsignal Rh
11	35604-06G10	Lamp Assy, Rear Turnsignal Lh
12	35632-31F30	• . Lens, Rh
13	35612-31F30	• . Lens, Lh
14	03242-04163	• . Screw
15	09471-12045	• . Bulb (12v,21w)
16	09202-04017	• . Pin
17	08316-10123	Nut
18	38610-03F00	Relay Assy, Turnsignal Lamp

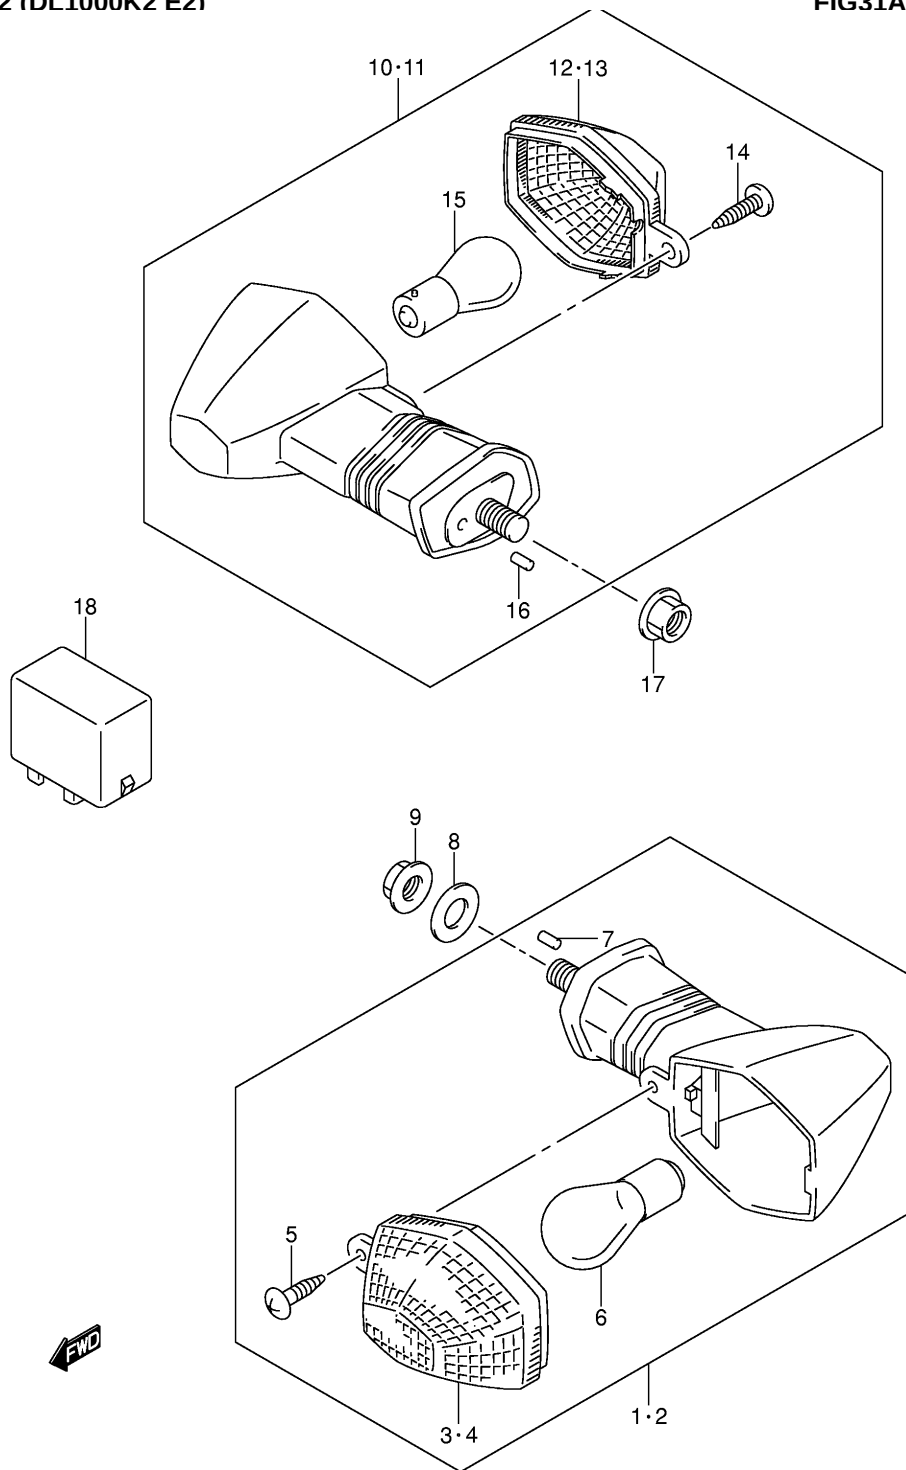


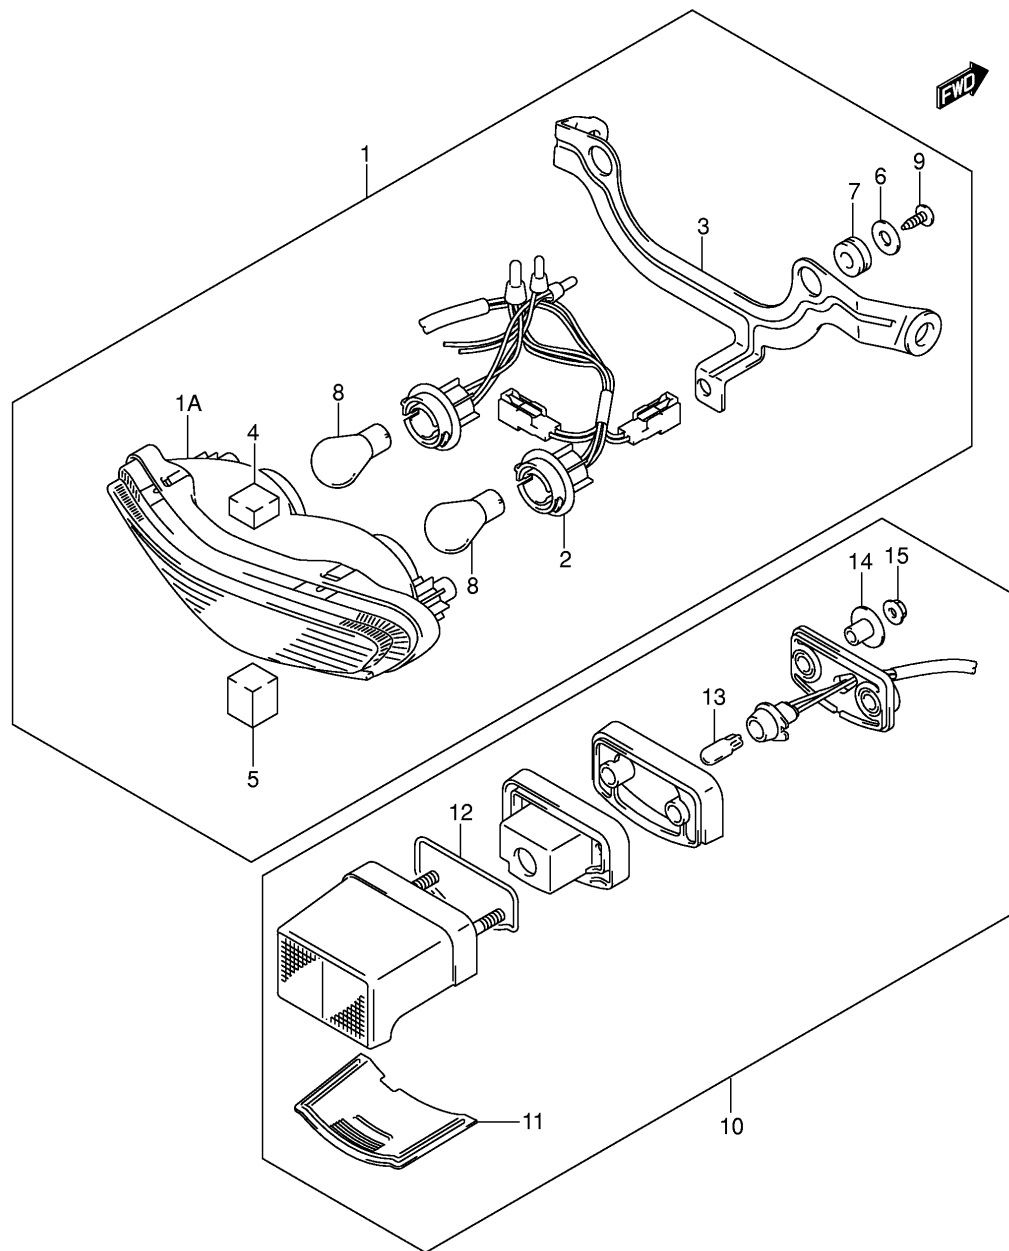


Ref No	Part No	Description
1	35710-06G00	Lamp Assy, Rear Combination
1a	35720-06G00	• . Unit
2	35718-06G00	• . Socket & Cord
3	35726-06G00	• . Bracket
4	35734-06G00	• . Cushion, Upper (20x20x12)
5	35739-06G00	• . Cushion, Lower (20x20x25)
6	09160-05501	• . Washer (5.5x20x1.2)
7	09320-10049	• . Cushion
8	09471-12083	• . Bulb (12v,21/5w)
9	03242-05163	• . Screw
10	35910-06G00	Lamp Assy, License
11	35912-08F00	• . Lens
12	35913-08F00	• . Gasket
13	09471-12216	• . Bulb (12v,5w)
14	35766-08F00	• . Spacer
15	08316-20063	• . Nut

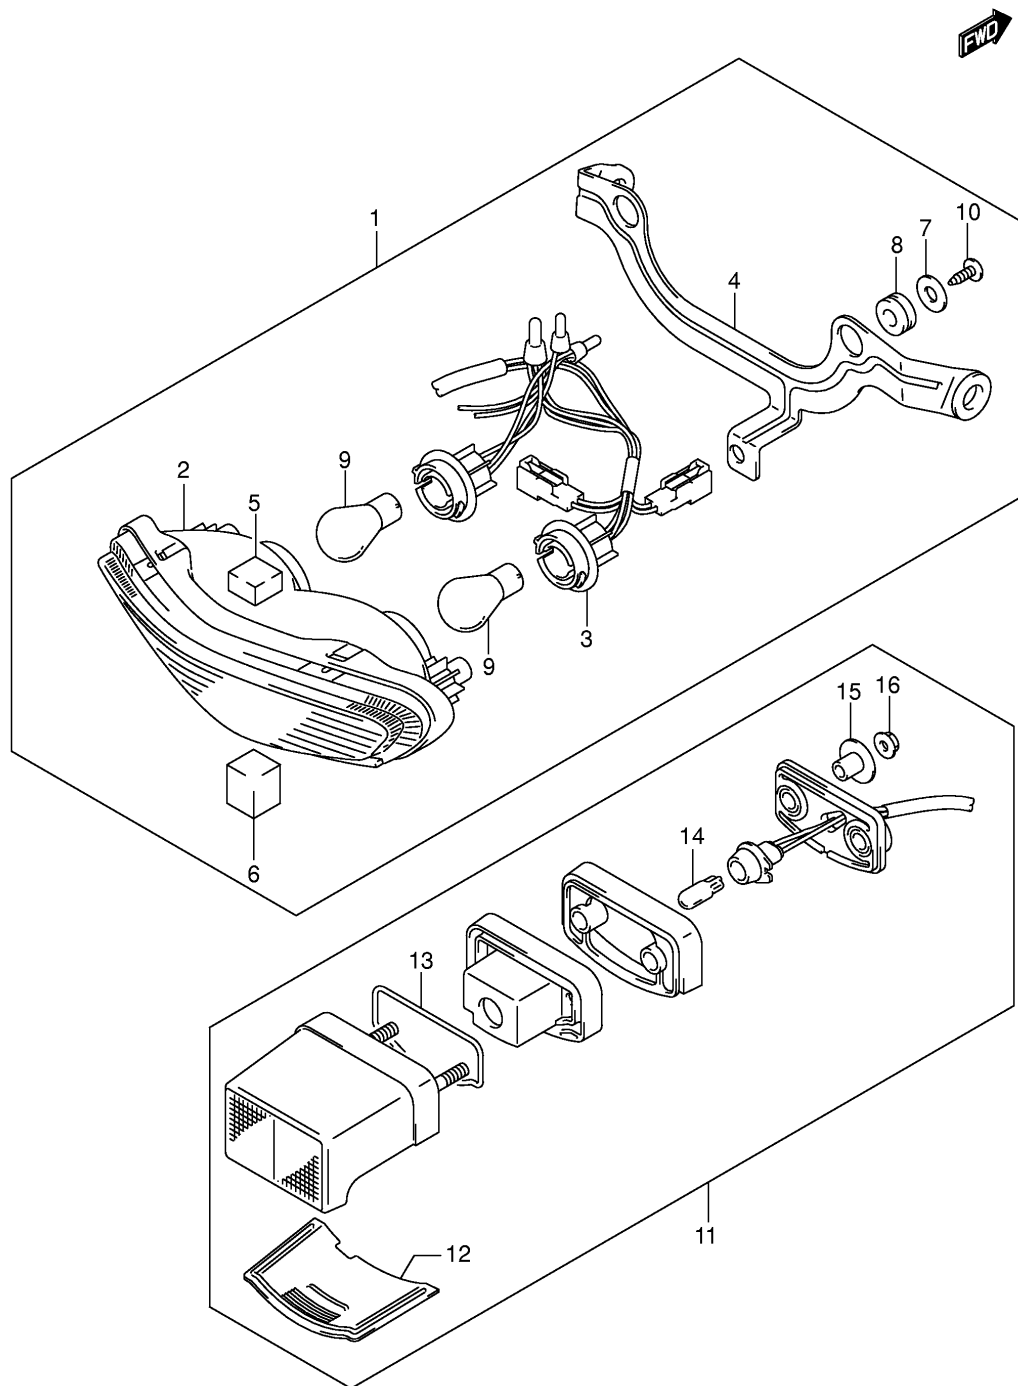

Ref No	Part No	Description
1	35710-06G50	Lamp Assy, Rear Combination
2	35720-06G00	• . Unit
3	35718-06G50	• . Socket & Cord
4	35726-06G00	• . Bracket
5	35734-06G00	• . Cushion, Upper (20x20x12)
6	35739-06G00	• . Cushion, Lower (20x20x25)
7	09160-05501	• . Washer (5.5x20x1.2)
8	09320-10049	• . Cushion
9	09471-12083	• . Bulb (12v,21/5w)
10	03242-05163	• . Screw
11	35910-06G01	Lamp Assy, License
12	35912-08F00	• . Lens
13	35913-08F00	• . Gasket
14	09471-12216	• . Bulb (12v,5w)
15	35766-27G30	• . Spacer
16	08316-20063	• . Nut

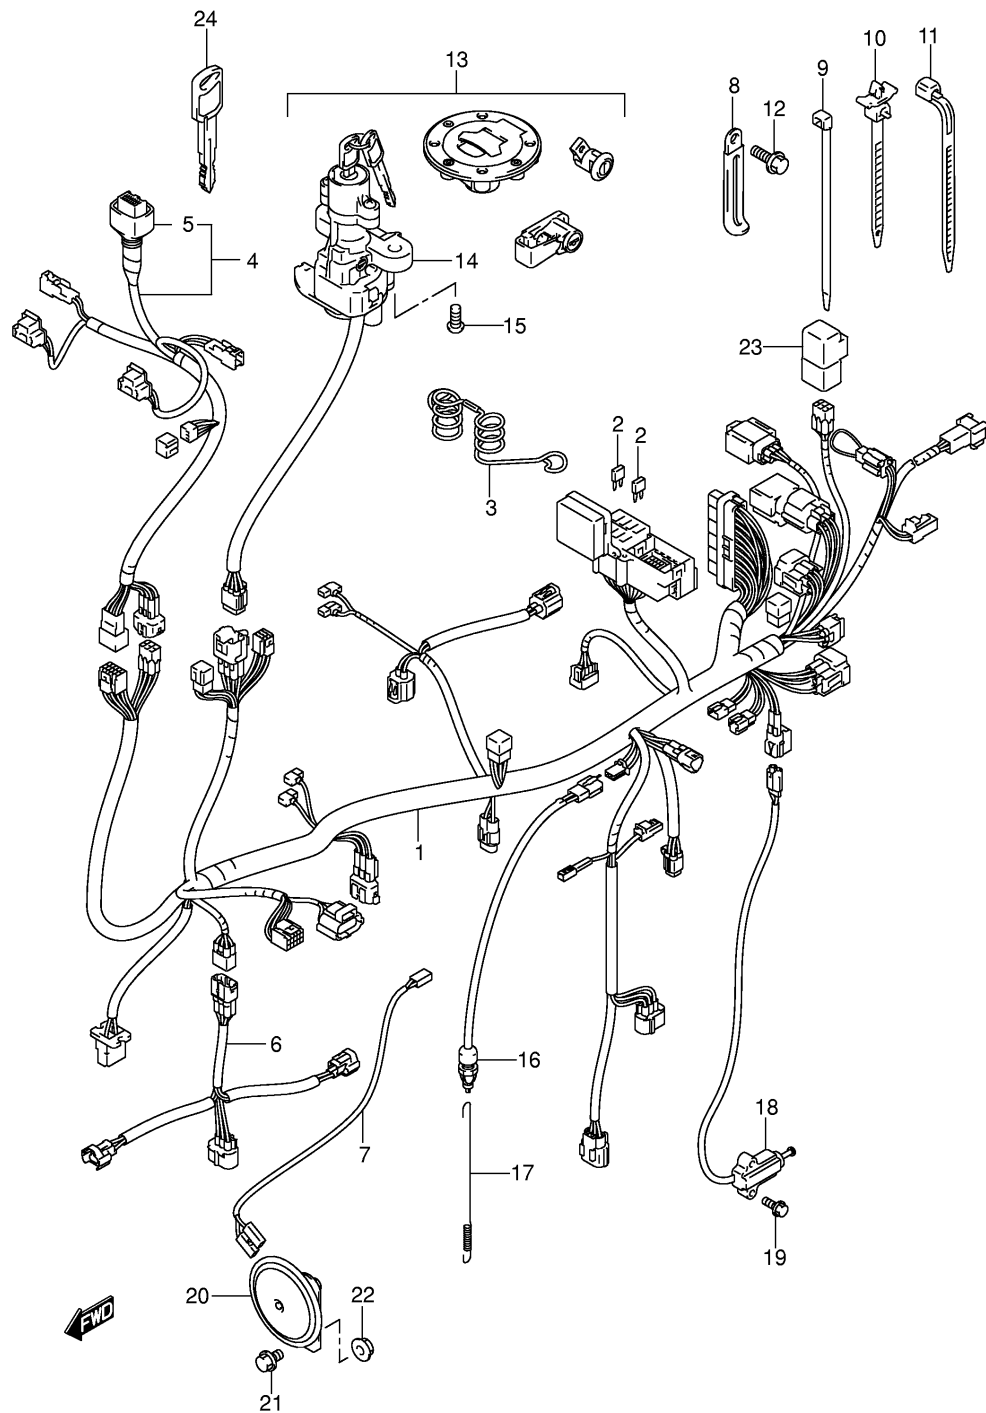


Ref No	Part No	Description
1	36610-06G00	Harness, Wiring No.1
1	36610-06G10	Harness, Wiring No.1
2	09481-10501	• . Fuse (10a)
2	09481-15501	• . Fuse (15a)
3	36619-06G00	Guide, Wiring Harness
4	36620-06G00	Harness, Wiring No.2
4	36620-06G10	Harness, Wiring No.2
5	36618-33E00	• . Cover, Speedometer
6	36859-06G00	Wire, Injector Lead
7	36852-06G00	Wire, Horn Lead
8	09404-06432	Clamp (l:80)
9	09407-14407	Clamp (l:145)
10	09407-14408	Clamp (l:120)
11	09407-14403	Clamp (l:125)
12	01550-06103	Bolt
13	37000-06860	Lock Set
13	37000-06880	Lock Set
14	37100-06G00	• . Lock Assy, Steering
14	37100-06G10	• . Lock Assy, Steering
15	09139-08016	Screw (8x20)
16	37740-31D00	Switch Assy, Stop Lamp
17	43259-06G00	Spring, Stop Lamp
18	37840-06G00	Switch Assy, Side Stand
19	01550-06163	Bolt
20	38500-41F00	Horn Assy
21	01550-08123	Bolt
22	08316-10083	Nut
23	38740-24X50	Relay Assy, Fuel Pump
24	37146-33E00	Key, Blank

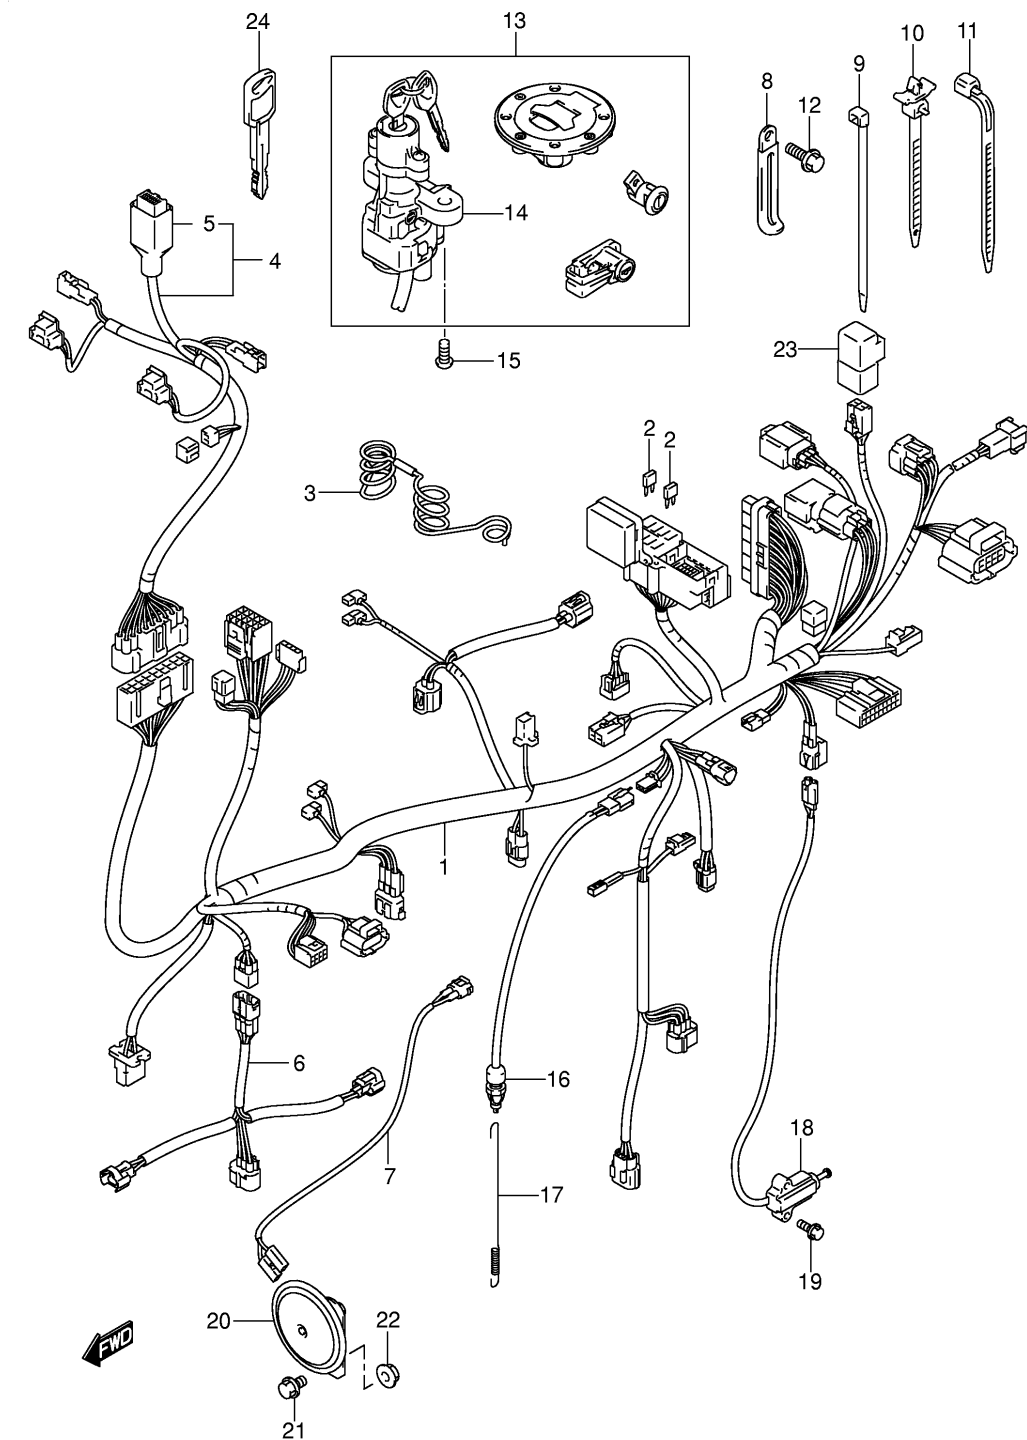

Ref No	Part No	Description
1	36610-06G20	Harness, Wiring No.1
1	36610-06G30	Harness, Wiring No.1
1	09481-10501	• . Fuse (10a)
2	09481-15501	• . Fuse (15a)
3	36619-06G00	Guide, Wiring Harness
4	36620-06G00	Harness, Wiring No.2
4	36620-06G10	Harness, Wiring No.2
5	36618-33E00	• . Cover, Speedometer
6	36859-06G00	Wire, Injector Lead
7	36852-06G00	Wire, Horn Lead
8	09404-06432	Clamp (l:80,t:1.0)
8	09404-06431	Clamp (l:80,t:0.7)
9	09407-14407	Clamp (l:145)
10	09407-14408	Clamp (l:120)
10	09407-17401	Clamp (l:150)
11	09407-14403	Clamp (l:125)
12	01550-06103	Bolt
13	37000-06860	Lock Set
13	37000-06880	Lock Set
14	37100-06G00	• . Lock Assy, Steering
14	37100-06G10	• . Lock Assy, Steering
15	09139-08016	Screw (8x20)
16	37740-31D00	Switch Assy, Stop Lamp
17	43259-06G00	Spring, Stop Lamp
18	37840-06G00	Switch Assy, Side Stand
19	01550-06163	Bolt
20	38500-41F00	Horn Assy
21	01550-08123	Bolt
22	08316-10083	Nut
23	38740-24X50	Relay Assy, Fuel Pump
24	37146-33E00	Key, Blank

DL1000K2 (DL1000K2 E2)

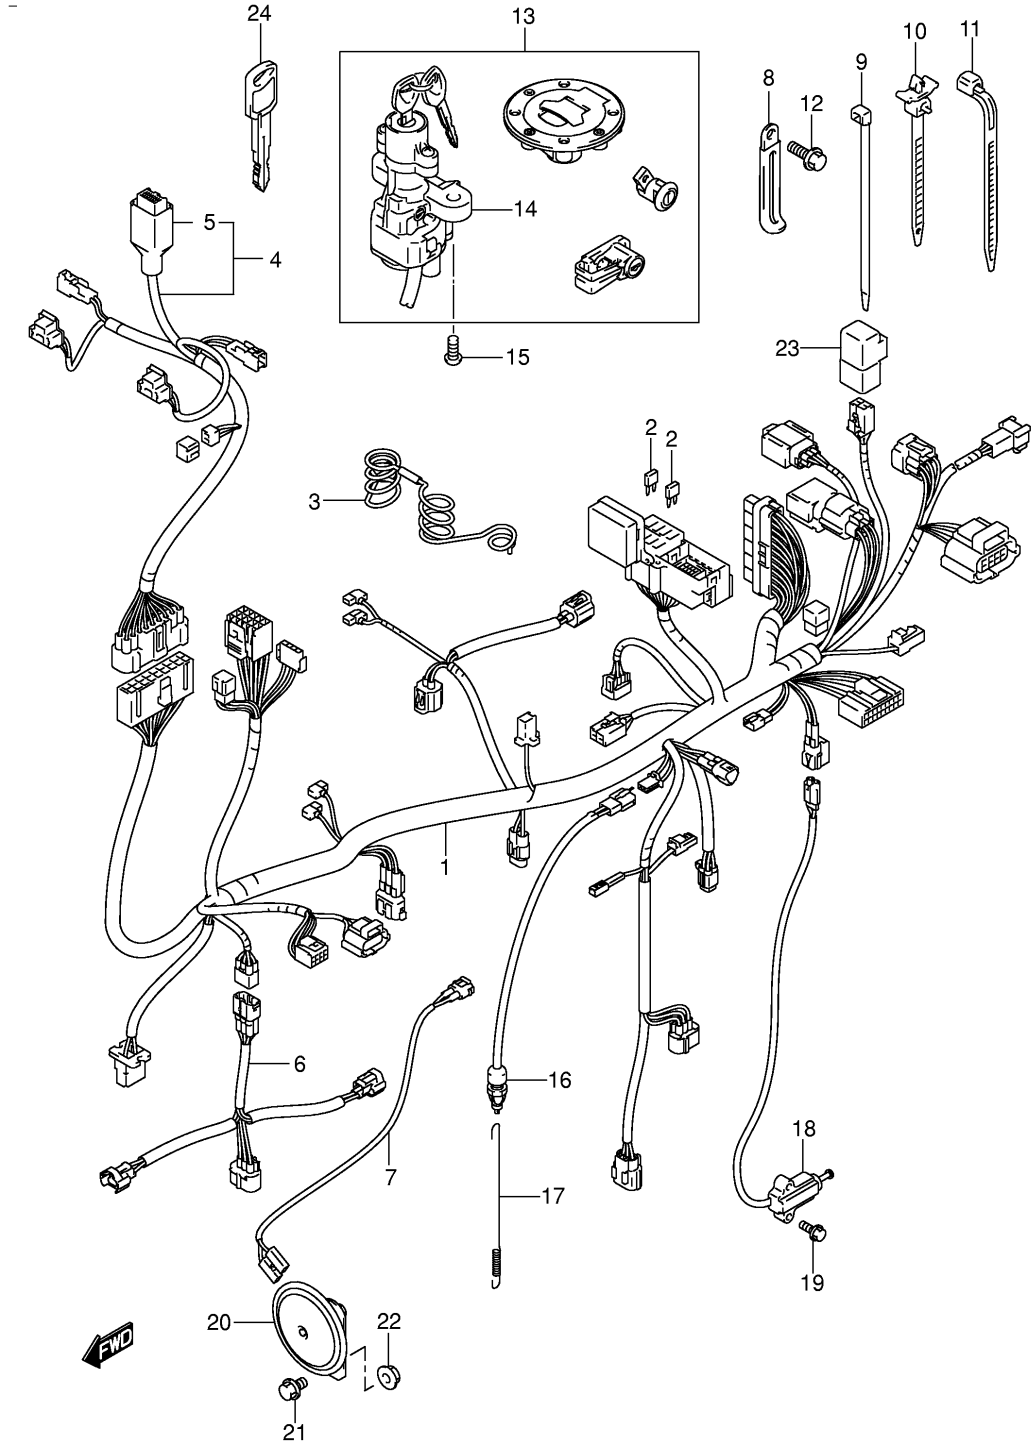


Block No.
FIG33B

Block Title.


WIRING HARNESS (MODEL K4/K5/K6)

Ref No	Part No	Description
1	36610-06G60	Harness, Wiring No.1
1	36610-06G70	Harness, Wiring No.1
2	09481-10501	• . Fuse (10a)
2	09481-15501	• . Fuse (15a)
3	36619-06G01	Guide, Wiring Harness
4	36620-27G10	Harness, Wiring No.2
4	36620-27G30	Harness, Wiring No.2
5	36618-18G10	• . Cover, Speedometer
6	36859-06G00	Wire, Injector Lead
7	36852-06G00	Wire, Horn Lead
8	09404-06429	Clamp (l:45)
8	09404-06433	Clamp (l:80)
9	09407-14407	Clamp (l:145)
10	09407-17401	Clamp (l:150)
11	09407-11401	Clamp (l:95)
11	09407-14403	Clamp (l:125)
12	01547-06103	Bolt
13	37000-06860	Lock Set
14	37100-06G00	• . Lock Assy, Steering
15	09139-08016	Screw (8x20)
16	37740-45D00	Switch Assy, Stop Lamp
17	43259-06G00	Spring, Stop Lamp
18	37840-06G00	Switch Assy, Side Stand
19	01550-06163	Bolt
20	38500-41F00	Horn Assy
21	01550-08123	Bolt
22	08316-10083	Nut
23	38740-24X50	Relay Assy, Fuel Pump
24	37146-33E00	Key, Blank

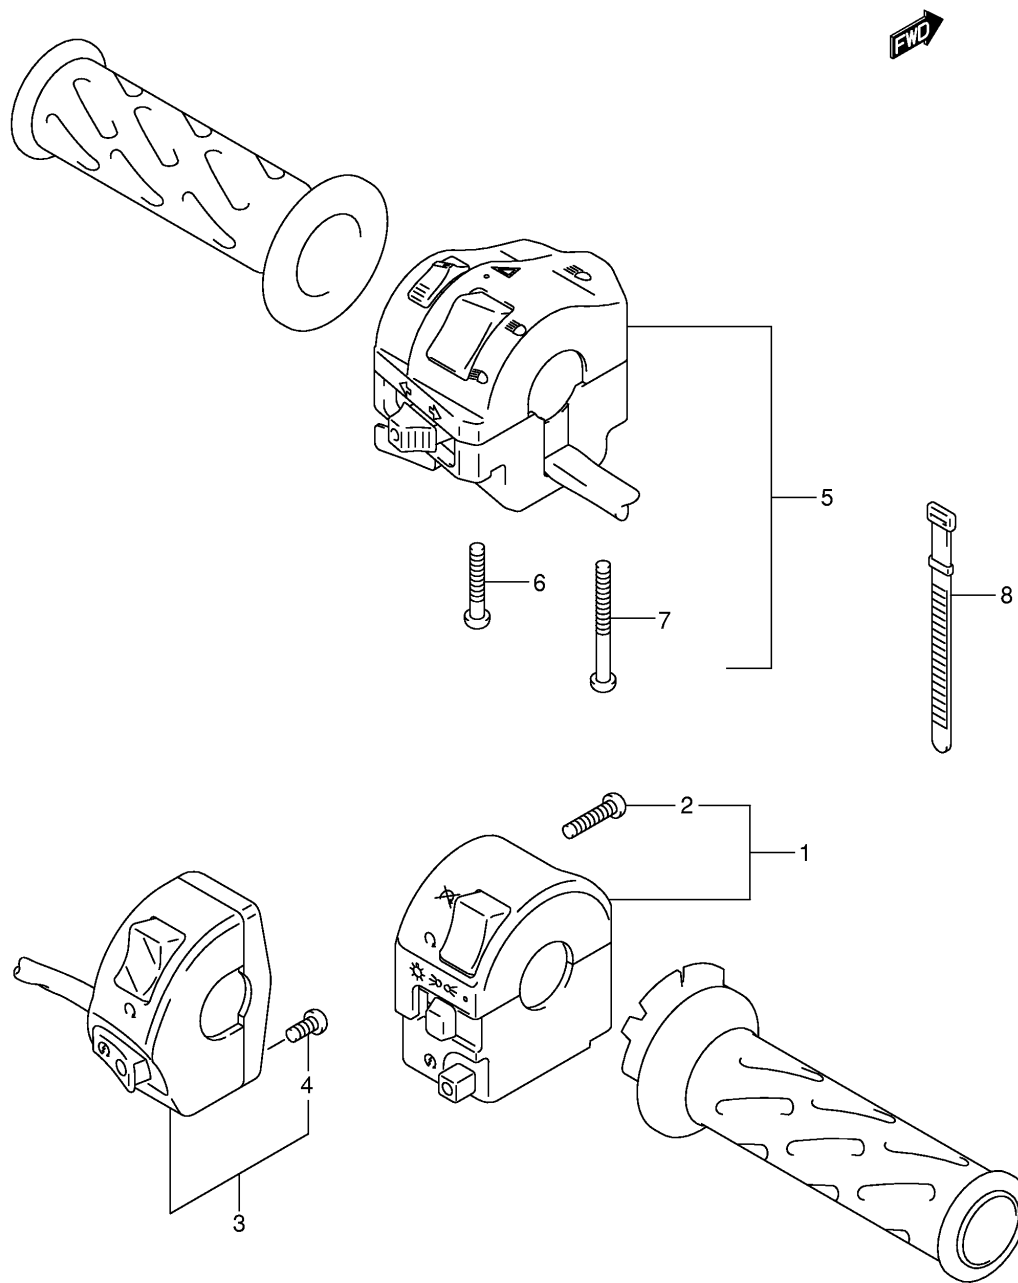



Ref No	Part No	Description
1	37200-06G10	Switch Assy, Handle Rh
2	02112-05455	• . Screw
3	37200-06G30	Switch Assy, Handle Rh
4	02112-05223	• . Screw
5	37400-06G10	Switch Assy, Handle Lh
5	37400-06G40	Switch Assy, Handle Rh
6	02112-05305	• . Screw
7	02112-05403	• . Screw
8	09407-12402	Clamp (I:120)

Ref No	Part No	Description
1	37200-06G30	Switch Assy, Handle Rh
2	02112-05223	• . Screw
3	37400-06G10	Switch Assy, Handle Lh
4	02112-05305	• . Screw
5	02112-05403	• . Screw
6	09407-12402	Clamp (l:120)

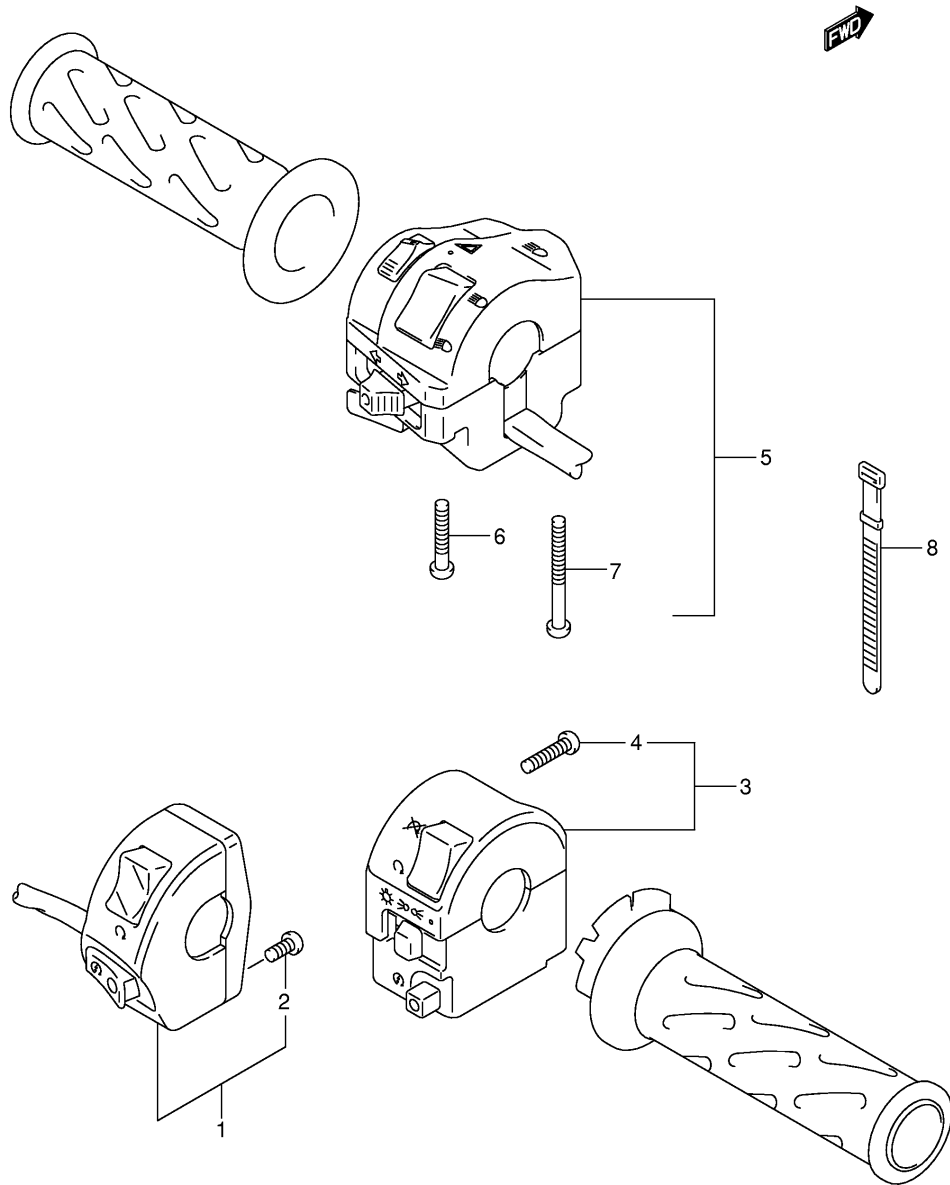


Ref No	Part No	Description
1	37200-06G80	Switch Assy, Handle Rh
2	02112-05453	• . Screw
3	37400-06G10	Switch Assy, Handle Rh
4	02112-05305	• . Screw
5	02112-05403	• . Screw
6	09407-12402	Clamp (l:120)

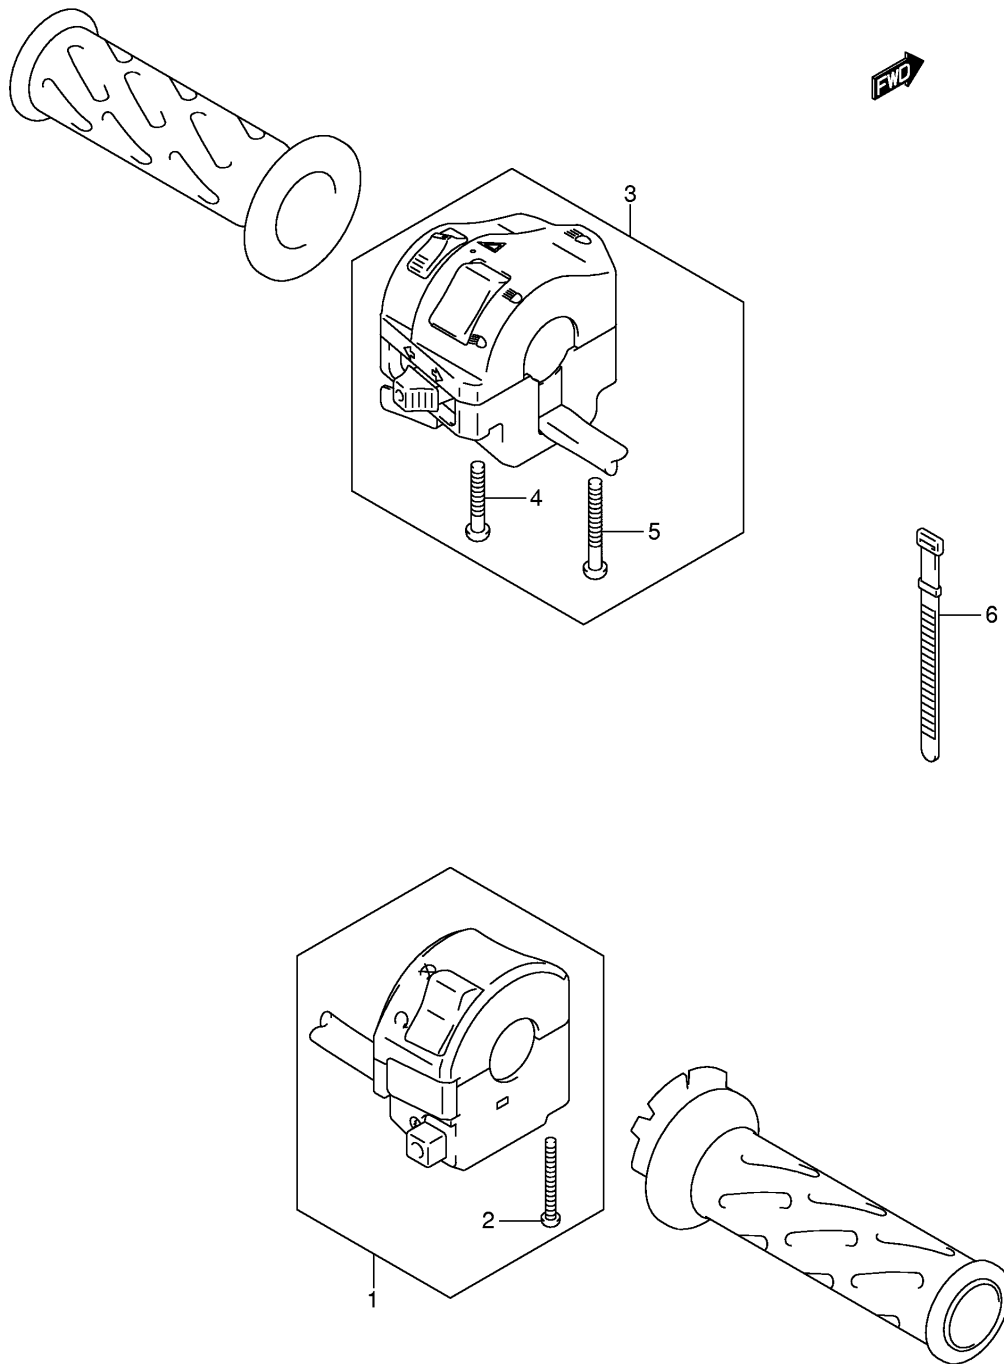


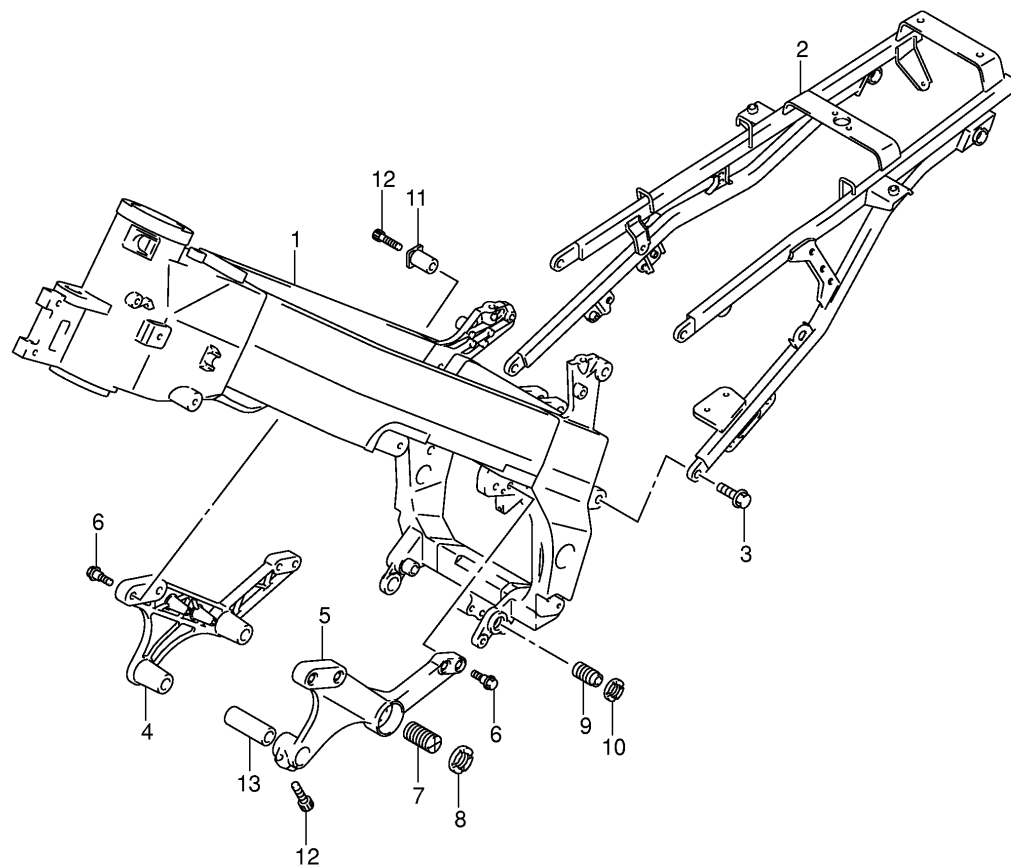


Ref No	Part No	Description
1	41100-06G00-YAP	Frame (black)
2	41200-06G00	Rail, Seat
3	09103-10379	Bolt
4	41911-06G20-YAP	Bracket, Mount Rh (black)
5	41912-06G20-YAP	Bracket, Mount Lh (black)
6	09106-08175	Bolt
7	41923-16G00	Bolt, Adjuster Center
8	41922-19F00	Nut, Adjuster Center
9	41921-16G00	Bolt, Adjuster Lower
10	41922-33E00	Nut, Adjuster Lower
11	41941-19F01	Spacer, Adjuster Upper
12	09106-08149	Bolt
13	41198-02F00	Spacer, Head Front Lh

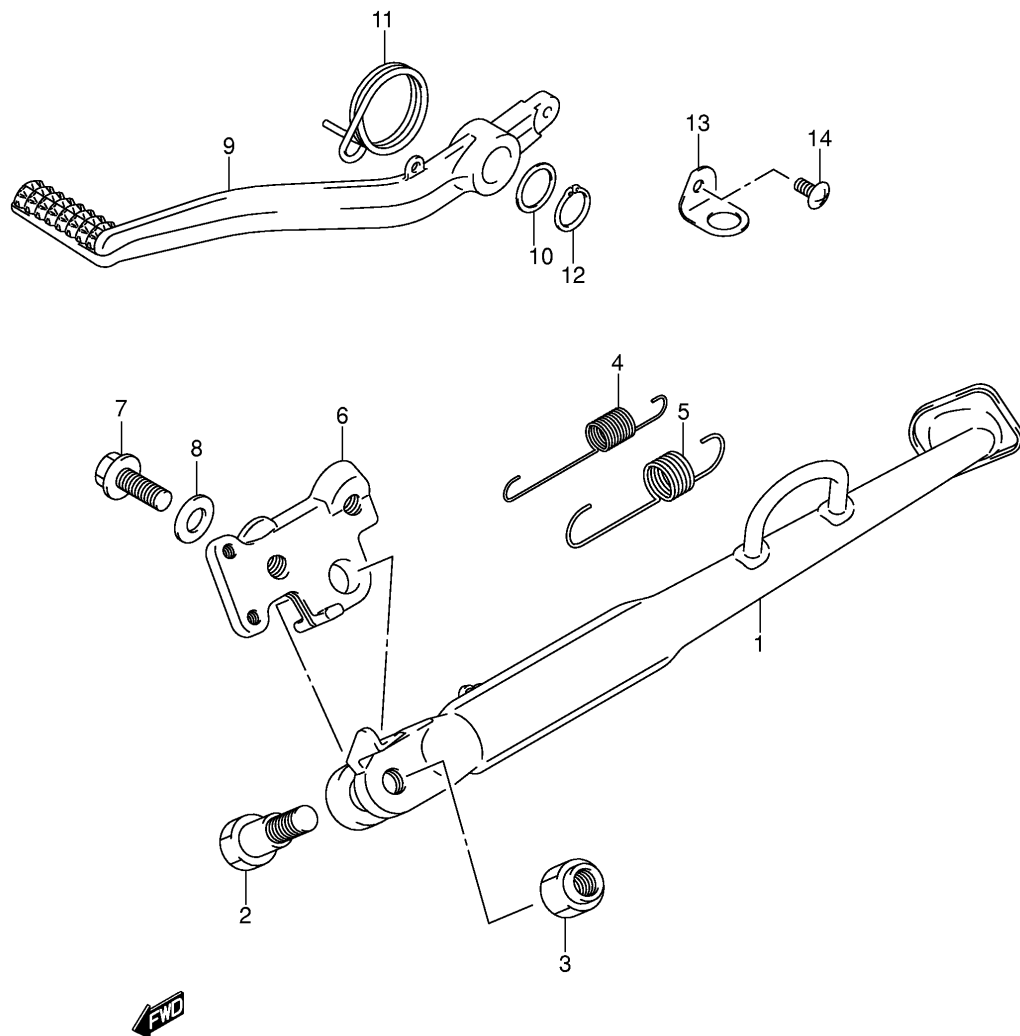


Ref No	Part No	Description
1	42310-06G00	Stand, Prop
2	09111-10058	Bolt
3	42321-03FK0	Nut
4	09443-14058	Spring, Inner
5	09443-19011	Spring, Outer
6	42330-06G00	Bracket, Prop Stand
7	09100-12084	Bolt
8	09160-12061	Washer
9	43111-06G00	Pedal, Brake
10	09160-18022	Washer
11	09448-41005	Spring
12	08331-31186	Clip
13	43251-06G00	Bracket, Stop Switch
14	02142-06123	Screw

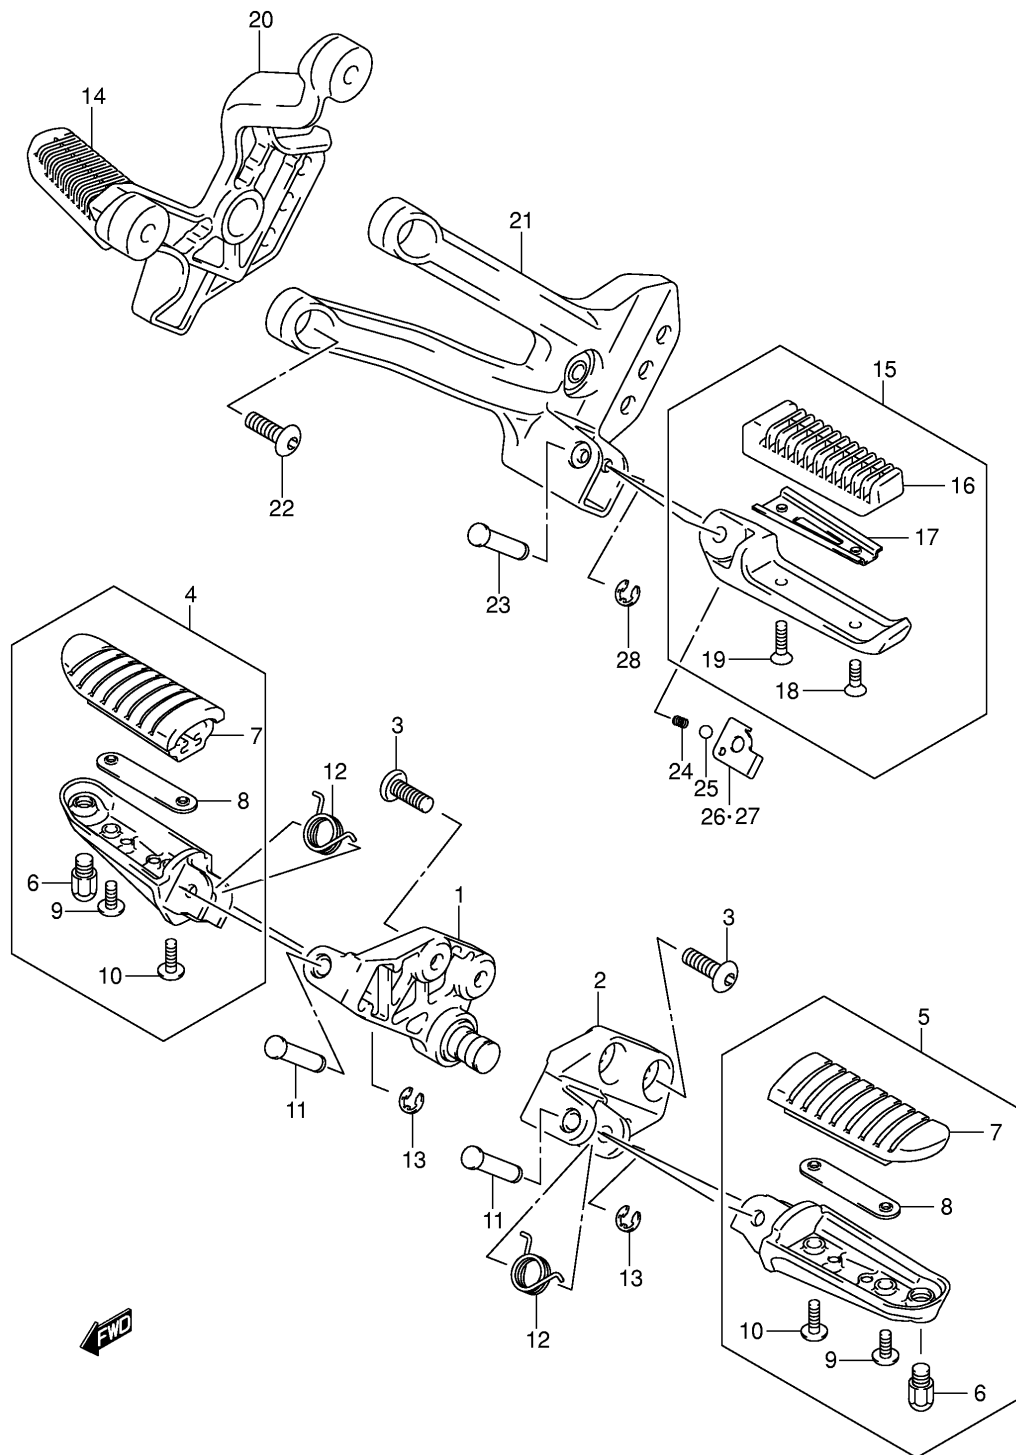


Ref No	Part No	Description
1	43510-06G01-YAP	Bracket, Front Rh (black)
2	43521-06G01-YAP	Bracket, Front Lh (black)
3	09106-08150	Bolt
4	43501-06G01	Footrest Assy, Front Rh
5	43502-06G01	Footrest Assy, Front Lh
6	43576-07D01	• Bolt, Bank Sensor
7	43551-06G00	• Rubber
8	43552-06G00	• Plate
9	02142-05163	• Screw, Outer
10	02142-05203	• Screw, Inner
11	09208-08016	Pin
12	09448-18022	Spring
13	08332-11063	E Ring
14	43600-42F00	Footrest Assy, Pillion Rh
15	43700-42F00	Footrest Assy, Pillion Lh
16	43612-31300	• Rubber
17	43632-45501	• Plate, Stop
18	02122-05123	• Screw, Outer
19	02122-05163	• Screw, Inner
20	43811-06G01-YAP	Bracket, Pillion Rh (black)
21	43821-06G01-YAP	Bracket, Pillion Lh (black)
22	09106-08150	Bolt, Bracket
23	09208-08010	Pin
24	09440-05005	Spring
25	06111-07004	Ball
26	43816-42F10	Plate, Footrest Rh
27	43826-42F10	Plate, Footrest Lh
28	08332-11063	E Ring

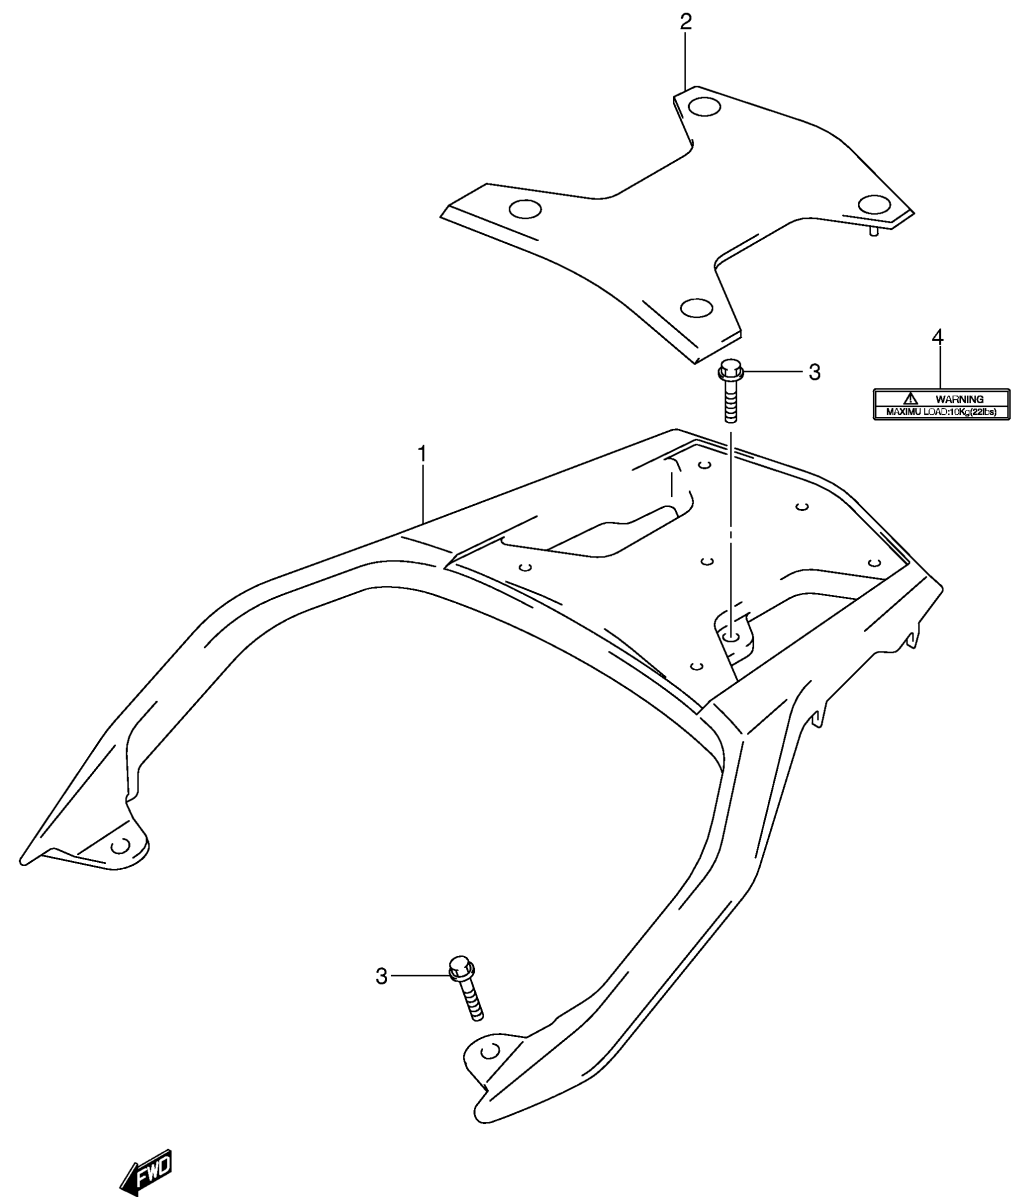

Ref No	Part No	Description
1	46311-06G00-YD8	Carrier, Sport (silver)
2	46321-06G00	Mat, Carrier
3	09103-08391	Bolt
4	68391-06G00	Label, Carrier

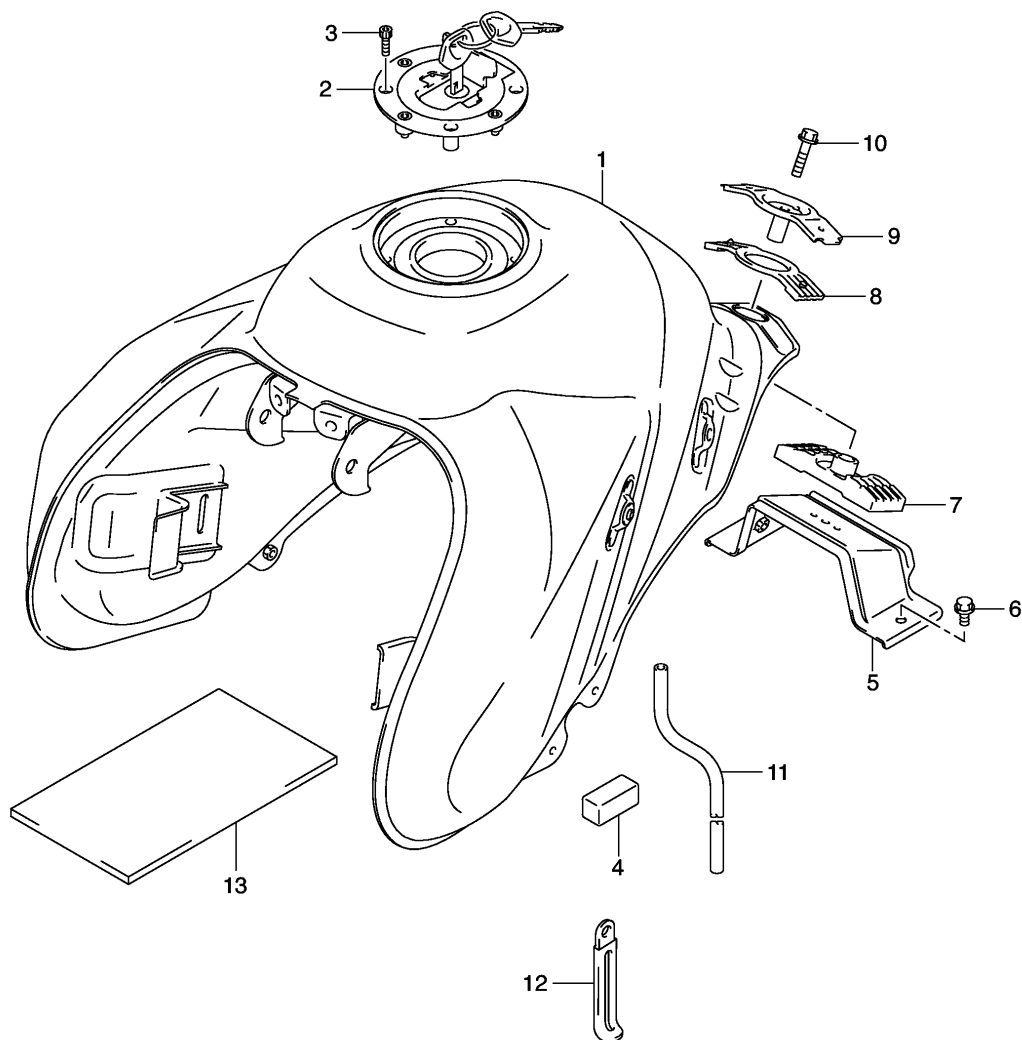


Ref No	Part No	Description
1	44110-06G10-YD8	Tank, Fuel (silver)
1	44110-06G10-YBA	Tank, Fuel (blue)
1	44110-06G10-YAY	Tank, Fuel (black)
1	44110-06G00-YD8	Tank, Fuel (silver)
1	44110-06G00-YBA	Tank, Fuel (blue)
1	44110-06G00-YAY	Tank, Fuel (black)
1	44110-06G00-YAY	Tank, Fuel (black)
1	44110-06G00-YHG	Tank, Fuel (gray)
1	44110-06G00-YHL	Tank, Fuel (red)
2	44201-33820	Cap Set, Fuel Tank
3	09106-05017	Bolt
4	44541-06G00	Cushion, Side
5	44550-06G01	Bracket, Rear Lower
6	01550-08163	Bolt
7	44545-06G00	Cushion, Lower
8	44542-06G00	Cushion, Upper
9	44530-06G00	Bracket, Upper
10	01550-08353	Bolt
11	44423-06G00	Hose, Water Drain
12	09404-06429	Clamp
13	44194-06G00	Shield, Tank Center

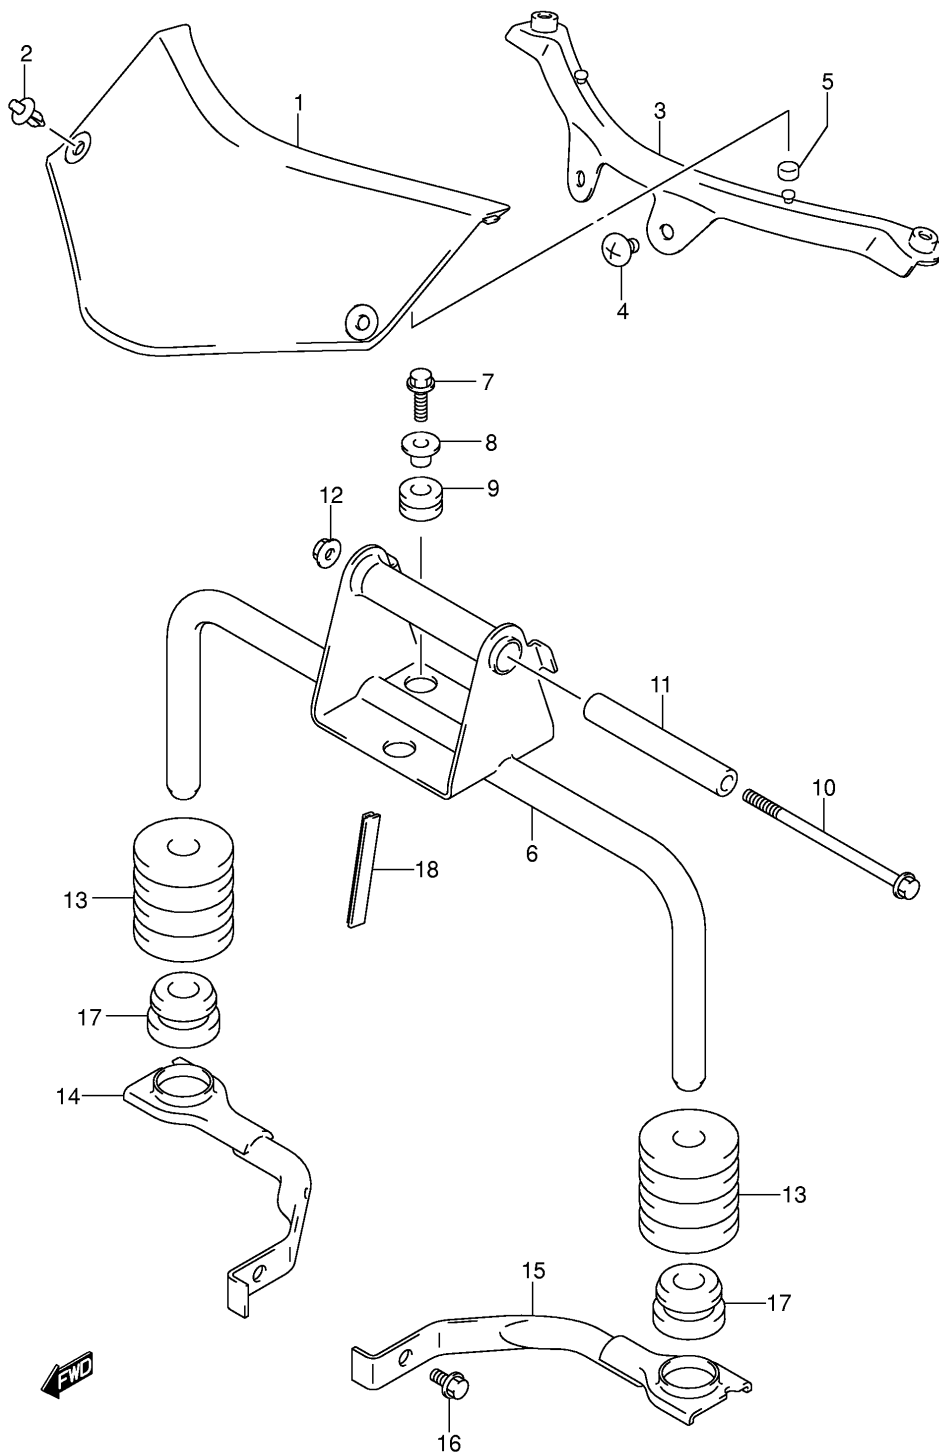


Ref No	Part No	Description
1	44171-06G10-291	Cover, Front (black)
2	09409-06314-5PK	Clip (black)
3	44160-06G00	Bracket, Cover
4	02142-06123	Screw
5	44164-06G00	Cushion, Cover
6	44520-06G00	Bracket, Front
7	01550-06203	Bolt
8	09169-06062	Spacer
9	09320-08001	Cushion
10	01550-06953	Bolt
11	44561-35F00	Spacer
12	08319-31063	Nut
13	44511-06G00	Cushion
14	44560-06G00	Bracket, Side Rh
15	44570-06G00	Bracket, Side Lh
16	01550-06123	Bolt
17	09320-12054	Cushion
18	68241-04X50-300	Molding, Cover

Ref No	Part No	Description
1	47111-06G00-291	Cover, Frame Rh (black)
2	47211-06G00-291	Cover, Frame Lh (black)
3	09321-10002	Cushion, Center
4	09139-06107	Screw, Front
5	09320-08018	Cushion, Upper
6	09320-08028	Cushion, Lower

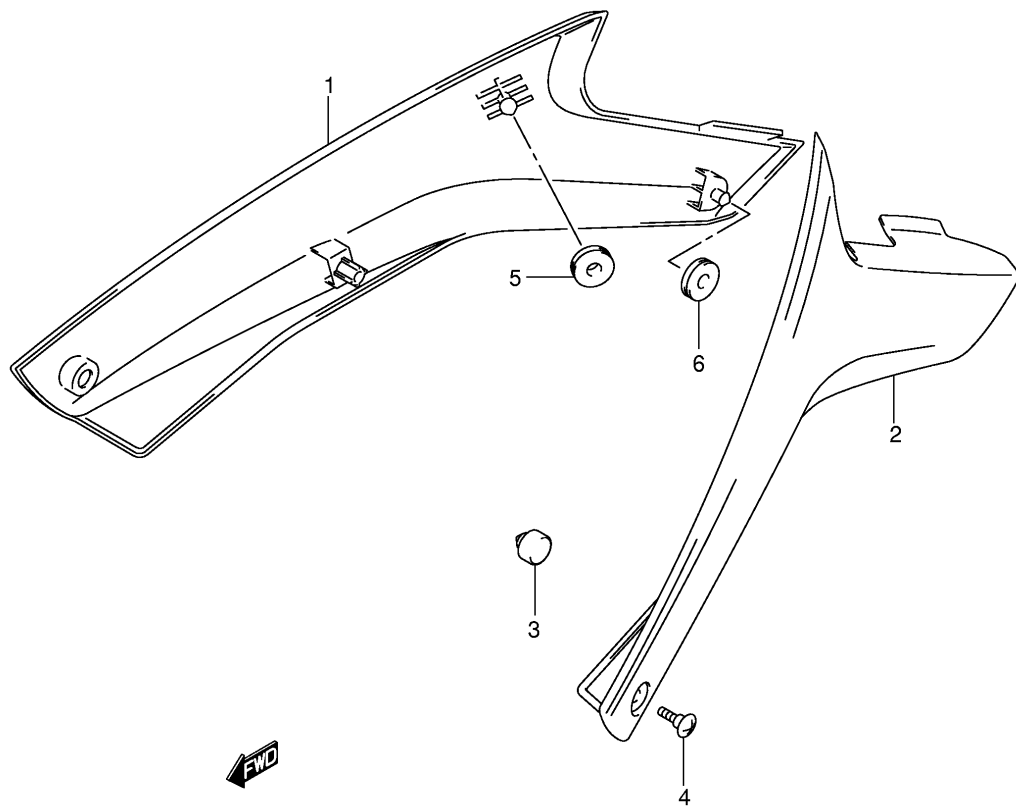

Ref No	Part No	Description
1	53111-06G00-YAY	Fender, Front (black)
2	09139-06121	Bolt, Front
3	53122-06G00	Nut
4	01547-06453	Bolt, Rh
5	01547-06303	Bolt, Lh

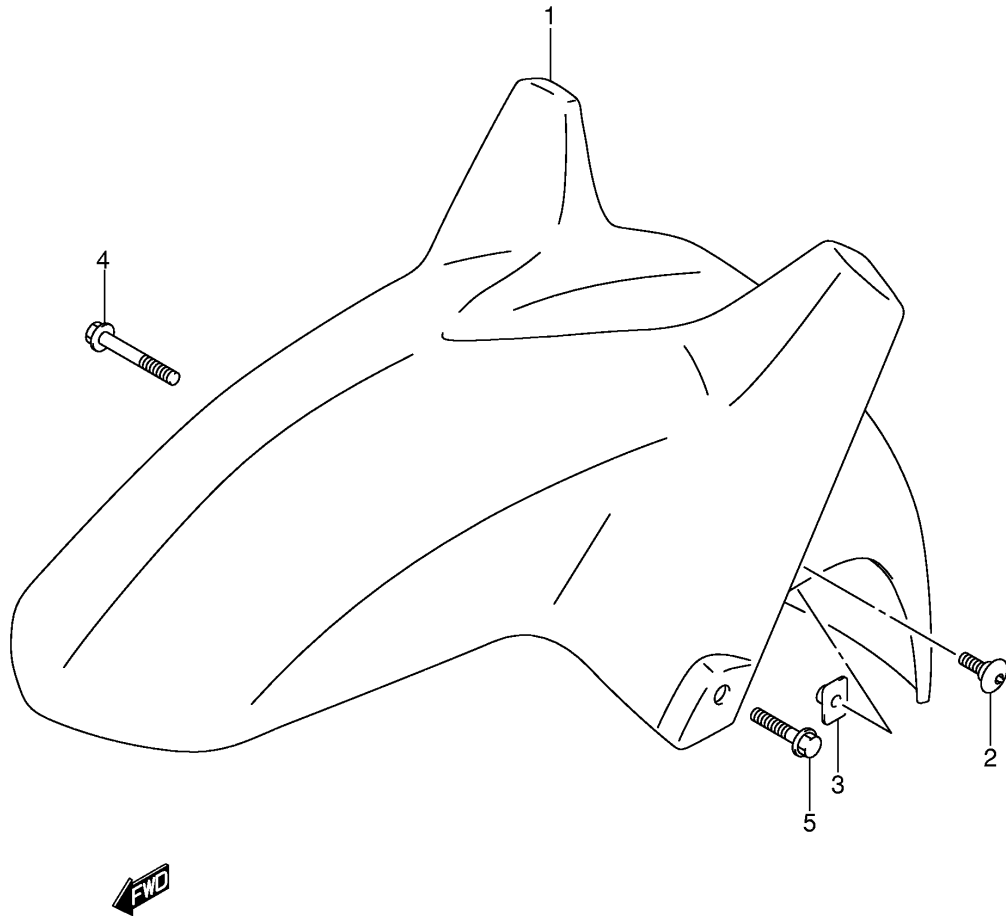



DL1000K2 (DL1000K2 E2)

FIG43


HANDLEBAR (MODEL K2/K3)

Ref No	Part No	Description
2	56200-06841	Balancer Set, Handlebar
3	09127-06021	• . Screw
4	56272-06G00	• . Expander, Outer
5	56276-17D00	• . Spacer
6	09160-06130	• . Washer
7	56272-42F00	• . Expander, Inner
8	09159-06024	• . Nut
9	56500-06G00	Mirror Assy, Rear View Rh
10	56600-06G00	Mirror Assy, Rear View Lh
12	58621-06G00	Guide, Cable
13	02162-06123	Bolt

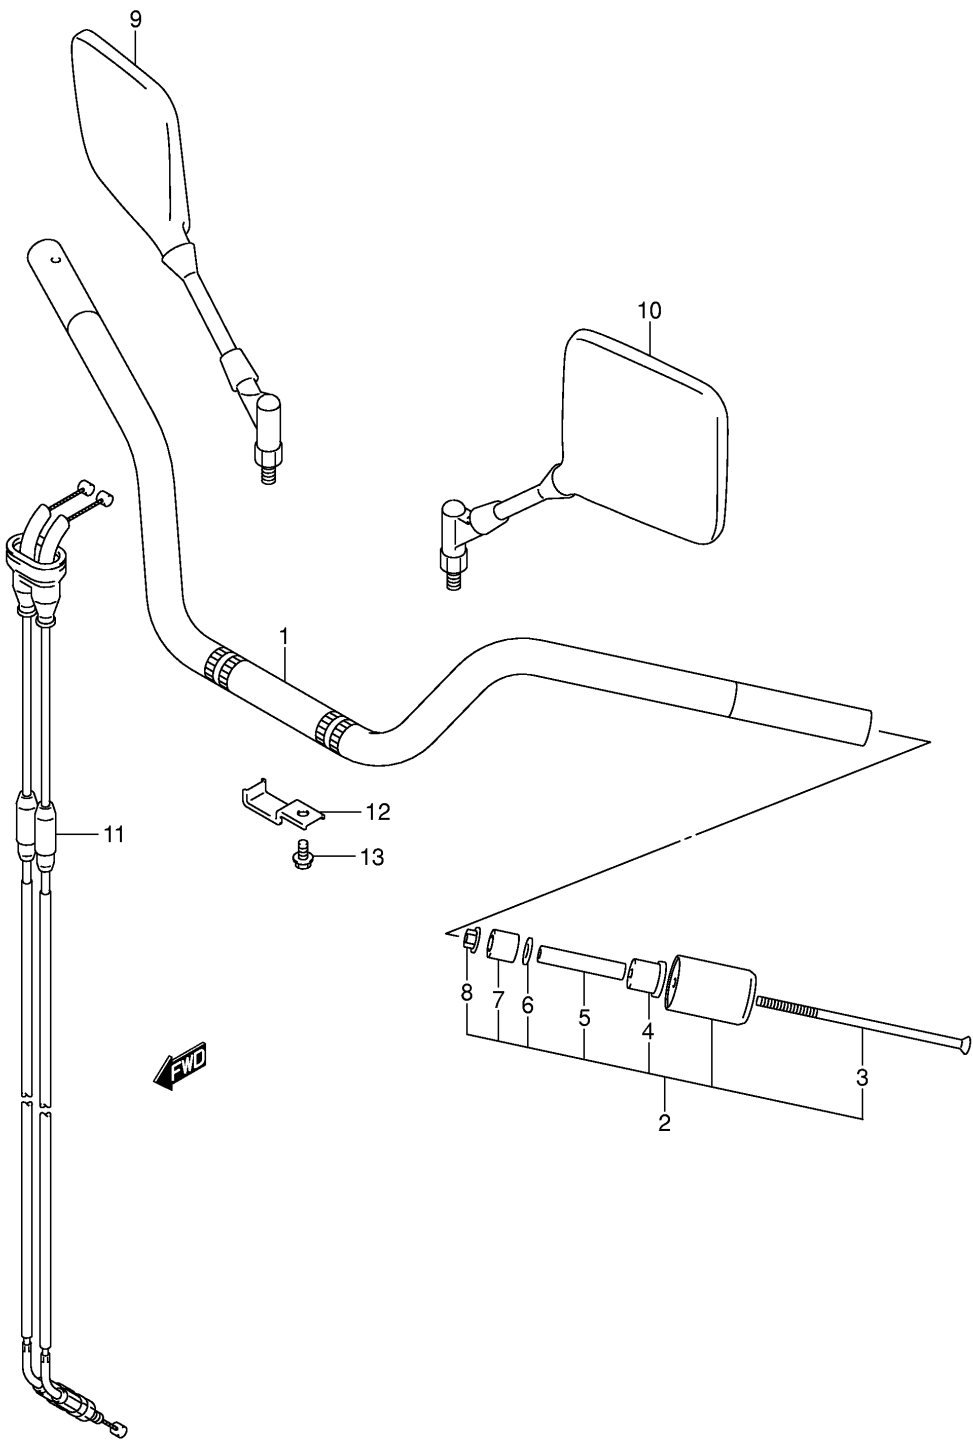

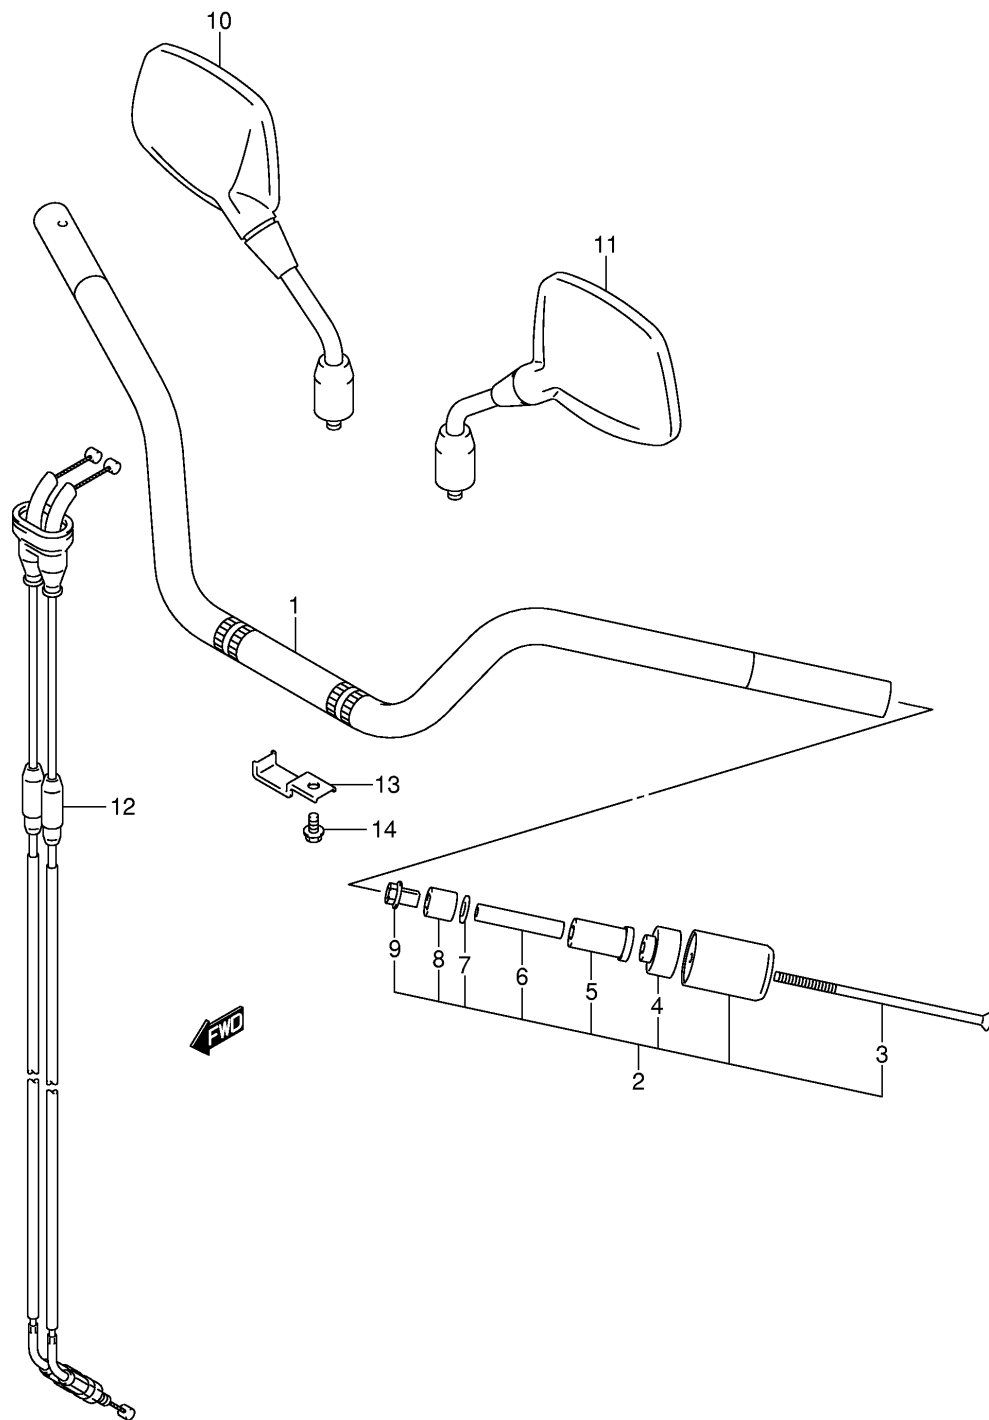



Ref No	Part No	Description
1	56111-06G00	Handlebar
2	56200-06860	Balancer Set, Handlebar
3	09127-06023	• . Screw
4	57346-14G00	• . Spacer
5	56272-06G00	• . Expander, Outer
6	56276-17D00	• . Spacer
7	09160-06130	• . Washer
8	56272-10G00	• . Expander, Inner
9	56273-10G00	• . Nut
10	56500-04F20	Mirror Assy, Rear View Rh
11	56600-04F20	Mirror Assy, Rear View Lh
12	58300-06G10	Cable Assy, Throttle
13	58621-06G00	Guide, Cable
14	02162-06123	Bolt

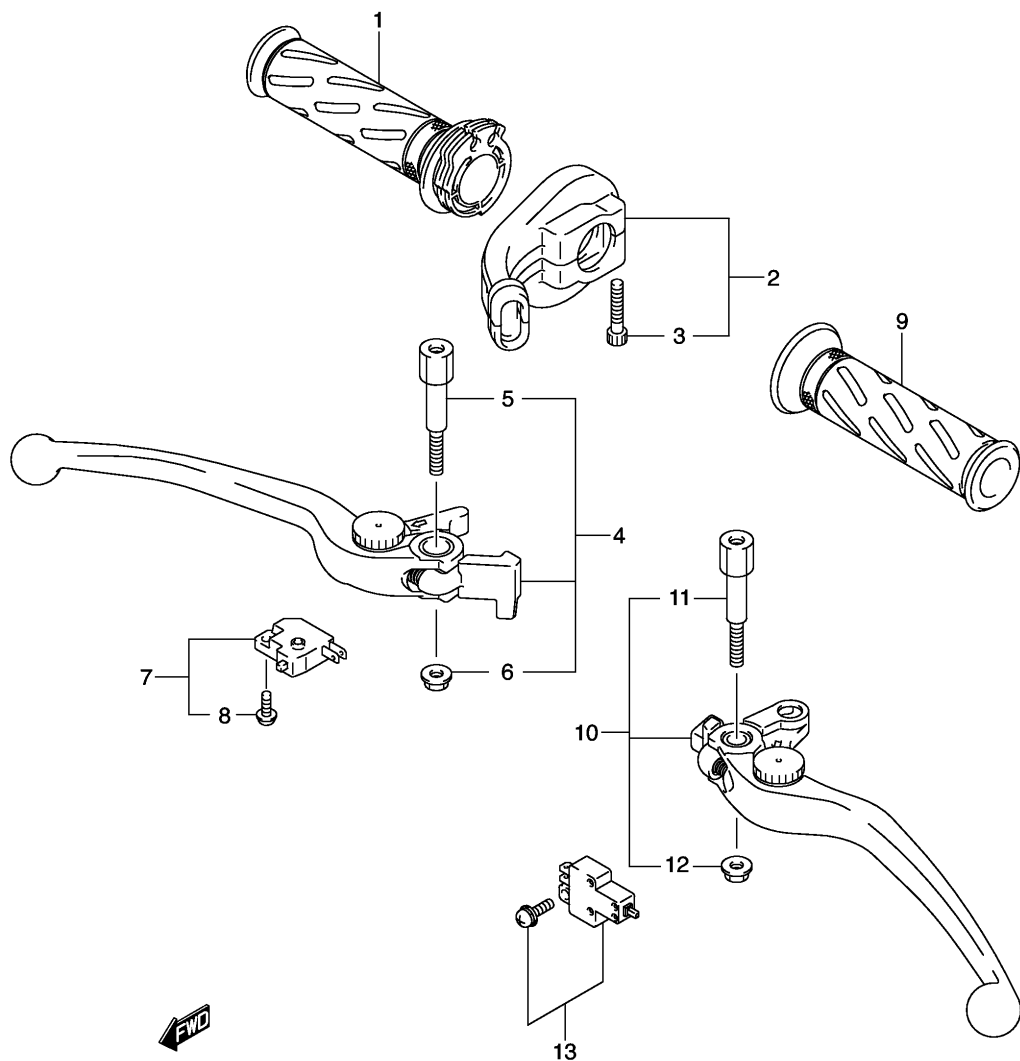

Ref No	Part No	Description
1	57110-45D02	Grip, Throttle
2	57100-42F00	Case Assy, Throttle
3	07130-05253	• Bolt
4	57300-06G00	Lever Assy, Brake
5	57431-06G00	• Bolt
6	08316-10063	• Nut
7	57460-17C11	Switch Assy, Stop
8	57465-17C00	• Screw
9	57211-22D01	Grip Lh
10	57500-06G10	Lever Assy, Clutch
11	57431-06G10	• Bolt
12	08316-10063	• Nut
13	57560-02FA0	Switch Assy, Clutch


Ref No	Part No	Description
1	57341-27G00-291	Cover, Knuckle Rh (black)
2	57541-06G10-291	Cover, Knuckle Lh (black)
3	09125-06118	Screw
4	09160-06130	Washer
5	08319-21068	Nut

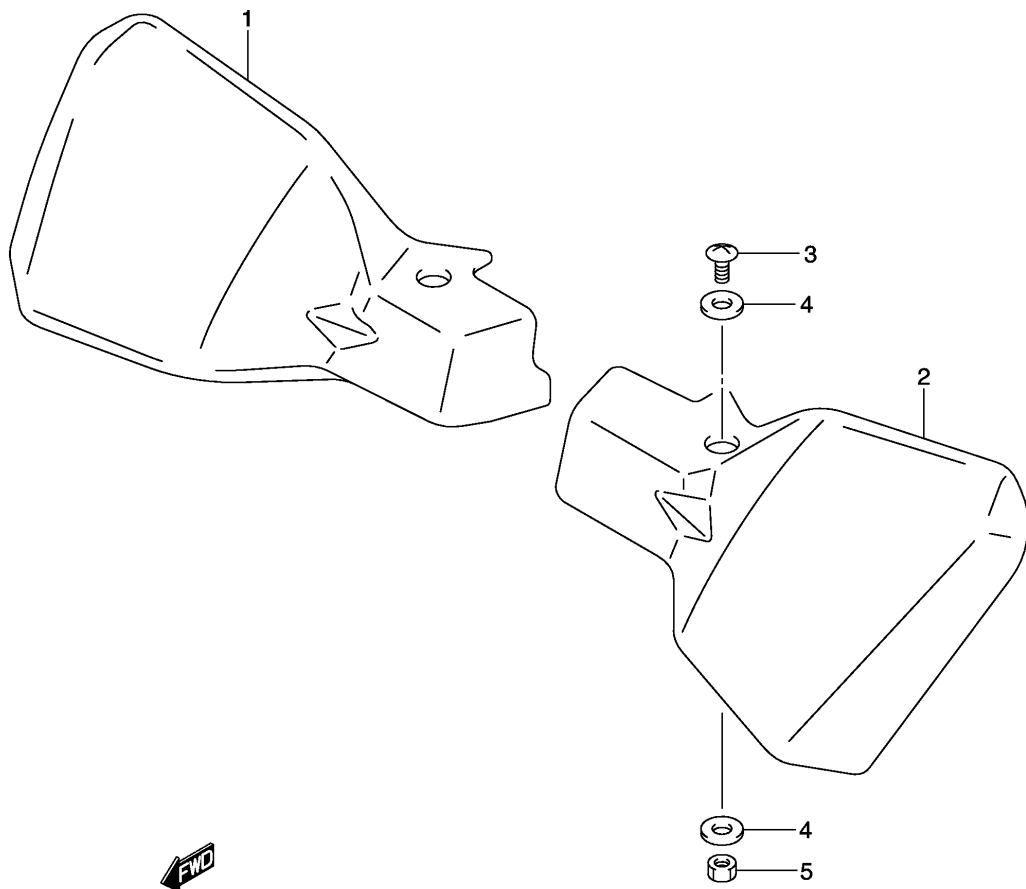

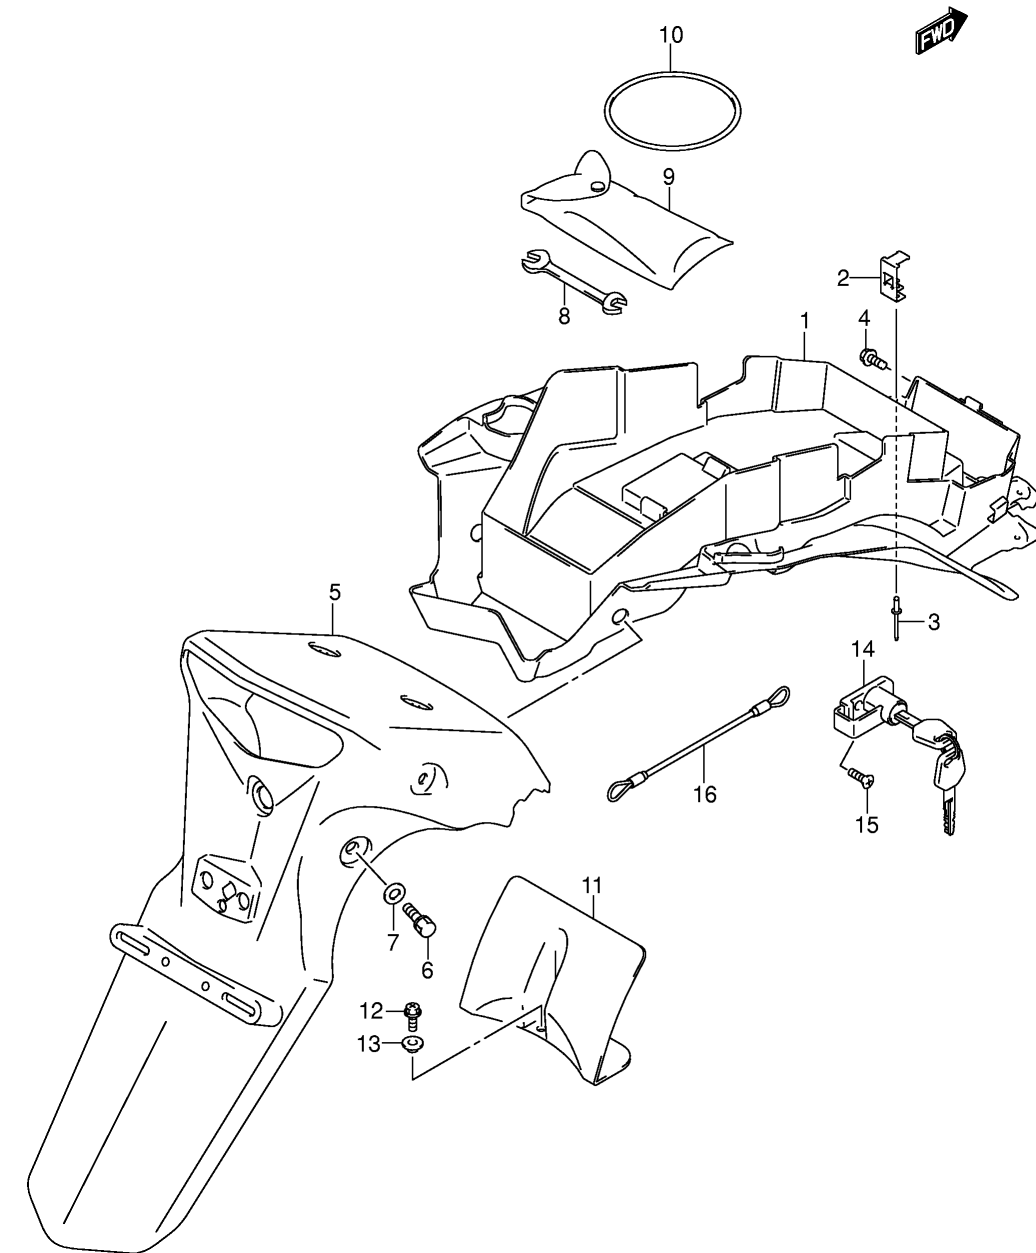


Ref No	Part No	Description
1	63111-06G00	Fender, Rear Front
2	47412-06G00	Bracket, Fuel Sensor
3	09229-04020	Rivet
4	09116-06098	Bolt
5	63112-06G00-291	Fender, Rear (black)
6	01547-06123	Bolt
7	09160-06109	Washer
8	09813-00027	Spanner, 8x10
9	09800-21035	Tool Assy
10	09280-61002	Band, Tool
11	63421-19F00	Mud Guard, Rear Fender Lower
12	02162-06163	Bolt
13	09169-06071	Washer
14	95700-42810	Lock Set, Helmet
15	02122-06203	Screw
16	95740-06G00	Cable, Helmet Lock


FIG.47

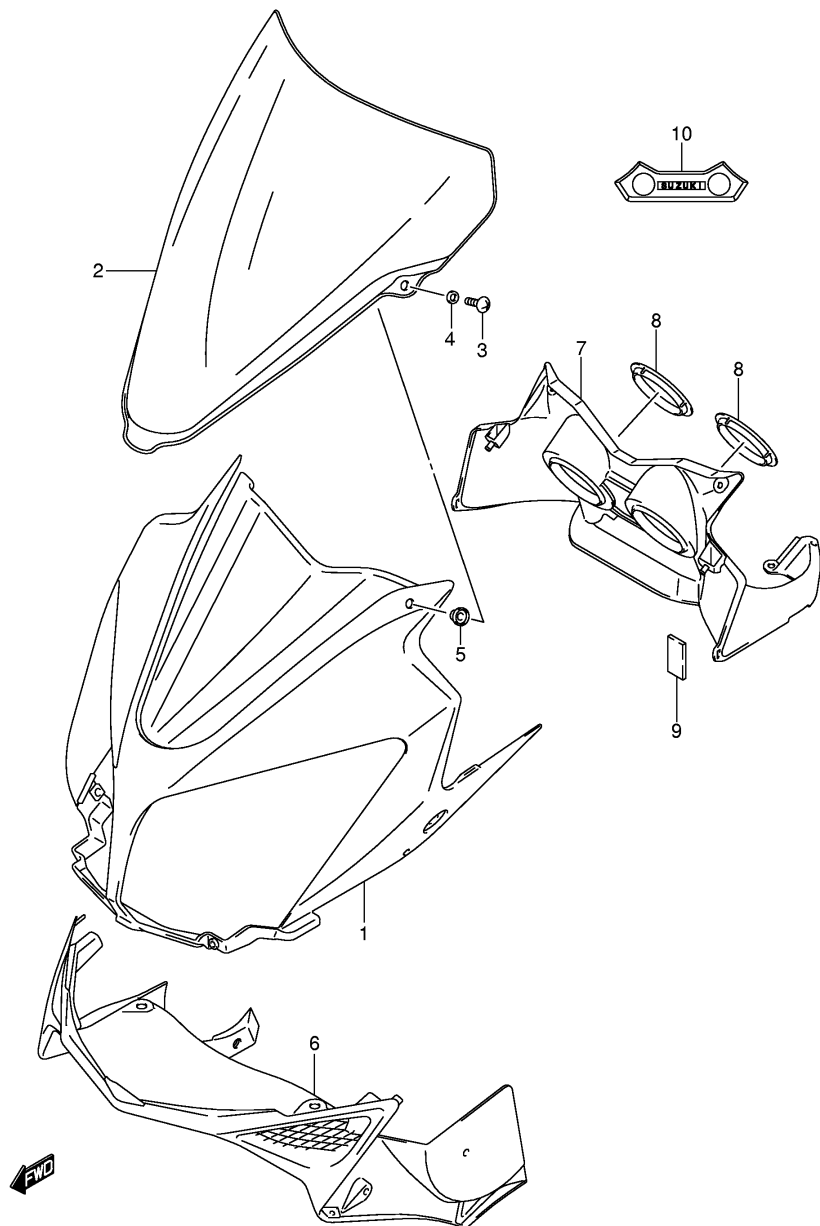

Ref No	Part No	Description
1	94410-06G00-33J	Body, Cowling (black)
1	94410-06G00-Y7L	Body, Cowling (black)
2	94610-06G00	Windscreen
3	09139-05075	Screw
4	08322-01053	Washer
5	94619-36A00	Nut
6	94461-06G00-YZ5	Cover, Cowl Inner (black)
9	44885-38A00	• . Cushion


Ref No	Part No	Description
1	94410-27G00-YAY	Body, Cowling (black)
2	94610-27G00-CT5	Windscreen
3	68270-27G00-CT5	• . Tape
4	09139-05075	Screw, Lower
5	08322-01053	Washer
6	94619-36A00	Nut
7	94461-06G00-291	Cover, Cowl Inner (black)
8	02142-05203	Screw, Upper
9	09161-05017	Washer
10	09159-05019	Nut
11	94641-27G00-291	Cover, Windscreen Rh (black)
12	94642-27G00-291	Cover, Windscreen Lh (black)
13	09132-05053	Screw
14	94630-27G00-291	Panel, Meter (black)
15	44885-38A00	• . Cushion

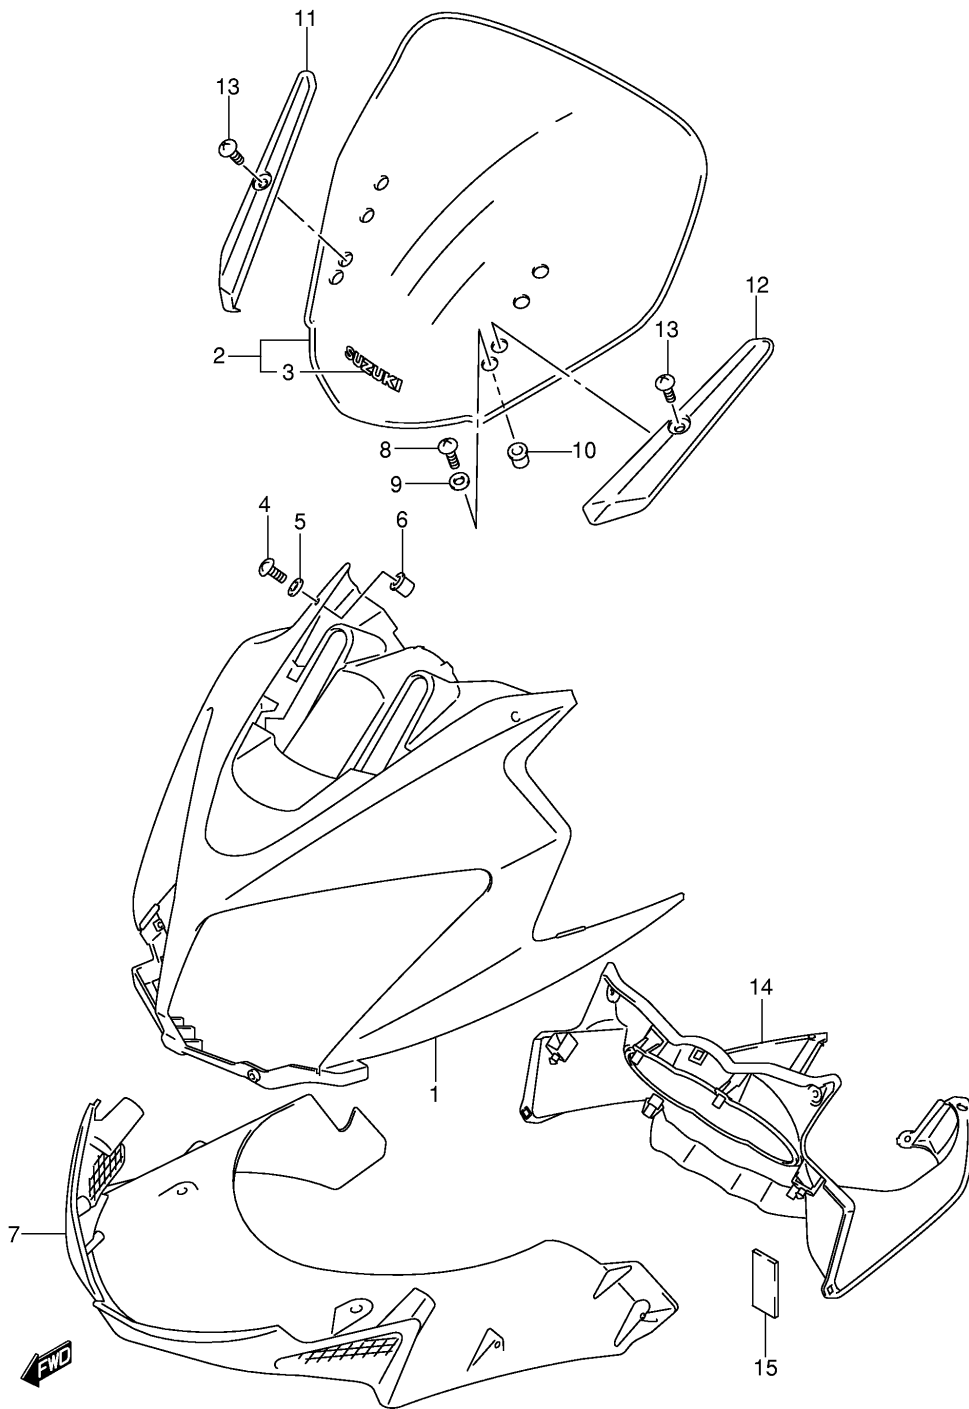

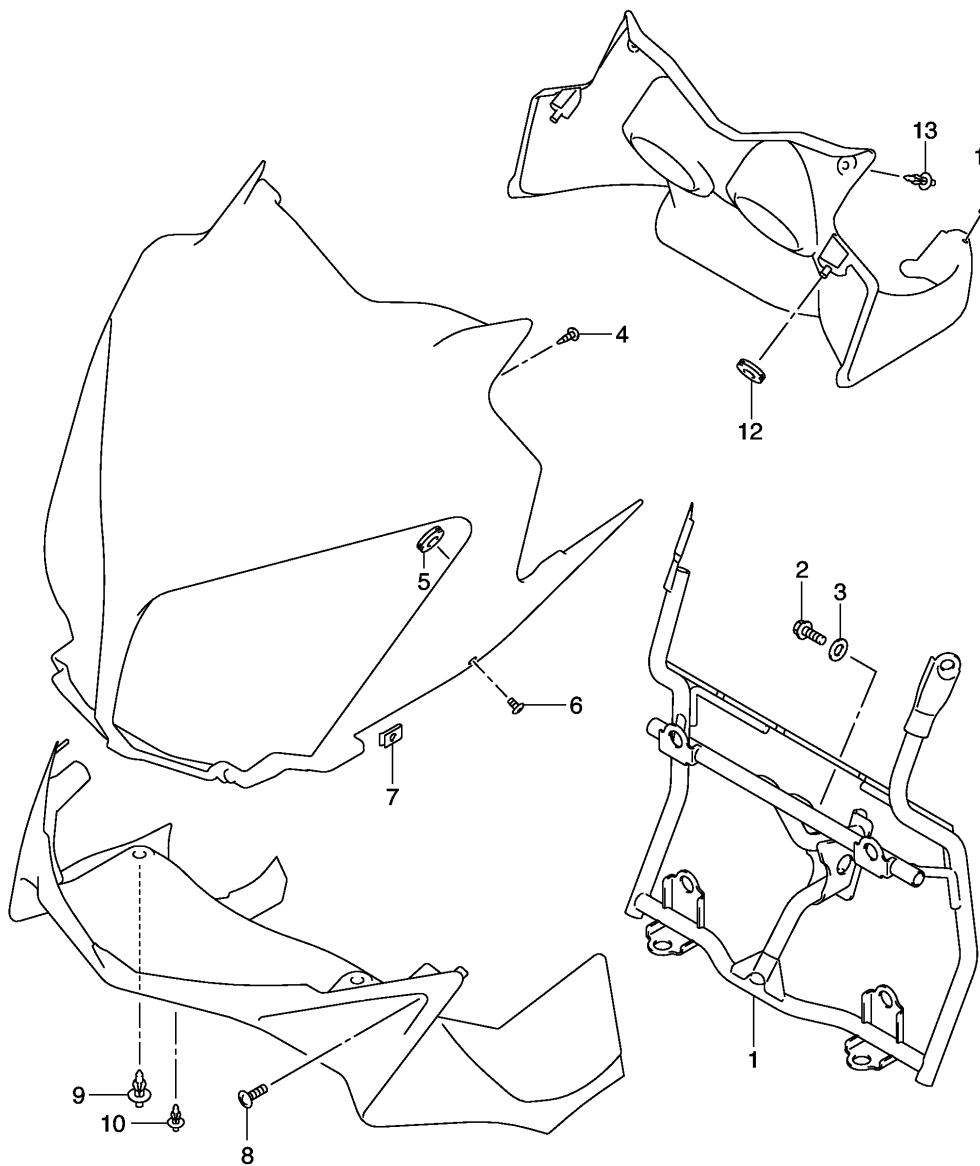


Ref No	Part No	Description
1	94510-06G00	Brace, Cowling
2	09103-08505	Bolt
3	09164-08020	Washer
4	09132-05041	Screw, Upper
5	09320-08028	Cushion
6	09139-05064	Screw, Side
7	09148-05038	Nut, Side
8	03242-05103	Screw, Front
9	09409-07333	Clip, Inner Cover Upper
10	09409-06314-5PK	Clip, Side (black)
11	09139-06122	Screw, Meter Panel Rear
12	09320-06016	Cushion, Meter Panel Rear
13	09409-06314-5PK	Clip, Meter Panel (black)




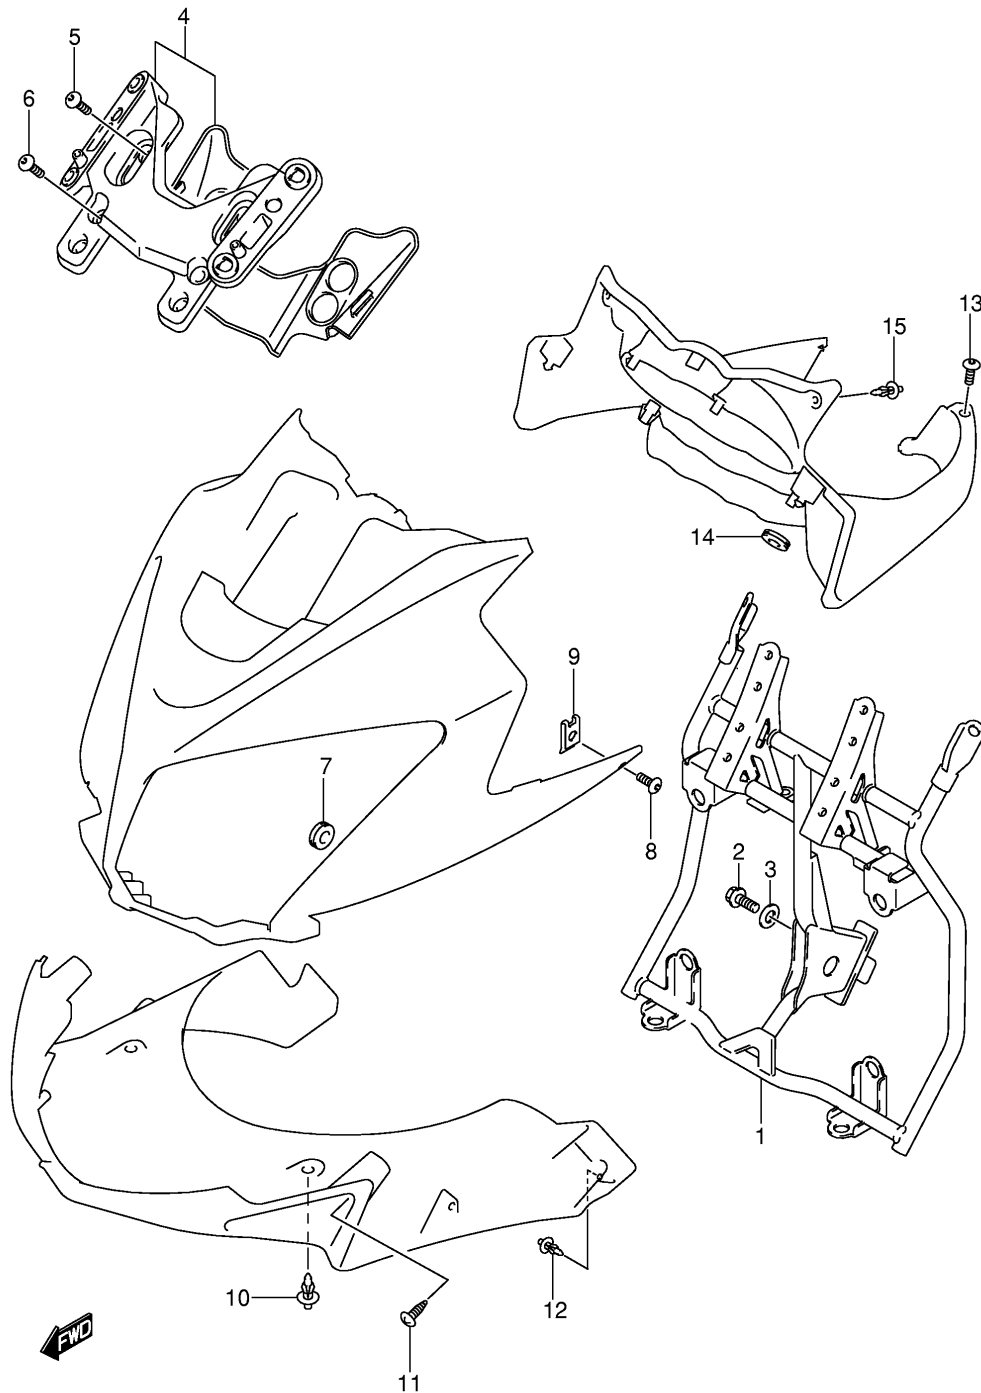


Ref No	Part No	Description
1	94510-27G00	Brace, Cowling
2	09103-08505	Bolt
3	09164-08020	Washer
4	94600-27G00	Brace, Windscreen
5	09139-06126	Screw, Upper
6	09139-06120	Screw, Lower
7	09320-08028	Cushion
8	09139-05064	Screw, Side
9	09148-05038	Nut, Side
10	09409-07333	Clip, Inner Cover Upper
11	03242-05163	Screw, Inner Cover
12	09409-06314-5PK	Clip, Side (black)
13	09139-06122	Screw, Meter Panel Rear Side
14	09320-06016	Cushion, Meter Panel Rear
15	09409-06314-5PK	Clip, Meter Panel (black)

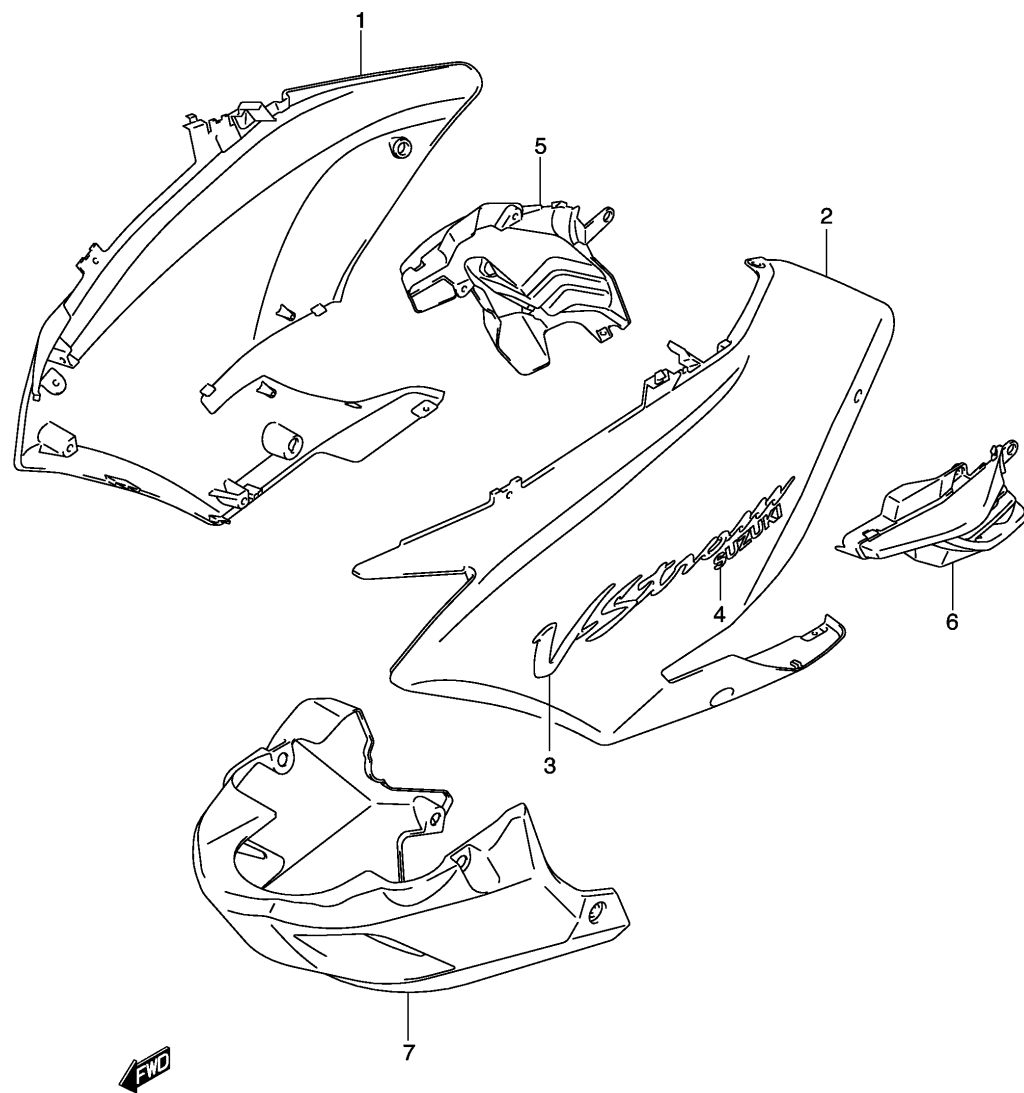

Ref No	Part No	Description
1	94402-06G00-Y7H	Cowl Assy, Side Rh (blue)
1	94402-06G00-YU8	Cowl Assy, Side Rh (gray)
1	94402-06G10-YU9	Cowl Assy, Side Rh (yellow)
2	94403-06G00-Y7H	Cowl Assy, Side Lh (blue)
2	94403-06G00-YU8	Cowl Assy, Side Lh (gray)
2	94403-06G10-YU9	Cowl Assy, Side Lh (yellow)
3	68681-06G00-1ZY	. Emblem (gray)
3	68681-06G00-YD8	. Emblem (silver)
3	68681-06G00-17U	. Emblem (gray)
4	68166-31300-17U	. Emblem, "suzuki" (gray)
4	68166-31300-1ZY	. Emblem, "suzuki" (gray)
5	94440-06G00-YZ5	Cover, Side Rh (black)
6	94450-06G00-YZ5	Cover, Side Rh (black)
7	94471-06G00-YZ5	Cowling, Under (black)

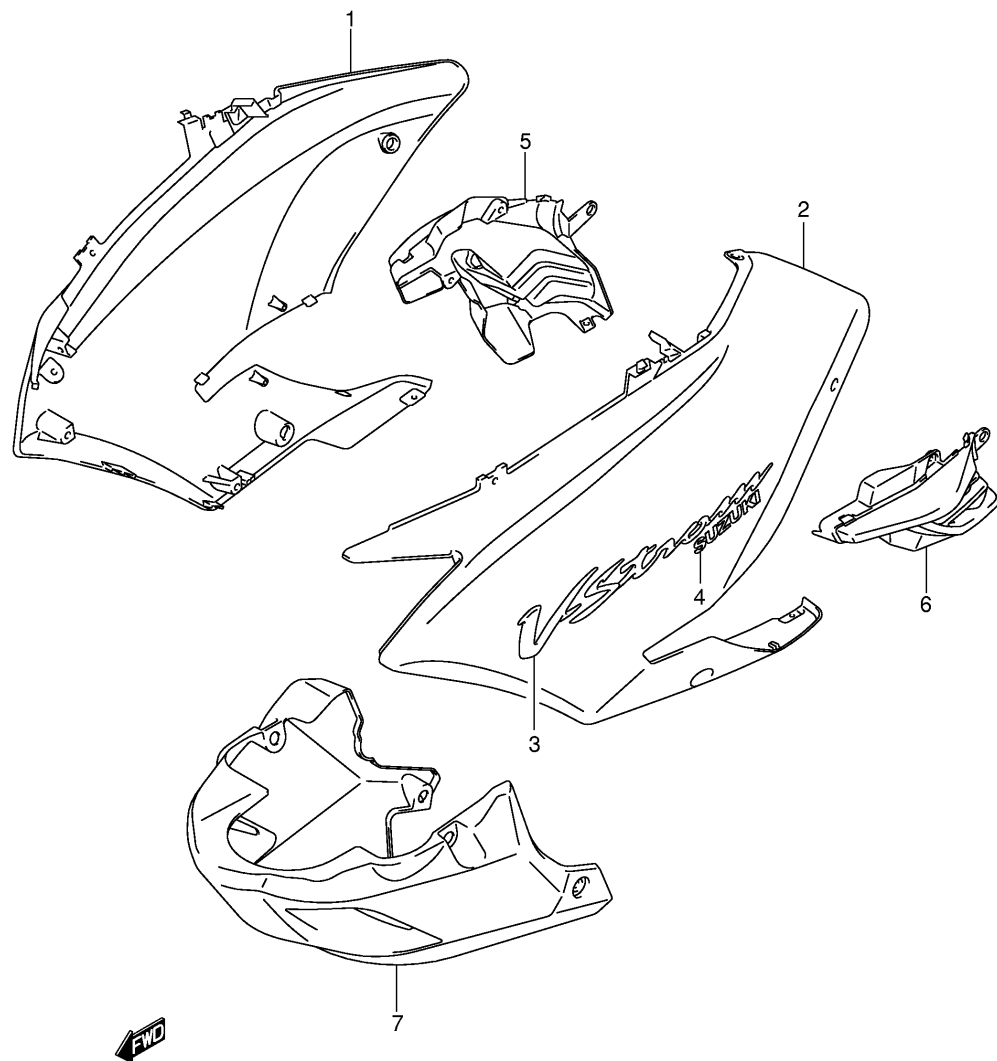


Ref No	Part No	Description
1	94402-06G10-YD8	Cowl Assy, Side Rh (silver)
1	94402-06G10-ZJX	Cowl Assy, Side Rh (yellow)
1	94402-06G00-YBA	Cowl Assy, Side Rh (blue)
2	94403-06G10-YD8	Cowl Assy, Side Lh (silver)
2	94403-06G10-ZJX	Cowl Assy, Side Lh (yellow)
2	94403-06G00-YBA	Cowl Assy, Side Lh (blue)
3	68681-06G00-Y7H	. Emblem (blue)
3	68681-06G00-17U	. Emblem (gray)
3	68681-06G00-YD8	. Emblem (silver)
4	68166-31300-YU8	. Emblem, "suzuki" (gray)
4	68166-31300-Y7H	. Emblem, "suzuki" (blue)
4	68166-31300-1ZY	. Emblem, "suzuki" (gray)
5	94440-06G00-YZ5	Cover, Side Rh (black)
6	94450-06G00-YZ5	Cover, Side Rh (black)
7	94471-06G00-YZ5	Cowling, Under (black)

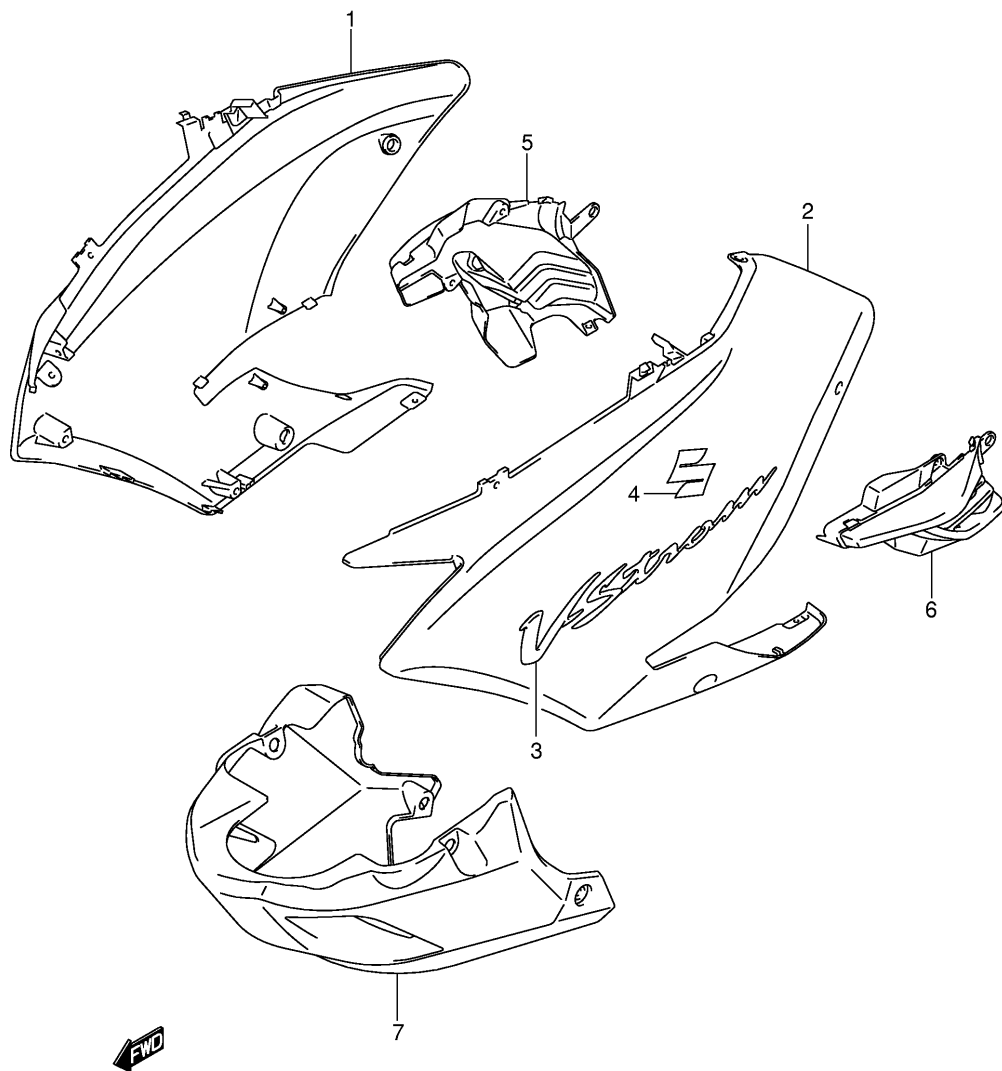


Ref No	Part No	Description
1	94402-06G50-YD8	Cowl Assy, Side Rh (silver)
1	94402-06G40-YAY	Cowl Assy, Side Rh (black)
1	94402-06G40-YBA	Cowl Assy, Side Rh (blue)
2	94403-06G50-YD8	Cowl Assy, Side Lh (silver)
2	94403-06G40-YAY	Cowl Assy, Side Lh (black)
2	94403-06G40-YBA	Cowl Assy, Side Lh (blue)
3	68681-27G00-HT8	• . Emblem
3	68681-27G00-AMV	• . Emblem
3	68681-27G00-BKS	• . Emblem
4	68111-18G20	• . Emblem
5	94440-06G00-291	Cover, Side Rh (black)
6	94450-06G00-291	Cover, Side Rh (black)
7	94471-06GA0-291	Cowling, Under (black)

FIG.49C

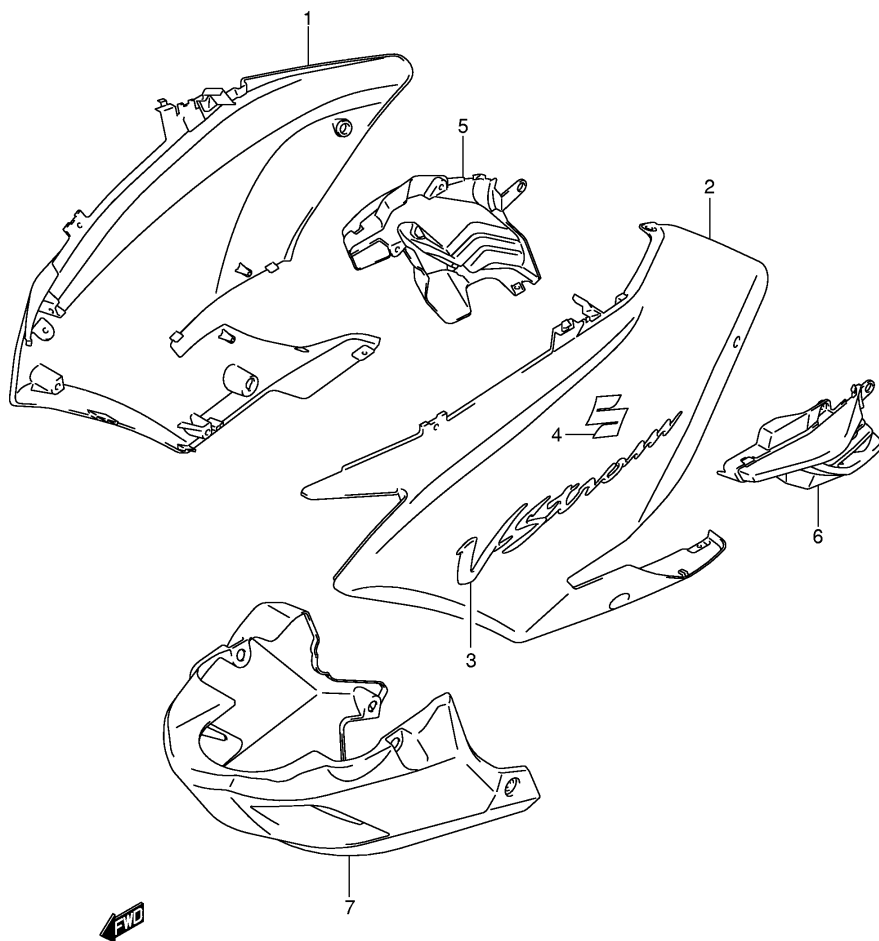


Ref No	Part No	Description
1	94402-06G40-YAY	Cowl Assy, Side Rh (black)
1	94402-06G40-YHG	Cowl Assy, Side Rh (gray)
1	94402-06G40-YHL	Cowl Assy, Side Rh (red)
2	94403-06G40-4CX	Cowl Assy, Side Lh (black)
2	94403-06G40-YHG	Cowl Assy, Side Lh (gray)
2	94403-06G40-YHL	Cowl Assy, Side Lh (red)
3	68681-27G00-BPK	• . Emblem
3	68681-27G00-CUK	• . Emblem
3	68681-27G00-CUJ	• . Emblem
4	68111-18G20	• . Emblem, "s"
5	94440-06G00-291	Cover, Side Rh (black)
6	94450-06G00-291	Cover, Side Rh (black)
7	94471-06GA0-291	Cowling, Under (black)

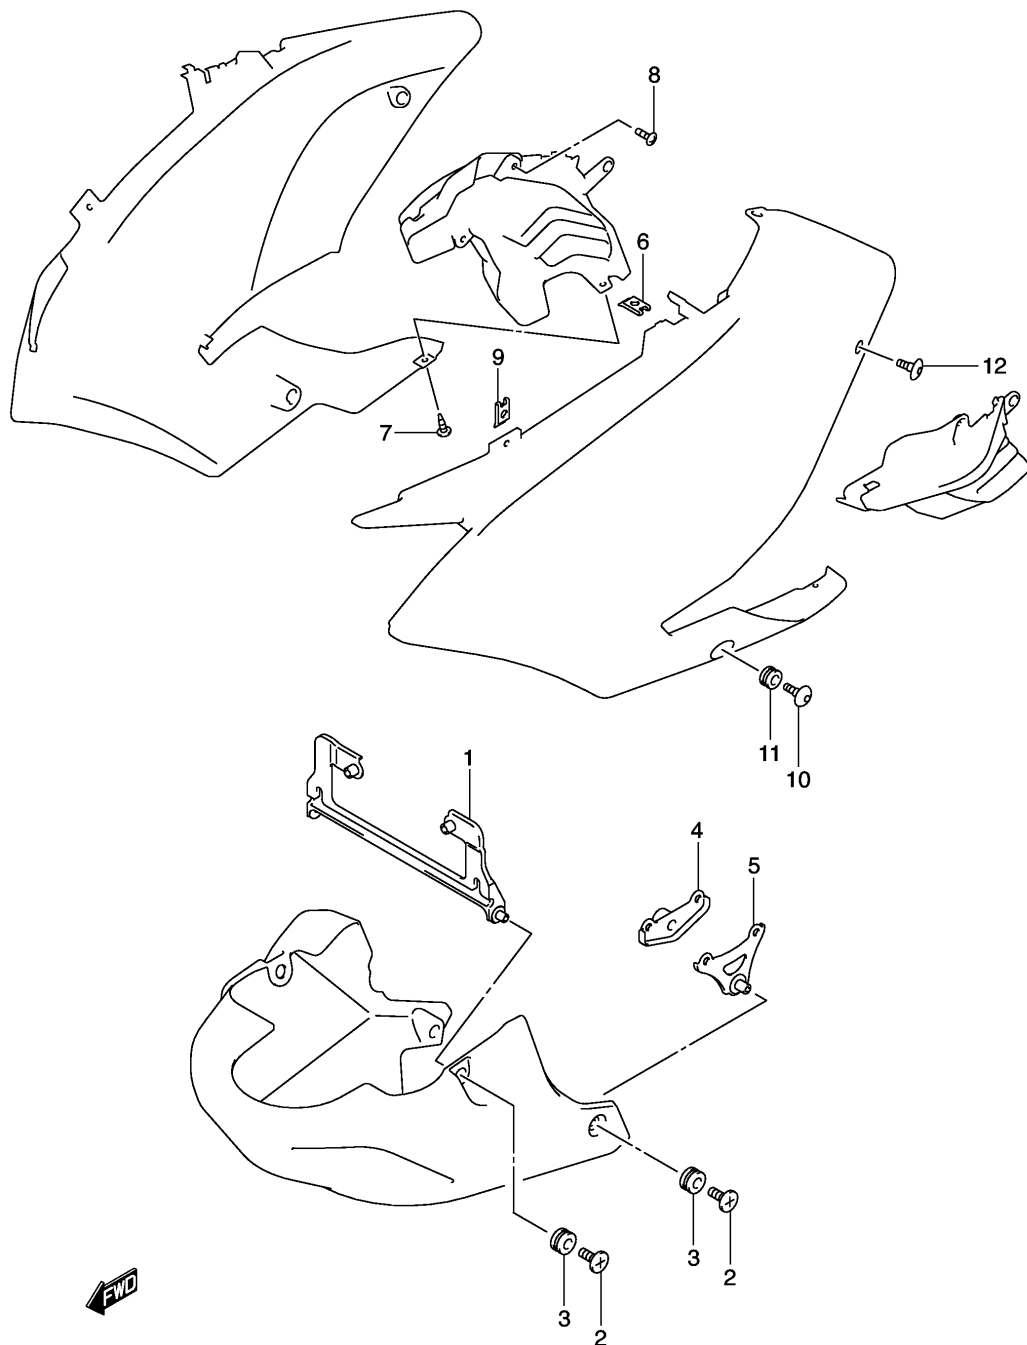


Ref No	Part No	Description
1	94520-06G00	Bracket, Under Front
2	11178-12F10	Screw
3	09320-09016	Cushion
4	94530-06G00	Bracket, Rh
5	94540-06G00	Bracket, Lh
6	09148-05038	Nut
7	03242-05103	Screw
8	02142-05103	Screw, Center
9	94484-24F00	Nut, Upper
10	09139-06087	Screw, Side
11	09320-09016	Cushion
12	09139-06122	Screw, Side Rear


Ref No		Part No	Description
1	1	68319-29F00	Label, Warning (english)
1	1	68319-29F20	Label, Warring (german)
1	1	68319-29F30	Label, Warring (french)
1	1	68319-29F40	Label, Warring (italian)
1	1	68319-29F50	Label, Warring (spanish)
1	1	68319-29F70	Label, Warring (dutch)
1	1	68319-29F80	Label, Warring (portuguese)
1	1	68319-29F90	Label, Warring (swedish)
1	1	68319-29FA0	Label, Warring (finnish)
1	1	68319-29FB0	Label, Warring (norwegian)
1	1	68319-29FC0	Label, Warring (danish)
1	1	68319-30F40	Label, Warring (italian)
1	1	68319-30F90	Label, Warring (swedish)
2	2	68922-29F00	Label, Screen (english)
2	2	68922-29F20	Label, Screen (german)
2	2	68922-29F30	Label, Screen (french)
2	2	68922-29F40	Label, Screen (italian)
2	2	68922-29F50	Label, Screen (spanish)
2	2	68922-29F70	Label, Screen (dutch)
2	2	68922-29F80	Label, Screen (portuguese)
2	2	68922-29F90	Label, Screen (swedish)
2	2	68922-29FA0	Label, Screen (finnish)
2	2	68922-29FB0	Label, Screen (norwegian)
2	2	68922-29FC0	Label, Screen (danish)
2	2	68922-14F40	Label, Screen (italian)
2	2	68922-14F90	Label, Screen (swedish)
3	3	68332-06G00	Label, Tire Information
4	4	68623-17D00	Label, Fuel
4	4	86932-73060	Label, Fuel
5	5	68613-24F00	Label, Steering
6	6	99011-06G53-01A	Manual, Owner's
6	6	99011-06G53-01F	Manual, Owner's
6	6	99011-06G53-01K	Manual, Owner's
6	6	99011-06G53-SDE	Manual, Owner's
6	6	99011-06G53-01W	Manual, Owner's
6	6	99011-06G53-057	Manual, Owner's

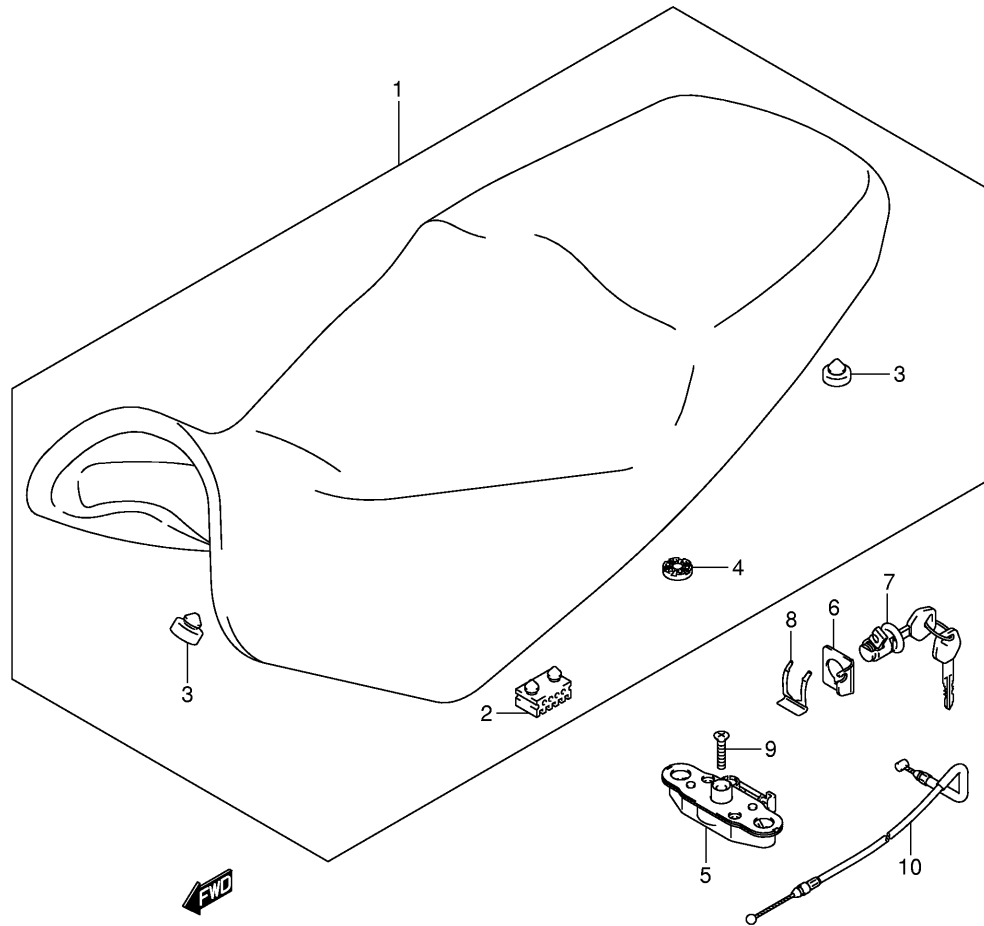


Ref No	Part No	Description
1	45100-06G10-H1N	Seat Assy
2	09321-08006	• . Cushion, Seat
3	09321-10012	• . Cushion
4	45213-13601	• . Cushion
5	45220-20A01	Bracket, Seat Support Rear
6	45288-14F00	Guide, Seat Lock Cable
7	95700-14810	Lock Set, Seat
8	45289-11F00	Plate, Seat Lock Assy
9	02122-06303	Screw
10	45280-06G00	Cable, Seat Lock

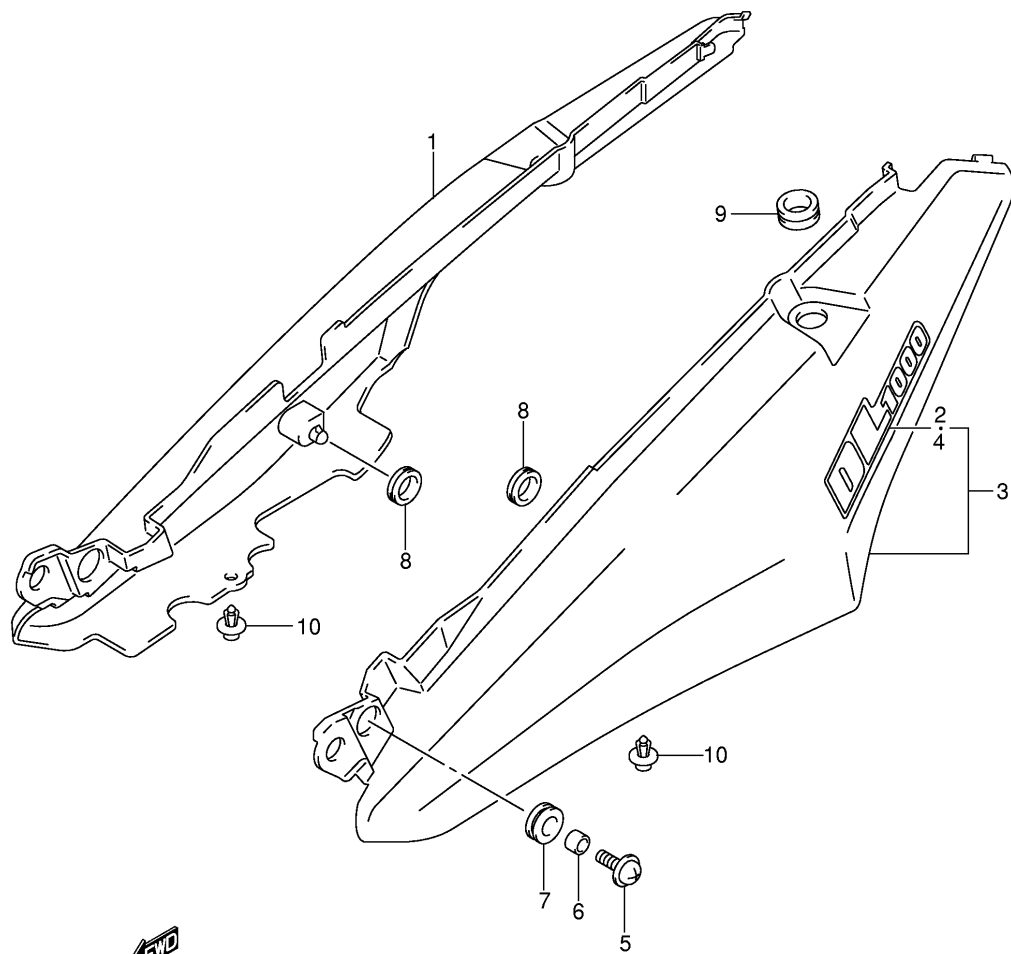


Ref No	Part No	Description
1	45501-06G00-YU8	Cover Assy, Seat Tail Rh (gray)
1	45501-06G00-YU9	Cover Assy, Seat Tail Rh (yellow)
1	45501-06G00-Y7H	Cover Assy, Seat Tail Rh (blue)
2	68161-06G00-JL9	. Emblem, Seat Tail Cover
2	68161-06G00-JM1	. Emblem, Seat Tail Cover
2	68161-06G00-JL8	. Emblem, Seat Tail Cover
3	45502-06G00-YU8	Cover Assy, Seat Tail Lh (gray)
3	45502-06G00-YU9	Cover Assy, Seat Tail Lh (yellow)
3	45502-06G00-Y7H	Cover Assy, Seat Tail Lh (blue)
4	68161-06G00-JL9	. Emblem, Seat Tail Cover
4	68161-06G00-JM1	. Emblem, Seat Tail Cover
4	68161-06G00-JL8	. Emblem, Seat Tail Cover
5	09136-06081	Screw, Front
6	09180-06300	Spacer, Front
7	09320-12068	Cushion, Front
8	09320-08018	Cushion, Center
9	09320-15008	Cushion, Rear
10	09409-06314-5PK	Clip (black)

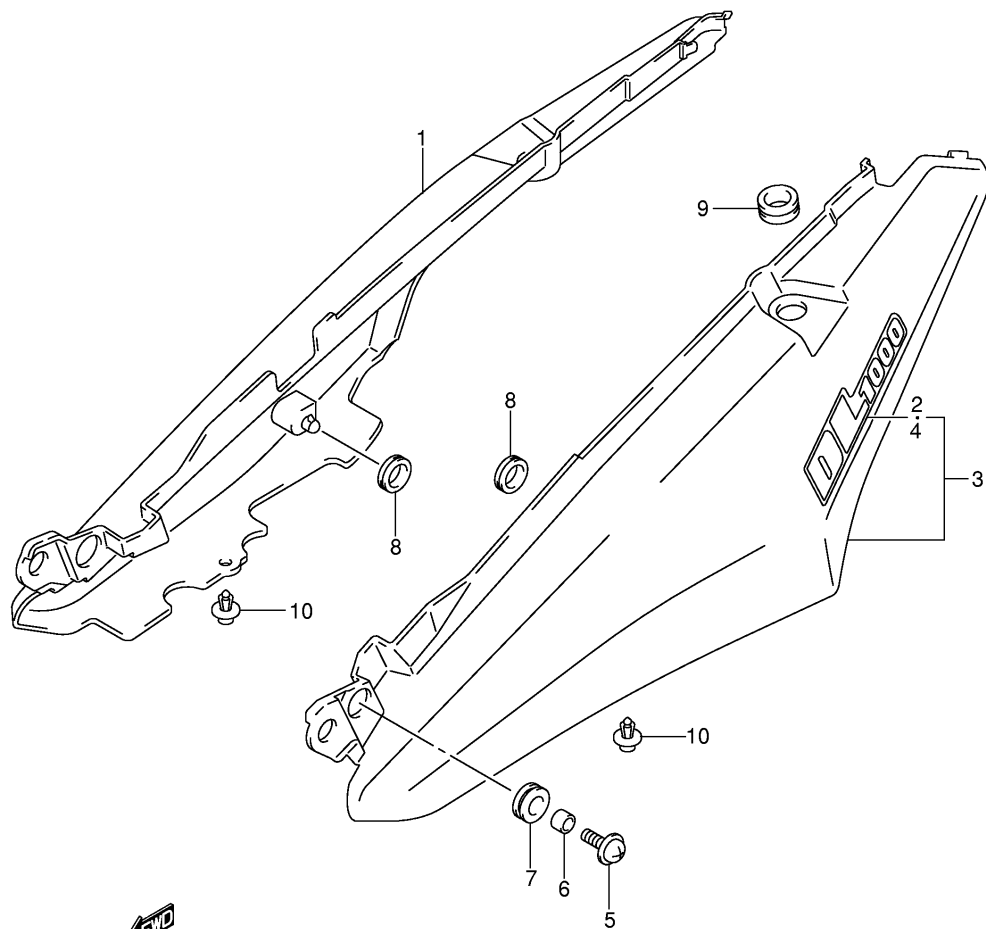

Ref No	Part No	Description
1	45501-06G00-YD8	Cover Assy, Seat Tail Rh (silver)
1	45501-06G00-ZJX	Cover Assy, Seat Tail Rh (yellow)
1	45501-06G00-YBA	Cover Assy, Seat Tail Rh (blue)
2	68161-06G00-LY4	• . Emblem, Seat Tail Cover
2	68161-06G00-LY5	• . Emblem, Seat Tail Cover
2	68161-06G00-LY6	• . Emblem, Seat Tail Cover
3	45502-06G00-YD8	Cover Assy, Seat Tail Lh (silver)
3	45502-06G00-ZJX	Cover Assy, Seat Tail Lh (yellow)
3	45502-06G00-YBA	Cover Assy, Seat Tail Lh (blue)
4	68161-06G00-LY4	• . Emblem, Seat Tail Cover
4	68161-06G00-LY5	• . Emblem, Seat Tail Cover
4	68161-06G00-LY6	• . Emblem, Seat Tail Cover
5	09136-06081	Screw, Front
6	09180-06300	Spacer, Front
7	09320-12068	Cushion, Front
8	09320-08018	Cushion, Center
9	09320-15008	Cushion, Rear
10	09409-06314-5PK	Clip (black)

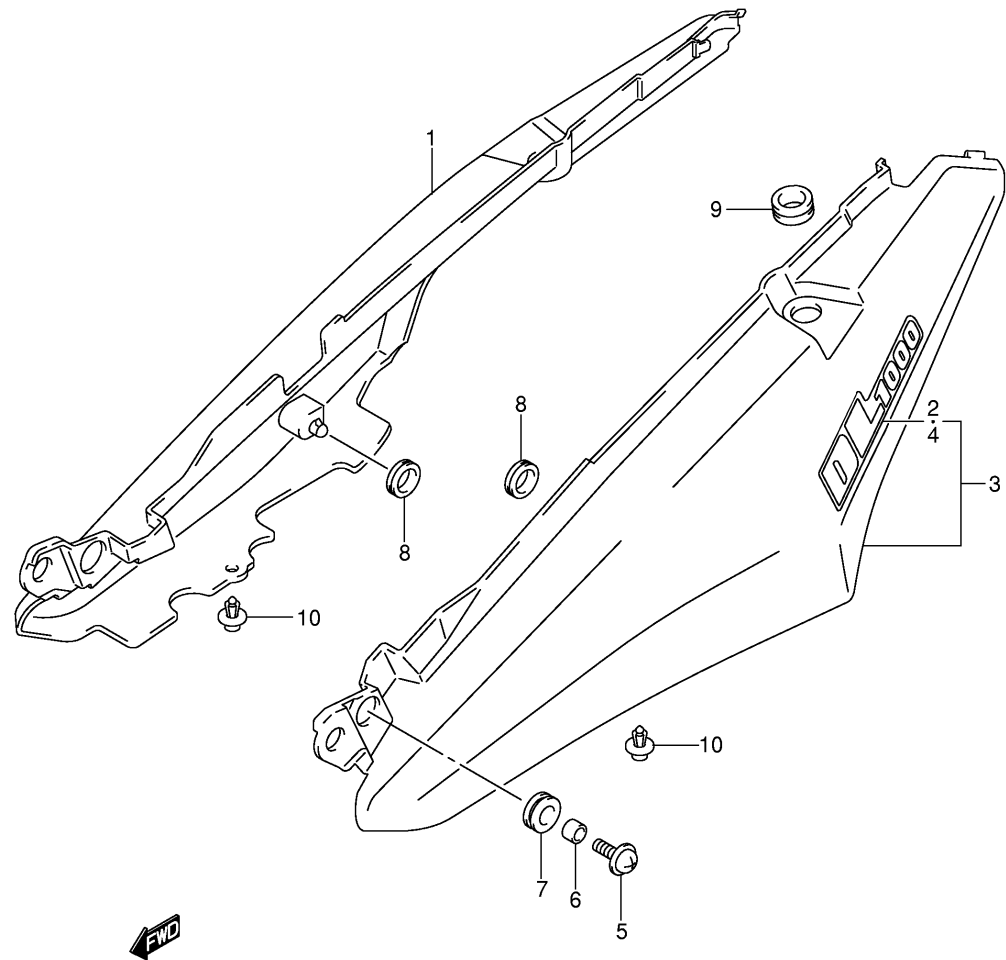


Ref No	Part No	Description
1	45501-06G10-YD8	Cover Assy, Seat Tail Rh (silver)
1	45501-06G10-YAY	Cover Assy, Seat Tail Rh (black)
1	45501-06G10-YBA	Cover Assy, Seat Tail Rh (blue)
2	68161-06G10-AMT	. Emblem, Seat Tail Cover
2	68161-06G10-AMR	. Emblem, Seat Tail Cover
2	68161-06G10-AMW	. Emblem, Seat Tail Cover
3	45502-06G10-YD8	Cover Assy, Seat Tail Lh (silver)
3	45502-06G10-YAY	Cover Assy, Seat Tail Lh (black)
3	45502-06G10-YBA	Cover Assy, Seat Tail Lh (blue)
4	68161-06G10-AMT	. Emblem, Seat Tail Cover
4	68161-06G10-AMR	. Emblem, Seat Tail Cover
4	68161-06G10-AMW	. Emblem, Seat Tail Cover
5	09136-06081	Screw, Front
6	09180-06300	Spacer, Front
7	09320-12068	Cushion, Front
8	09320-08018	Cushion, Center
9	09320-15008	Cushion, Rear
10	09409-06314-5PK	Clip (black)

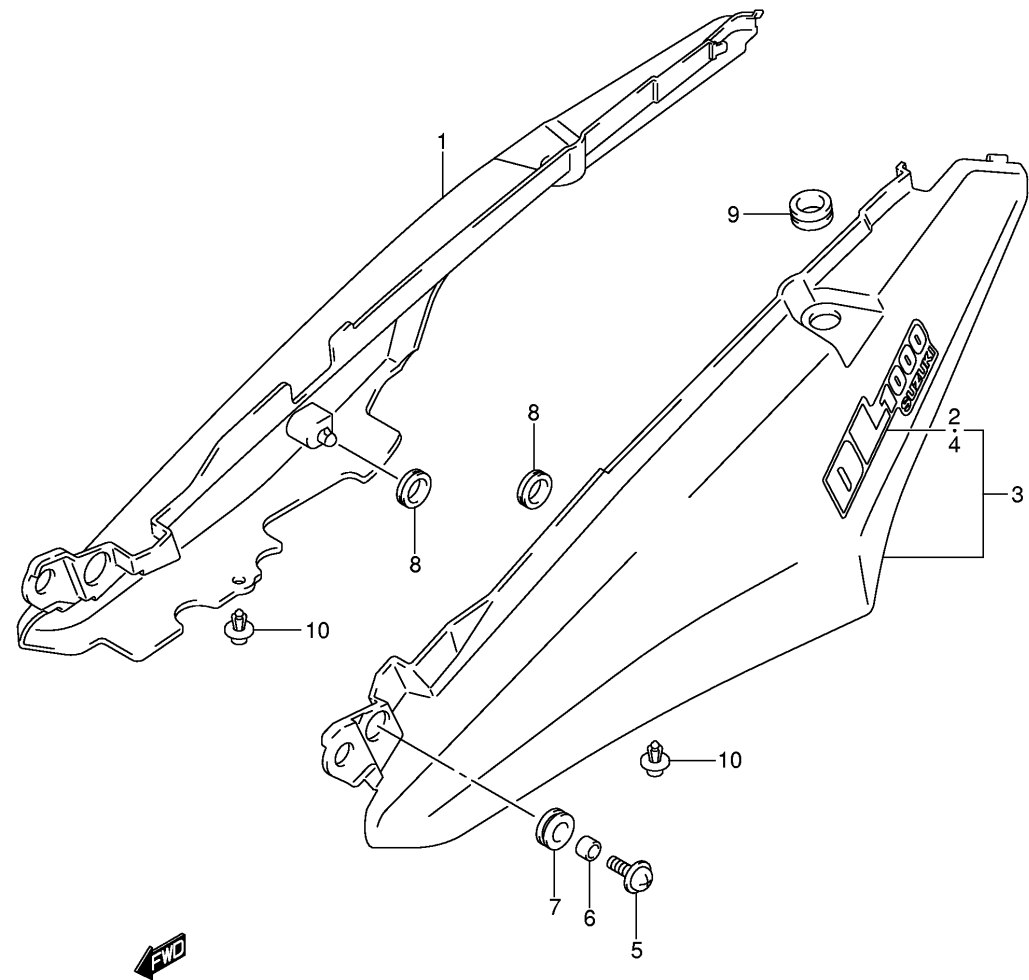

Ref No	Part No	Description
1	45501-06G10-4CX	Cover Assy, Seat Tail, R
1	45501-06G10-4DX	Cover Assy, Seat Tail, R
1	45501-06G10-4EX	Cover Assy, Seat Tail, R
2	68161-06G10-BKT	• . Emblem, Seat Tail Cover
2	68161-06G10-BKU	• . Emblem, Seat Tail Cover
2	68161-06G10-BKV	• . Emblem, Seat Tail Cover
3	45502-06G10-4CX	Cover Assy, Seat Tail, L
3	45502-06G10-4DX	Cover Assy, Seat Tail, L
3	45502-06G10-4EX	Cover Assy, Seat Tail, L
4	68161-06G10-BKT	• . Emblem, Seat Tail Cover
4	68161-06G10-BKU	• . Emblem, Seat Tail Cover
4	68161-06G10-BKV	• . Emblem, Seat Tail Cover
5	09136-06081	Screw, Front
6	09180-06300	Spacer, Front
7	09320-12068	Cushion, Front
8	09320-08018	Cushion, Center
9	09320-15008	Cushion, Rear
10	09409-06314-5PK	Clip (black)

FIG.53D

Ref No	Part No	Description
1	45501-06G10-4PX	Cover Assy, Seat Tail, R
2	68161-06G10-CUL	• . Emblem, Seat Tail Cover
3	45502-06G10-4PX	Cover Assy, Seat Tail, L
4	68161-06G10-CUL	• . Emblem, Seat Tail Cover
5	09136-06081	Screw, Front
6	09180-06300	Spacer, Front
7	09320-12068	Cushion, Front
8	09320-08018	Cushion, Center
9	09320-15008	Cushion, Rear
10	09409-06314-5PK	Clip (black)

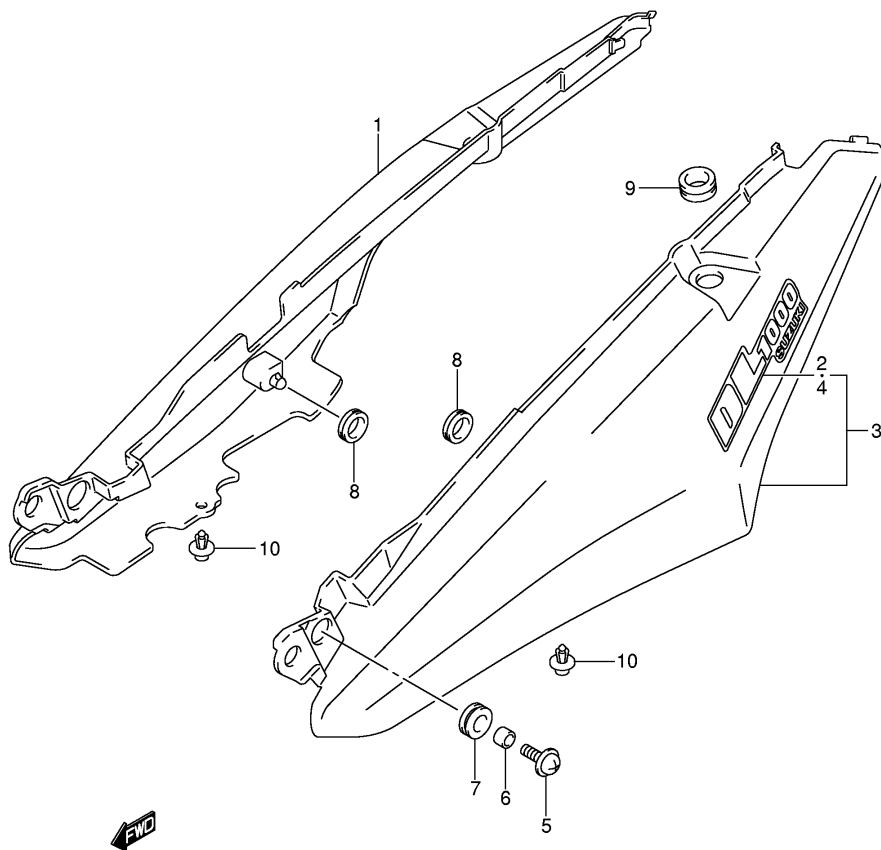


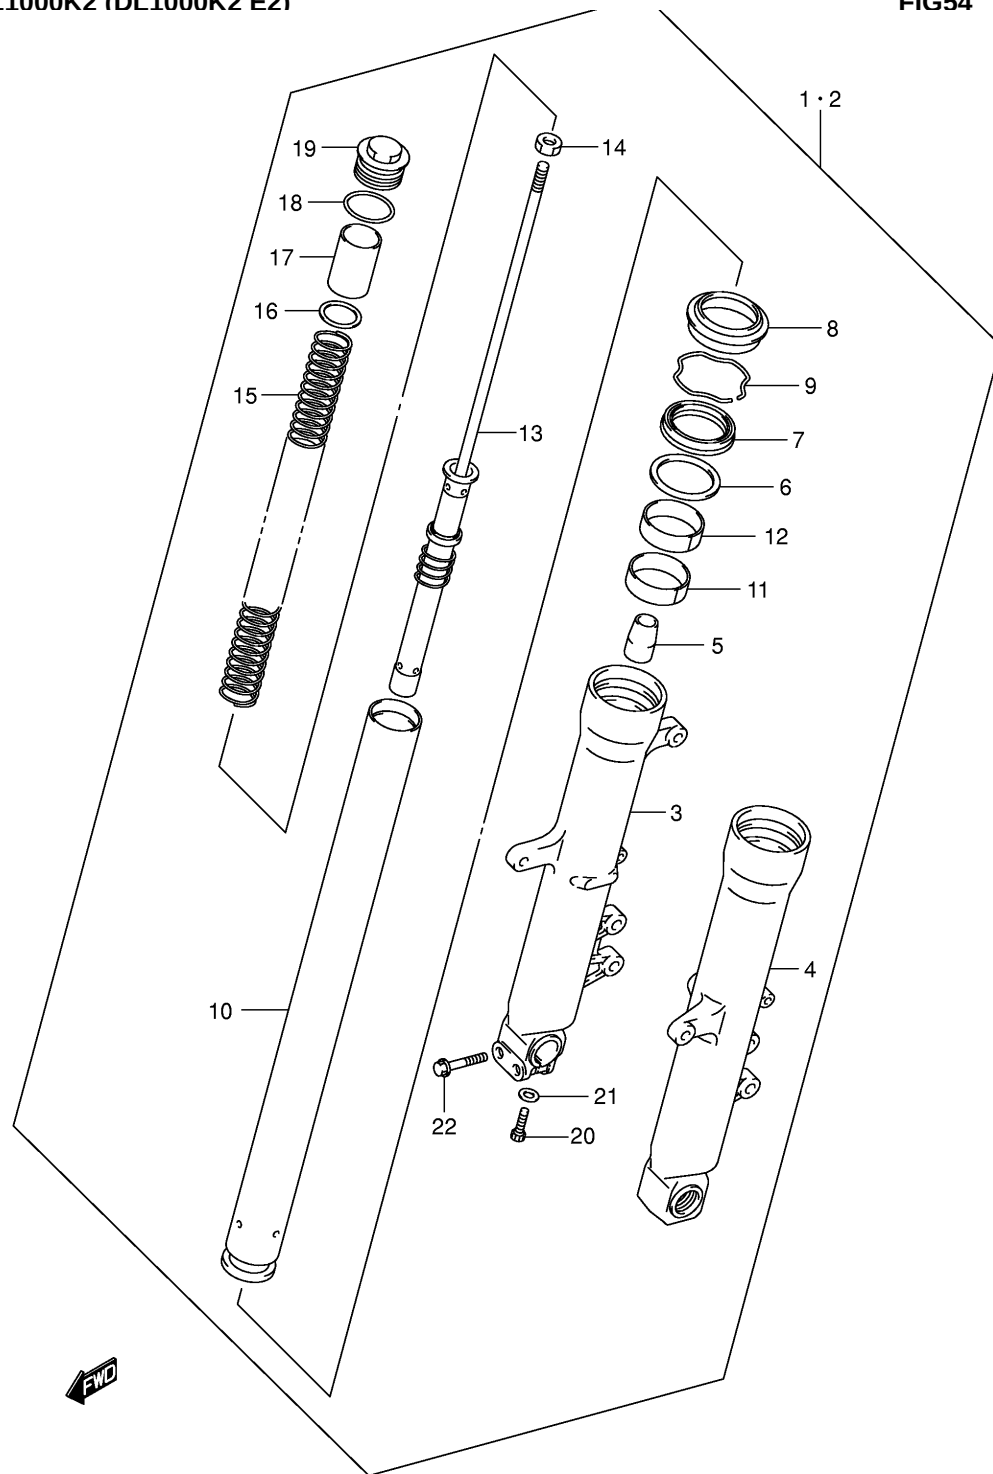


FIG54

FRONT DAMPER (MODEL K2)


Ref No	Part No	Description
1	51103-06G00	Damper Assy, Front Fork Rh
1	51103-06G10	Damper Assy, Front Fork Rh
2	51104-06G00	Damper Assy, Front Fork Lh
3	51130-06G00	. . Tube, Outer Rh
4	51140-06G00	. . Tube, Outer Lh
5	51195-31E00	. . Piece, Oil Lock
6	51168-17C00	. . Spacer, Seal
7	51153-14D00	. . Seal, Oil
8	51173-29E00	. . Seal, Dust
9	51556-38B00	. . Ring, Oil Seal Stopper
10	51110-06G00	. . Tube, Inner
11	51121-13E00	. . Bush, Slide
12	51152-13E00	. . Bush, Guide
13	52110-06G00	. . Rod, Front Damper
14	51827-27E00	. . Nut
15	51171-06G00	. . Spring, Front
16	51186-17C00	. . Seat, Spring
17	51176-12C10	. . Collar, Spring
18	51117-17C00	. . O Ring
19	51351-14E30	. . Bolt, Fork
20	51147-48130	. . Bolt
21	51148-36011	. . Gasket
22	51166-06G00	. . Bolt, Rh

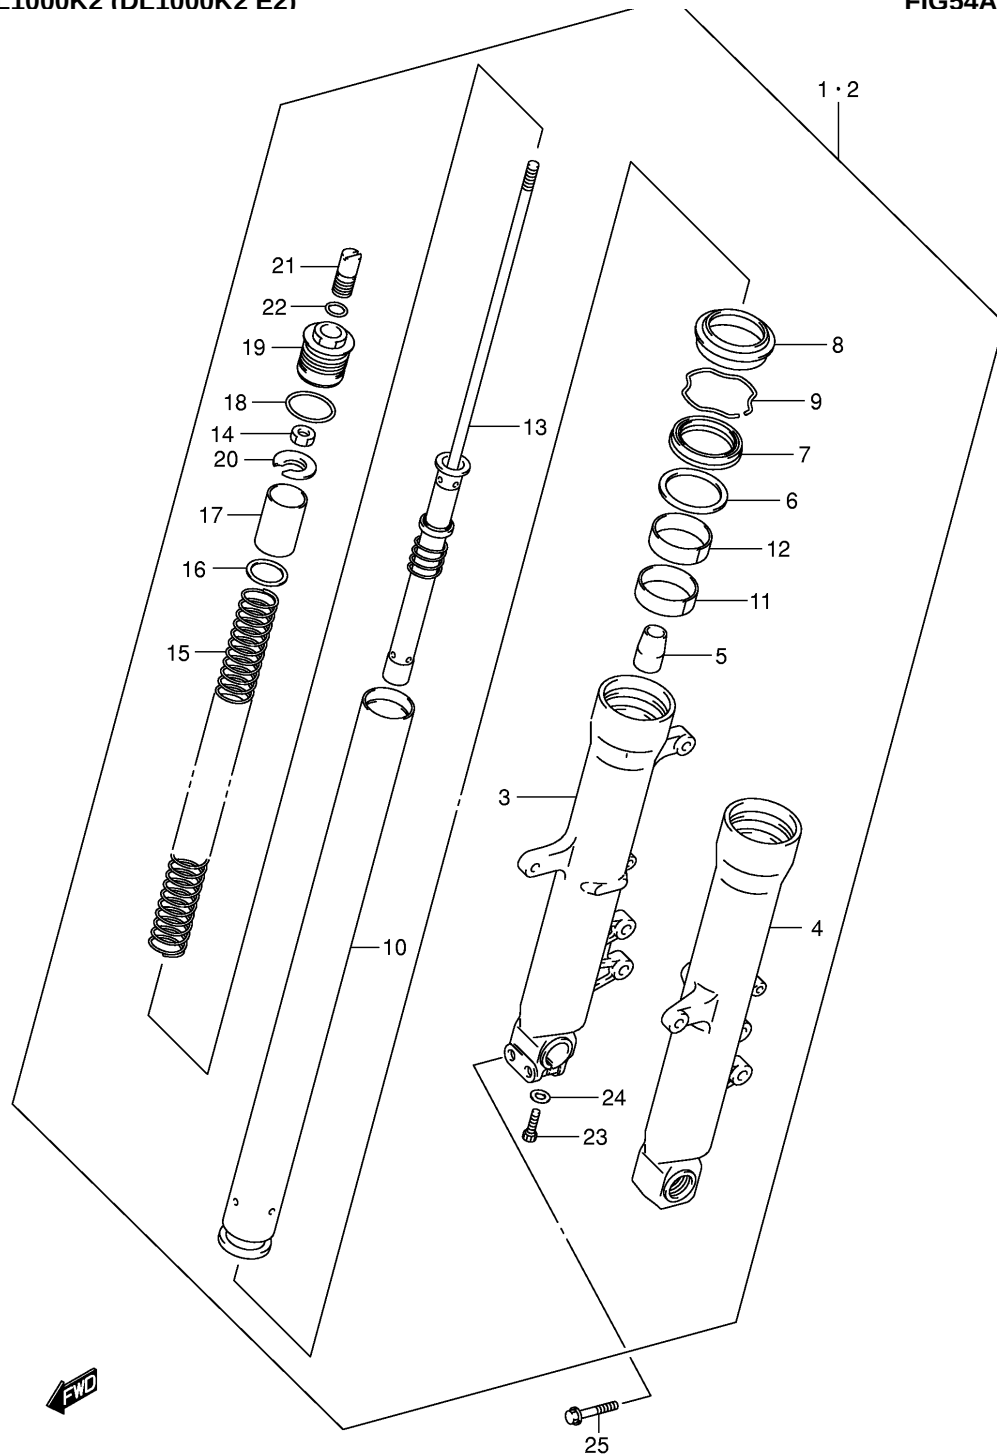

Ref No	Part No	Description
1	51103-06G20	Damper Assy, Front Fork Rh
2	51104-06G20	Damper Assy, Front Fork Lh
3	51130-06G00	. . Tube, Outer Rh
4	51140-06G00	. . Tube, Outer Lh
5	51195-31E00	. . Piece, Oil Lock
6	51168-17C00	. . Spacer, Seal
7	51153-14D00	. . Seal, Oil
8	51173-29E00	. . Seal, Dust
9	51556-38B00	. . Ring, Oil Seal Stopper
10	51110-06G20	. . Tube, Inner
11	51121-13E00	. . Bush, Slide
12	51152-13E00	. . Bush, Guide
13	52110-06G20	. . Rod, Front Damper
14	51827-27E00	. . Nut
15	51171-06G20	. . Spring, Front
16	51186-17C00	. . Seat, Spring
17	51176-12C10	. . Collar, Spring
18	51117-17C00	. . O Ring
19	51189-14D00	. . Bolt, Fork
20	51172-17C00	. . Seat, Spring Upper
21	51185-31E00	. . Adjuster, Spring
22	09280-14011	. . O Ring
23	51147-48130	. . Bolt
24	51148-36011	. . Gasket
25	51166-06G00	Bolt, Rh




FIG.55

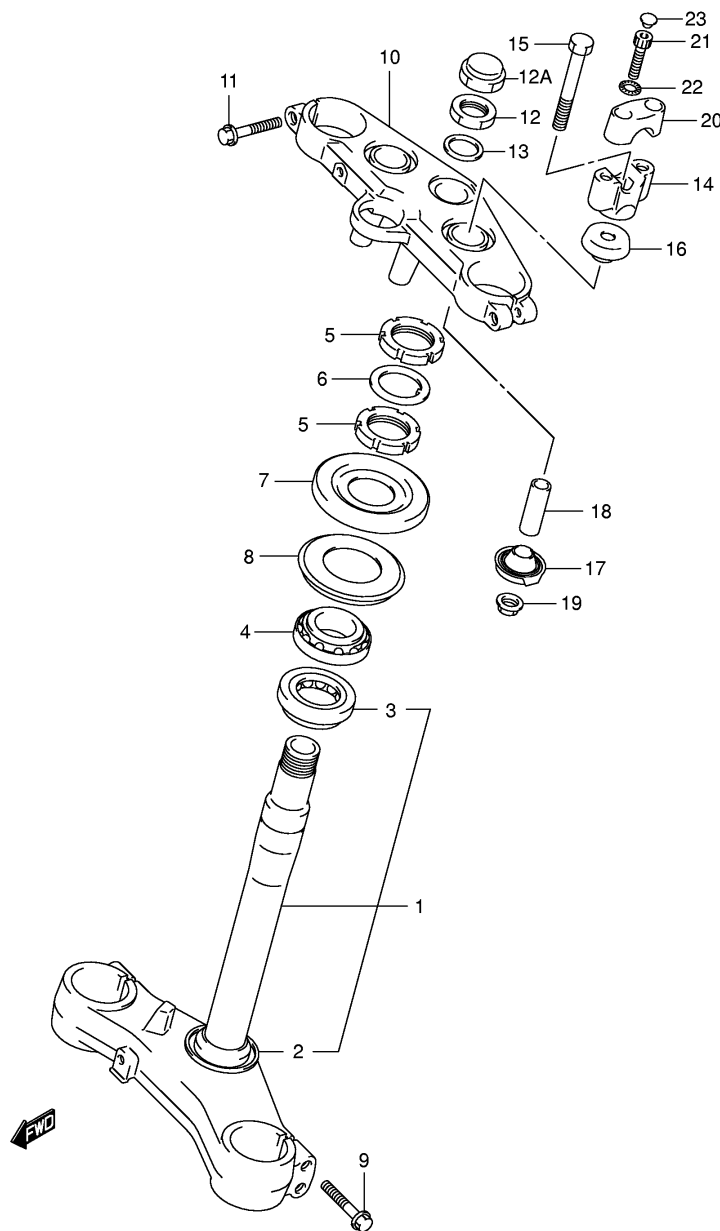


Ref No	Part No	Description
1	51410-06G00	Stem, Steering
2	51644-12C00	• . Seal, Steering Lower
3	09267-30010	• . Bearing (30x55x17)
4	09267-30010	Bearing, Upper (30x55x17)
5	51631-33E00	Nut
6	51641-33E00	Washer
7	51643-24F10	Cover, Steering Upper
8	51644-12C00	Seal, Steering Upper
9	51166-35F00	Bolt
10	51311-06G00	Head, Steering Stem
11	51166-35F00	Bolt
12	51353-06G00	Nut
13	51354-06G00	Washer
14	56221-27E00	Holder, Handle Lower
15	56321-27E00	Bolt
16	56241-27E00	Rubber, Upper
17	56260-42A00	Rubber, Lower
18	56243-42A00	Spacer
19	08319-31107	Nut
20	56211-32F00	Holder, Handle Upper
21	51321-06G00	Bolt
22	09164-08015	Washer
23	09250-06011	Cap


DL1000K2 E02_055
STEERING STEM

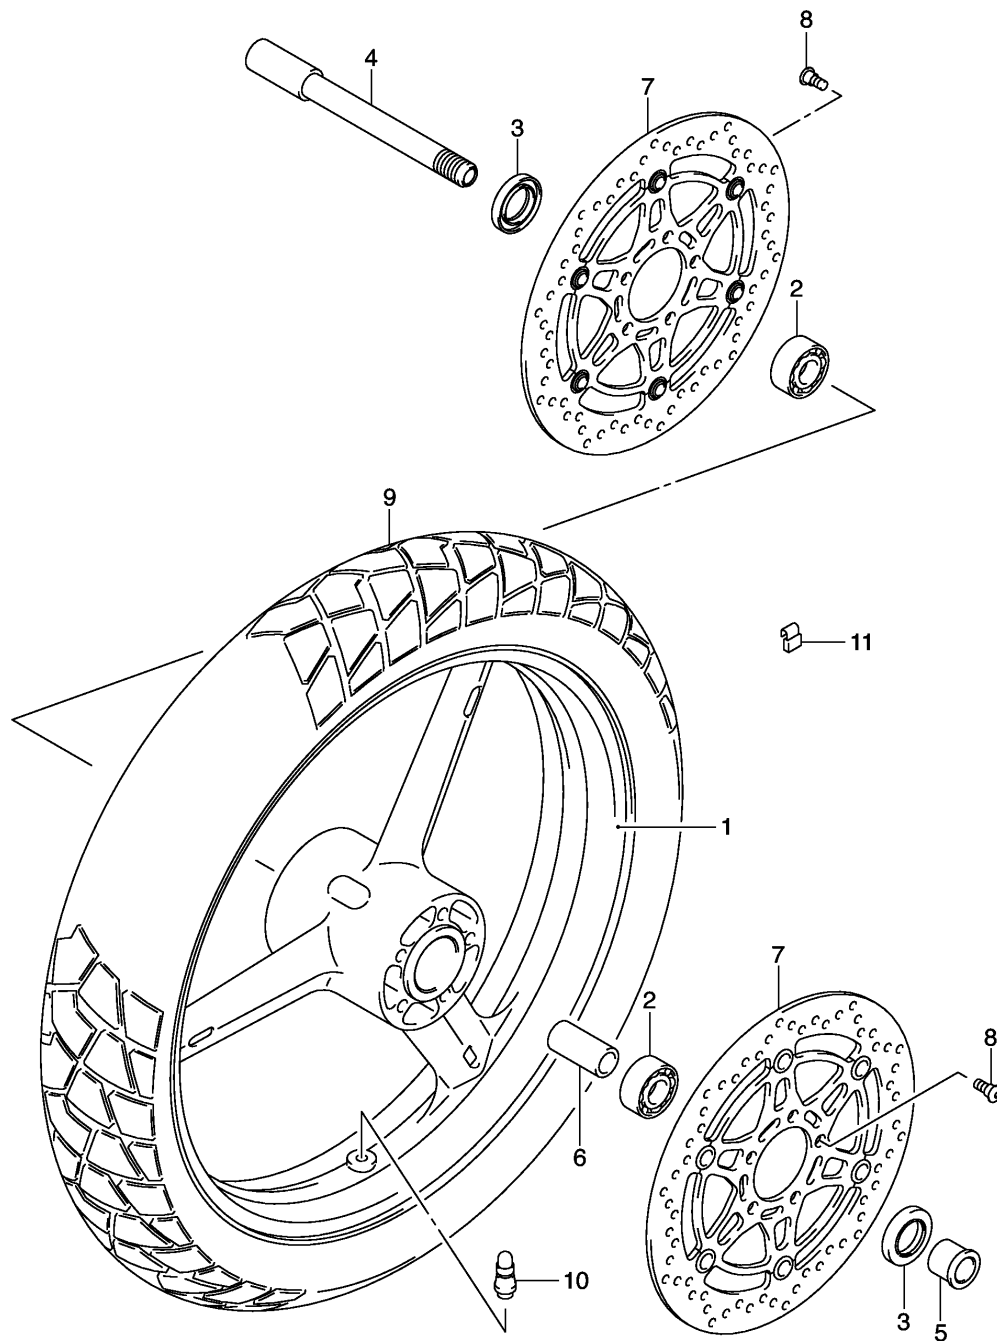


Ref No	Part No	Description
1	54111-06G00-019	Wheel, Front (19m/cxmt2.50) (black)
2	08123-62047	Bearing
3	09285-28001	Seal, Oil
4	54711-06G00	Axle, Front
5	54751-06G00	Spacer, Front Axle
6	09180-20062	Spacer, Front Hub Bearing
7	59210-27G00	Disc, Front Brake
8	09106-08160	Bolt
9	55110-06G00	Tire, Front (110/80r19m/c 59h)
10	43130-24A00	Valve Assy, Wheel Rim
11	43232-82000	Balancer, Wheel No.1
11	43234-82000	Balancer, Wheel No.2
11	43236-82000	Balancer, Wheel No.3

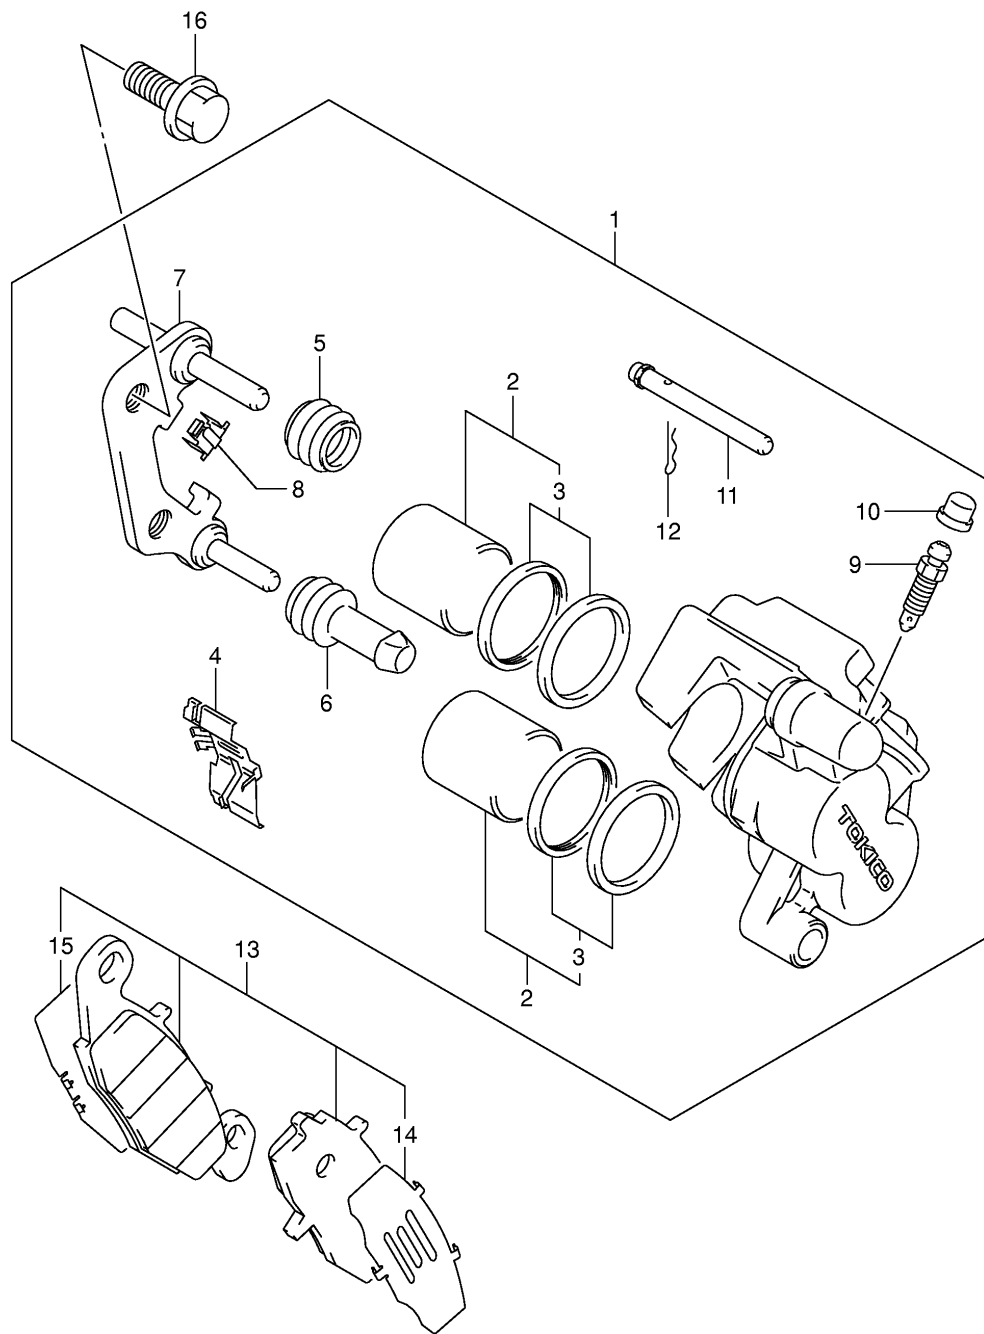


Ref No	Part No	Description
1	59100-33D90-999	Caliper Assy, Front Rh
1	59300-33D90-999	Caliper Assy, Front Lh
2	59300-33831	• . Piston Set
3	59300-33841	• . Seal Set, Piston
4	59115-33D00	• . Spring Rh
4	59315-33D00	• . Spring Lh
5	59112-44B00	• . Boot
6	59313-36500	• . Insulator
7	59150-33D01	• . Carrier, Caliper, R
7	59350-33D01	• . Carrier, Caliper, L
8	59116-33D00	• . Guide
9	59121-18410	• . Bleeder
10	55156-66310	• . Cap
11	59141-44B01	• . Pin
12	69142-45000	• . Clip
13	59102-33870	Pad & Shim Set Rh
13	59302-33850	Pad & Shim Set Lh
14	59171-33D00	• . Shim
15	59172-33D00	• . Shim, No.2

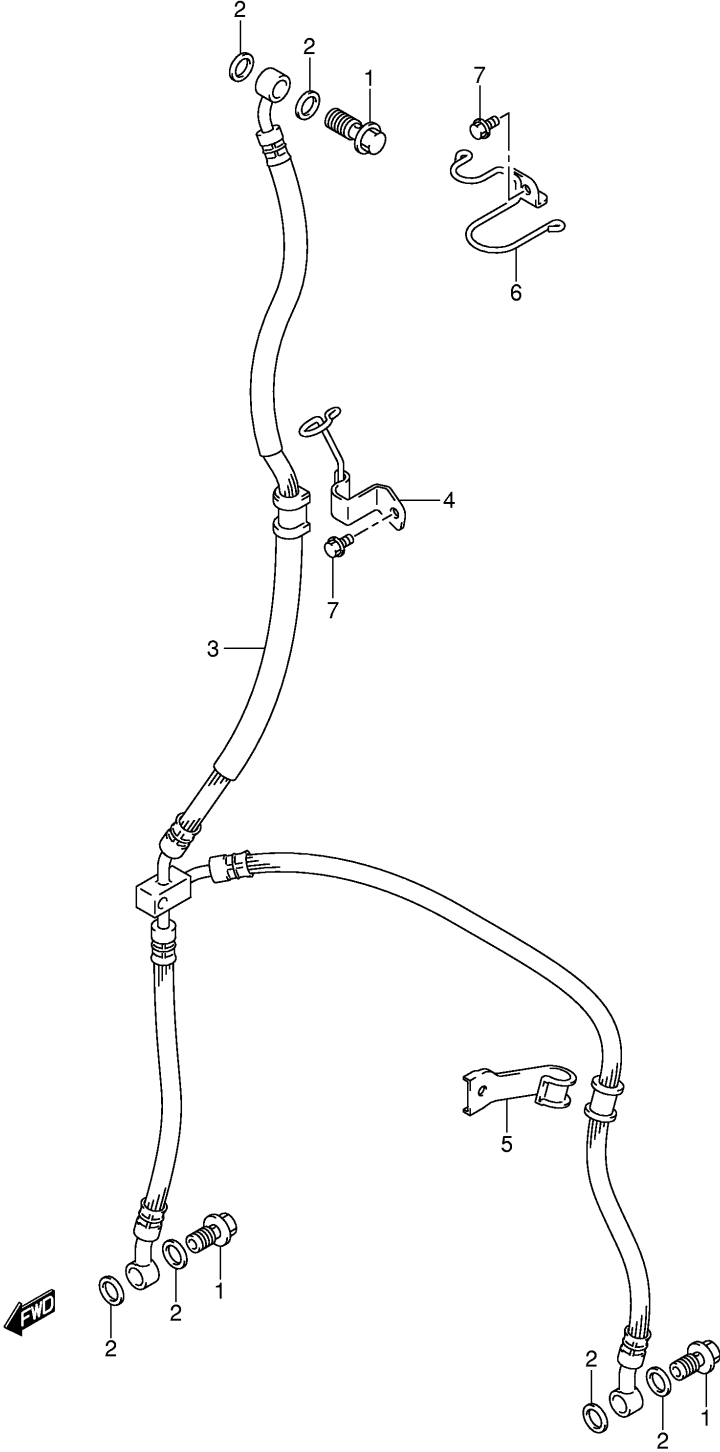


Ref No	Part No	Description
1	09360-10042	Bolt (10x1.25x22)
2	09161-10009	Washer (10x15x1.5)
3	59480-06G00	Hose, Front Brake
4	59260-06G00	Clamp, Front Brake Hose
5	59268-06G00	Clamp, Front Brake Hose
6	59540-06G00	Guide, Front Brake Hose
7	01547-06123	Bolt, Clamp

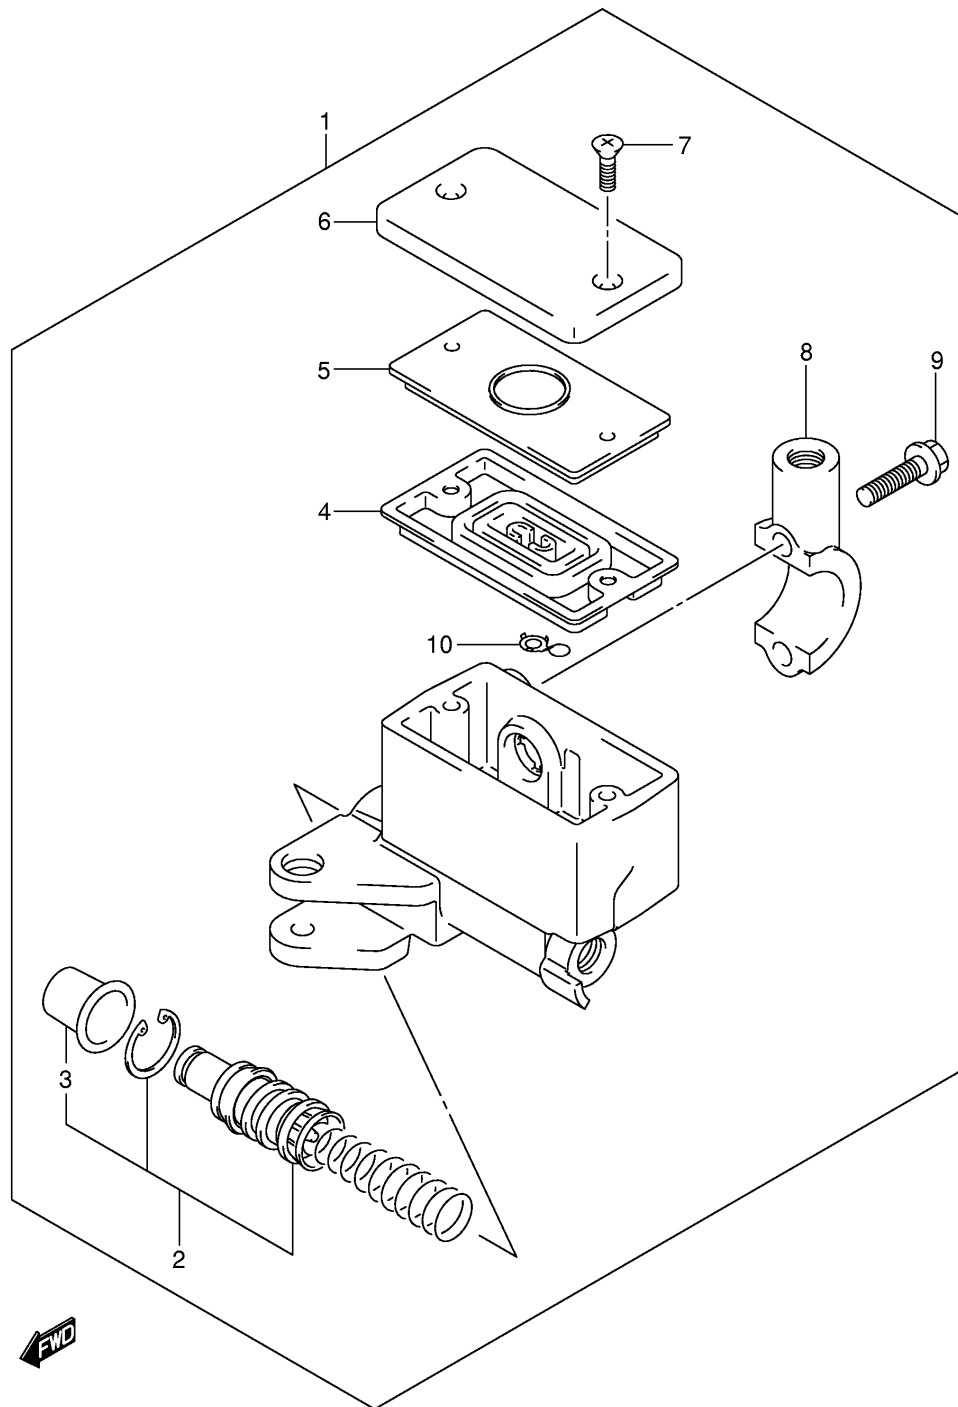


Ref No	Part No	Description
1	59600-42F00	Cylinder Assy, Front Master
2	59600-45860	• . Piston/cup Set
3	59666-44300	•• .. Boot
4	59667-49460	• . Diaphragm
5	59668-41C00	• . Plate, Diaphragm
6	59669-10G00	• . Cap
7	69689-49300	• . Screw
8	59671-32F00	• . Holder
9	59675-02FA0	• . Bolt (6x22)
10	59664-32F00	• . Protector

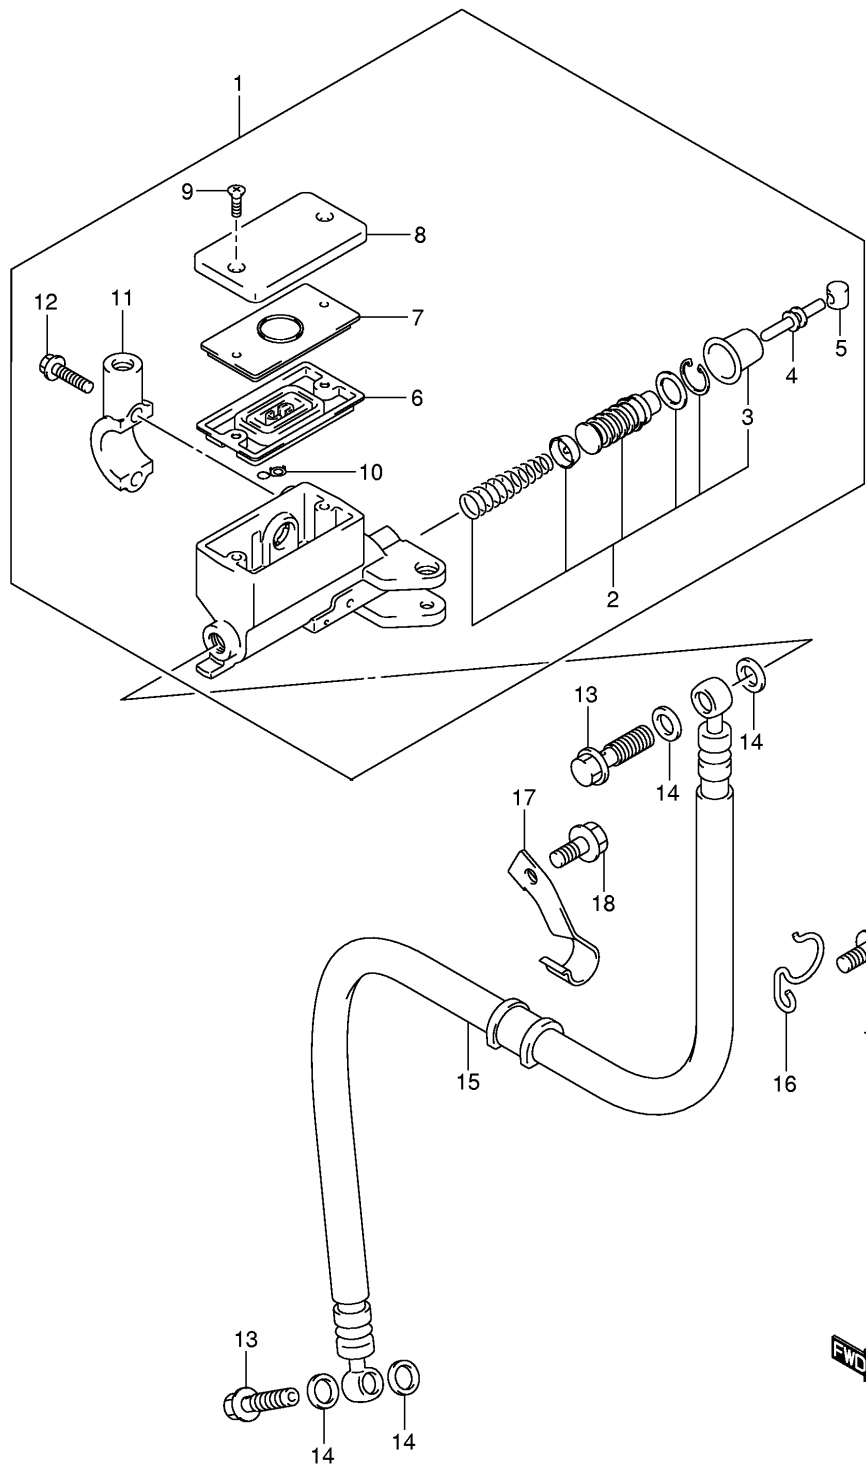


Ref No	Part No	Description
1	59800-32F00	Cylinder Assy, Clutch Master
2	59800-08810	• . Piston/cup Set
3	59666-44300	• . Boot
4	59871-38A00	• . Push Rod
5	59892-08A00	• . Bush
6	59667-49460	• . Diaphragm
7	59668-41C00	• . Plate, Diaphragm
8	59669-10G00	• . Cap
9	69689-49300	• . Screw
10	59664-32F00	• . Protector
11	59671-32F00	• . Holder
12	59675-02FA0	• . Bolt (6x22)
13	09360-10042	Bolt (10x1.25x22)
14	09161-10009	Washer, (10x15x1.5)
15	59910-06G00	Hose, Clutch
16	59915-24F00	Clamp, Clutch Hose No.1
17	59921-06G00	Clamp, Clutch Hose No.2
18	01550-06123	Bolt

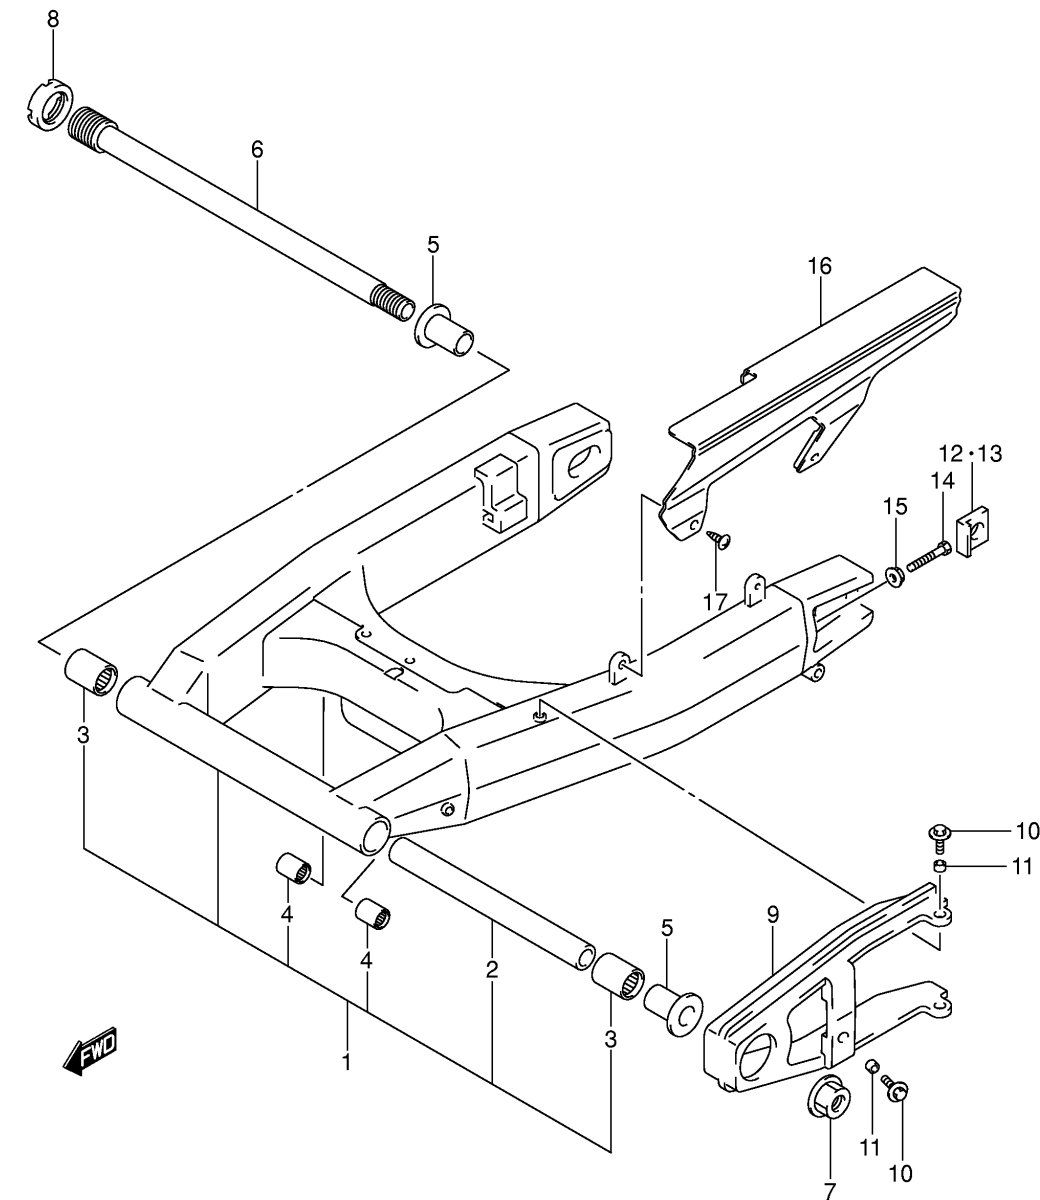


Ref No	Part No	Description
1	61000-06G00	Swinging Arm Assy, Rear
1	61000-06G10-YAP	Swinging Arm Assy, Rear
2	09180-20118	• . Spacer, Rear Swinging Arm
3	09263-25059	• . Bearing, Pivot
4	09263-17037	• . Bearing, Cushion Rod
5	61251-31E00	Spacer, Swinging Arm
6	61211-06G00	Shaft, Rr Swinging Arm Pivot
7	61214-19F00	Nut, Pivot Shaft
8	08319-31188	Nut
9	61273-06G00	Buffer, Chain Touch Defense
10	09116-06152	Bolt (6x20)
11	09180-06306	Spacer (6.5x9x5)
12	61446-17E10	Adjuster, Chain Lh
13	61446-27C20	Adjuster, Chain Rh
14	09100-08287	Bolt (8x50)
15	08316-10083	Nut
16	61310-34E00	Case, Chain
17	09139-06083	Screw

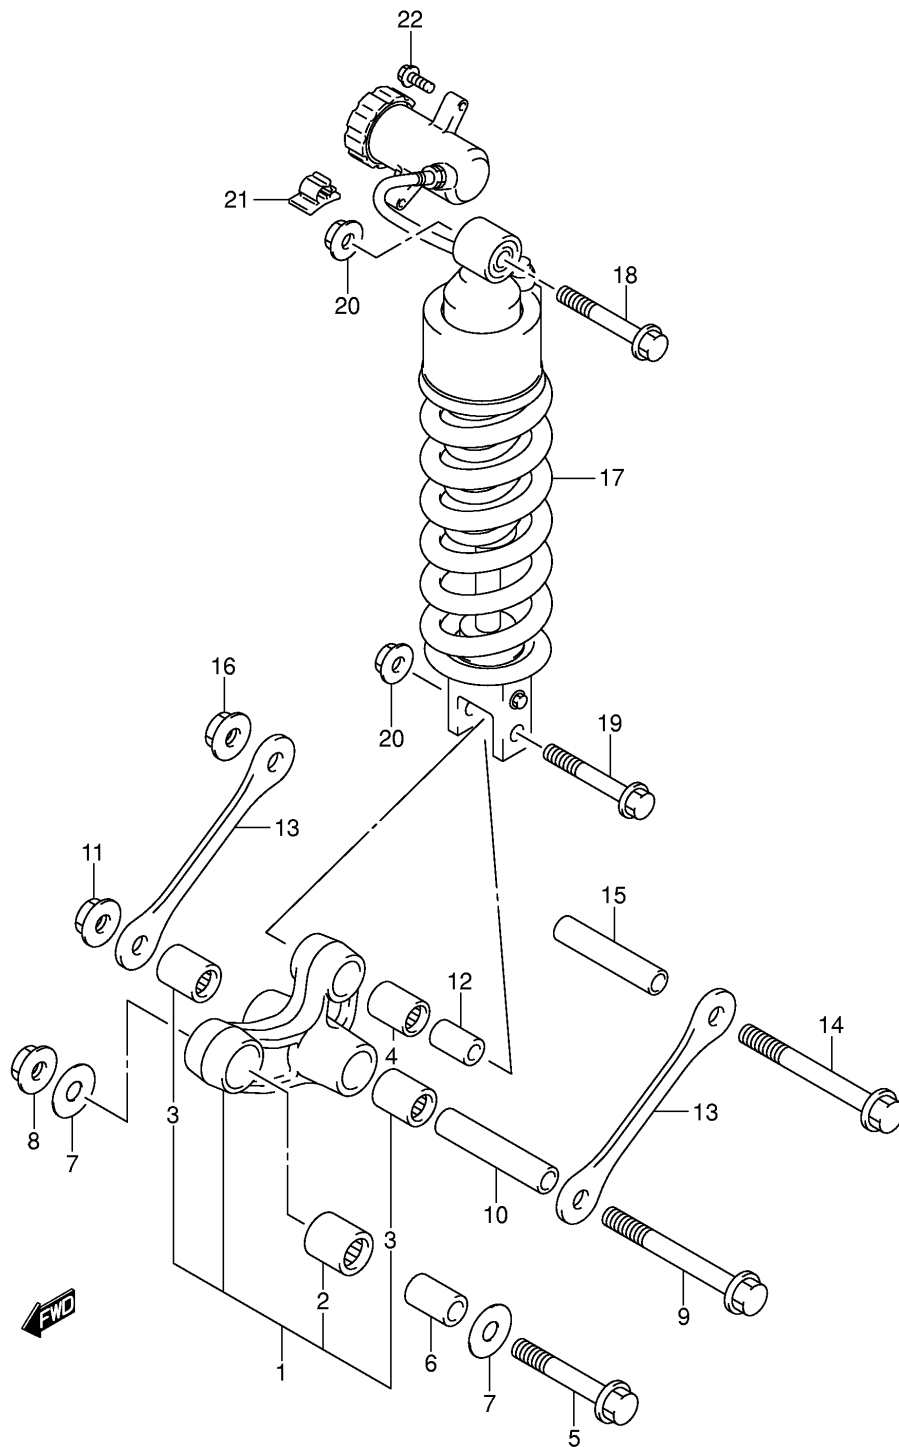


Ref No	Part No	Description
1	62600-06860	Lever Set, Rear Cushion
2	09263-20073	• . Bearing, Front (20x27x30)
3	09263-17037	• . Bearing, Center (17x24x25)
4	09263-17034	• . Bearing, Rear (17x24x26)
5	62658-19F00	Bolt, Front (12x78)
6	62684-12C00	Spacer, Front (12x78)
7	09160-12037	Washer
8	09159-12056	Nut
9	62621-19D00	Bolt, Center (12x111)
10	09180-12122	Spacer, Center (12x17x85)
11	09159-12056	Nut
12	62684-40A10	Spacer, Rear (10x17x30)
13	62641-06G00	Rod, Rear Cushion
14	62621-19D00	Bolt, Rod (12x111)
15	09180-12122	Spacer, Rod (12x17x85)
16	09159-12056	Nut
17	62100-06G10-13L	Absorber Assy, Rear Shock (silver)
18	09103-10033	Bolt, Upper (10x70)
19	09103-10143	Bolt, Lower
20	09159-10058	Nut
21	09403-10313	Clamp, Adjuster Hose
22	01550-06163	Bolt, Tank

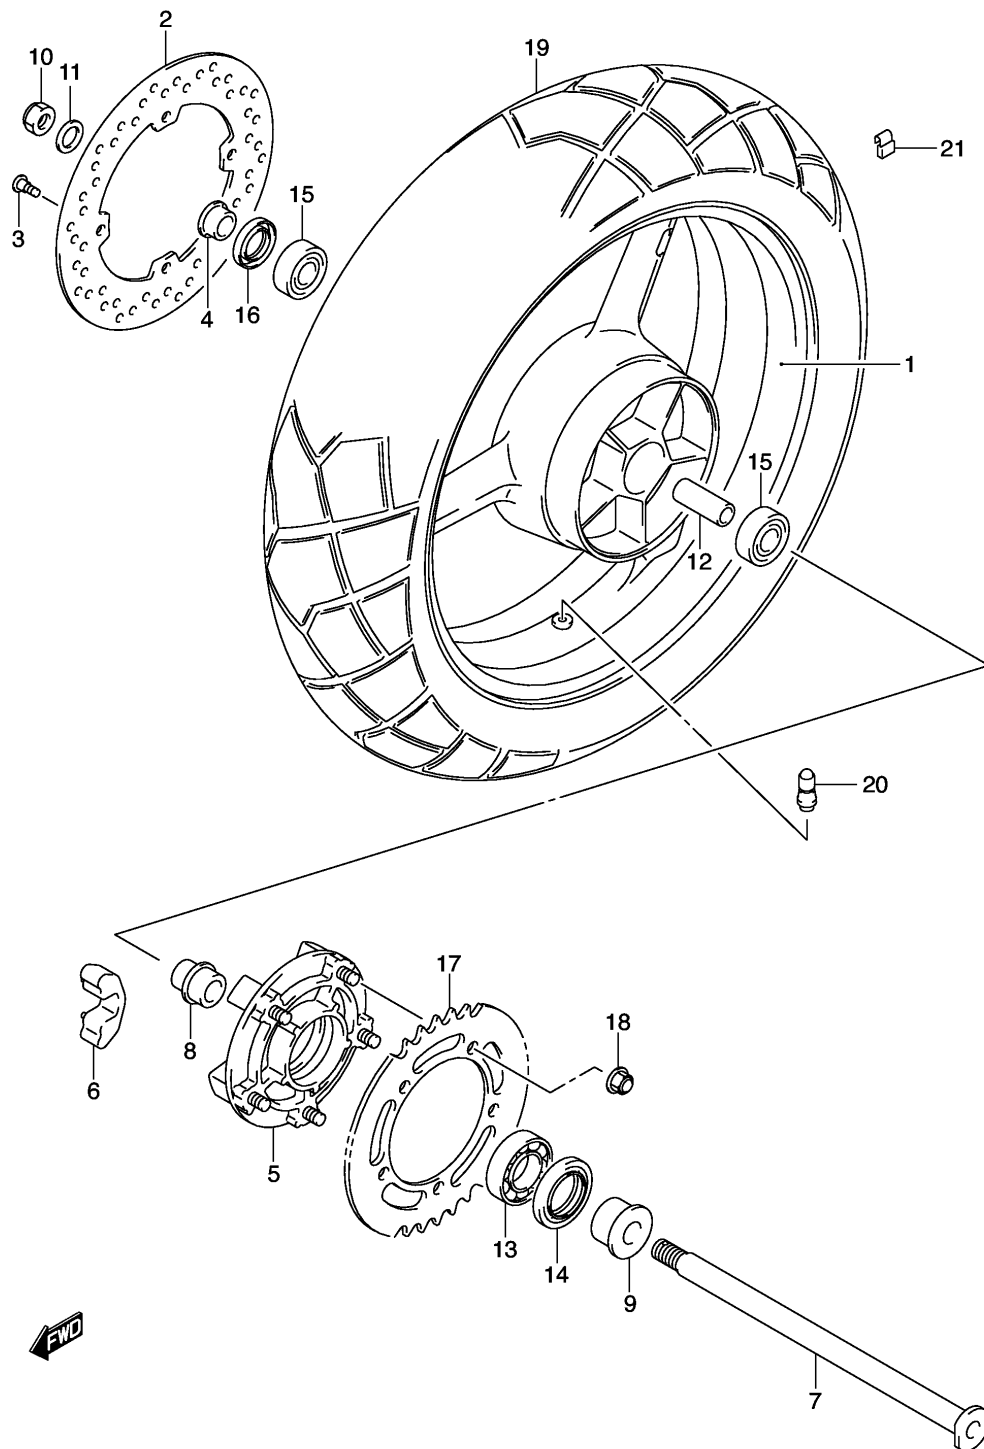


Ref No	Part No	Description
1	64111-06G00-019	Wheel, Rear (17m/cxmt4.00) (black)
2	69211-06G00	Disc, Rear Brake
3	09106-08160	Bolt
4	64741-10F00	Spacer, Rear Axle Rh
5	64610-06G00	Drum, Rear Sprocket
6	64651-35F10	Absorber, Rear Hub Shock
7	64711-06G00	Axle, Rear
8	64733-06G00	Retainer, Rear Sprocket Drum
9	64751-06G00	Spacer, Rear Axle Lh
10	09159-18007	Nut
11	09160-19022	Washer (19x32x3.2)
12	09180-20112	Spacer, Rear Hub Bearing
13	09262-32007	Bearing (32x65x17)
14	09285-39001	Seal, Rear Sprocket Drum Oil
15	08123-62047	Bearing (20x47x14)
16	09285-28001	Seal, Dust
17	64511-35F20	Sprocket, Rear (nt:41-525)
18	08319-31107	Nut
19	65110-06G00	Tire, Rear (150/70r17m/c 69h)
20	43130-24A00	Valve Assy, Wheel Rim
21	43232-82000	Balancer, Wheel No.1
21	43234-82000	Balancer, Wheel No.2
21	43236-82000	Balancer, Wheel No.3

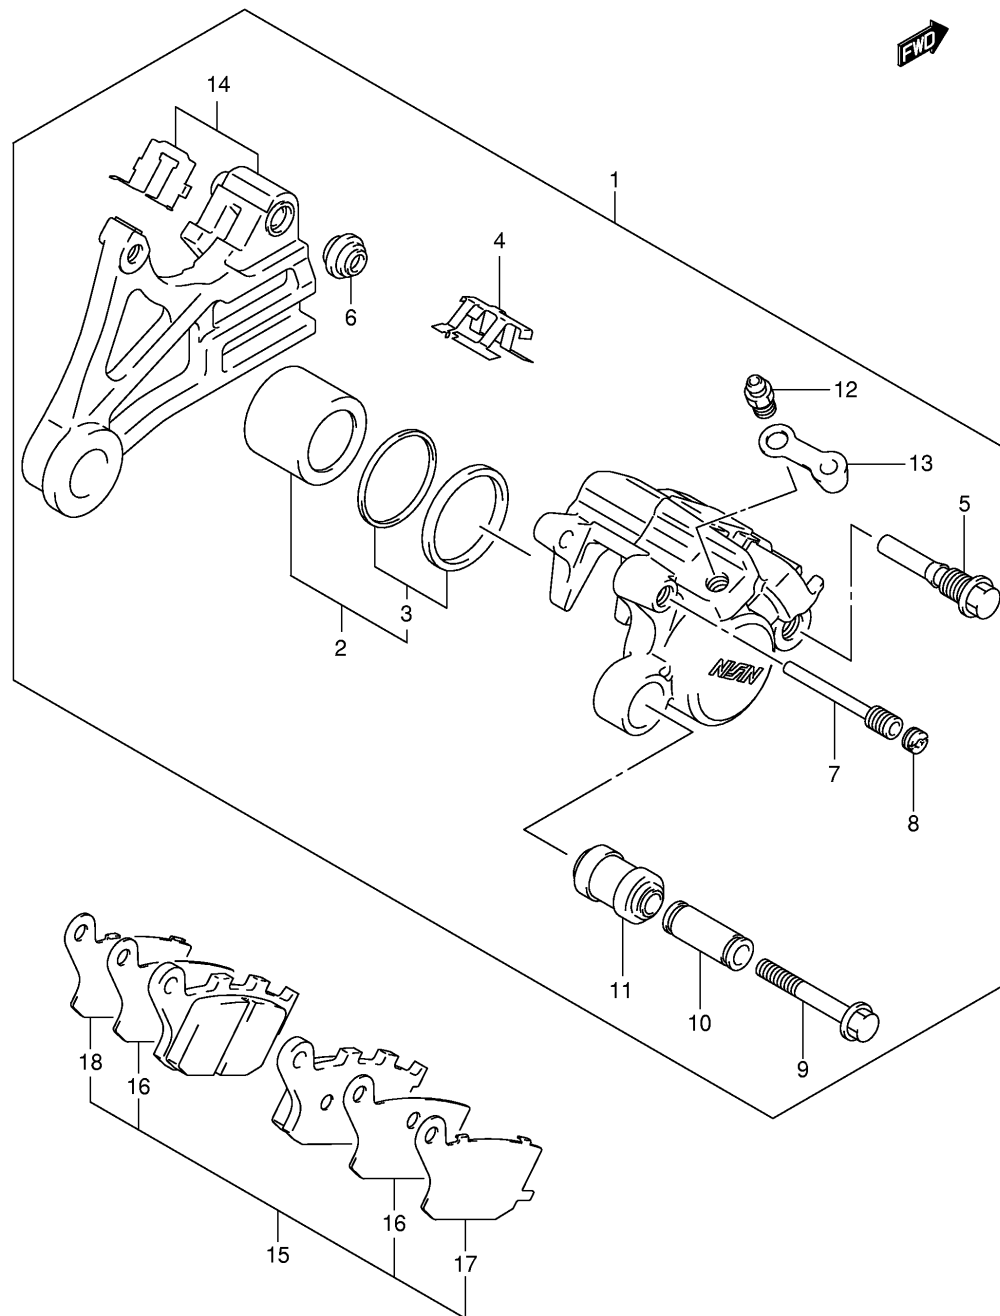

Ref No	Part No	Description
1	69100-06G00-999	Caliper Assy, Rear
2	69100-04810	• . Piston Set
3	69100-04820	• . Seal Set, Piston
4	69115-06G00	• . Spring, Pad
5	69105-04F00	• . Bolt
6	59303-14500	• . Boot
7	69141-40F00	• . Pin, Hanger
8	59146-21E10	• . Plug
9	69182-04F00	• . Bolt
10	69185-04F00	• . Sleeve
11	69186-04F00	• . Boot
12	59121-01A00	• . Bleeder
13	59122-01A00	• . Cap
14	69150-06G00	• . Bracket
15	69100-06830	Pad & Retainer Set
16	69132-06G00	• . Insulator
17	69133-06G00	• . Retainer
18	69134-06G00	• . Retainer

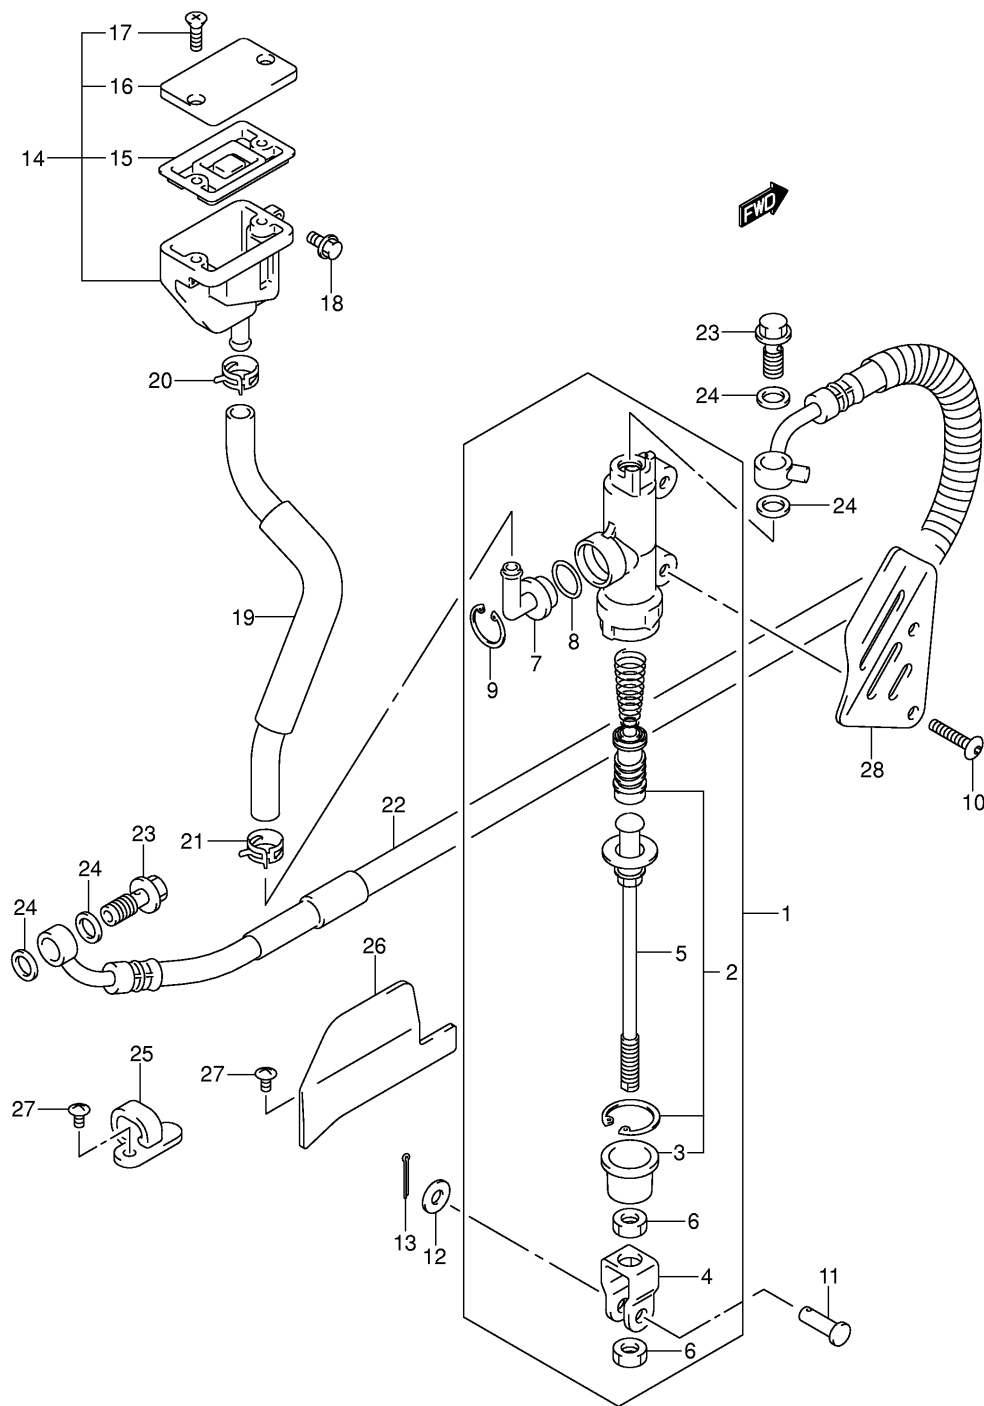

Ref No	Part No	Description
1	69600-06G00	Cylinder Assy, Rear Master
2	69600-34820	• . Piston/cup Set
3	69691-00A00	• . Boot
4	69692-19A00	• . Yoke
5	69670-03G00	• . Rod, Push
6	69693-05A00	• . Nut
7	69672-00B20	• . Connector
8	69686-34200	• . O Ring
9	69674-00B20	• . Circlip
10	09139-06029	Bolt (6x25)
11	09200-06037	Pin
12	08322-01063	Washer
13	04111-20158	Cotter Pin
14	69740-01D02	Tank Assy, Rear Reservoir
15	59667-04700	• . Diaphragm
16	59669-05D00	• . Cap
17	69689-04A00	• . Screw
18	01547-06123	Bolt
19	69730-06G00	Hose, Reservoir Tank
20	09401-13417	Clip, Upper
21	09401-12404	Clip, Lower
22	69480-06G00	Hose, Rear Brake
23	09360-10042	Bolt, Caliper (10x1.25x22)
24	09161-10009	Washer (10x15x1.5)
25	61196-27C30	Guide, Brake Hose
26	61196-06G00	Guide, Rear Brake Hose Front
27	02142-05103	Screw
28	69641-06G00	Cover, Rear Master Cylinder

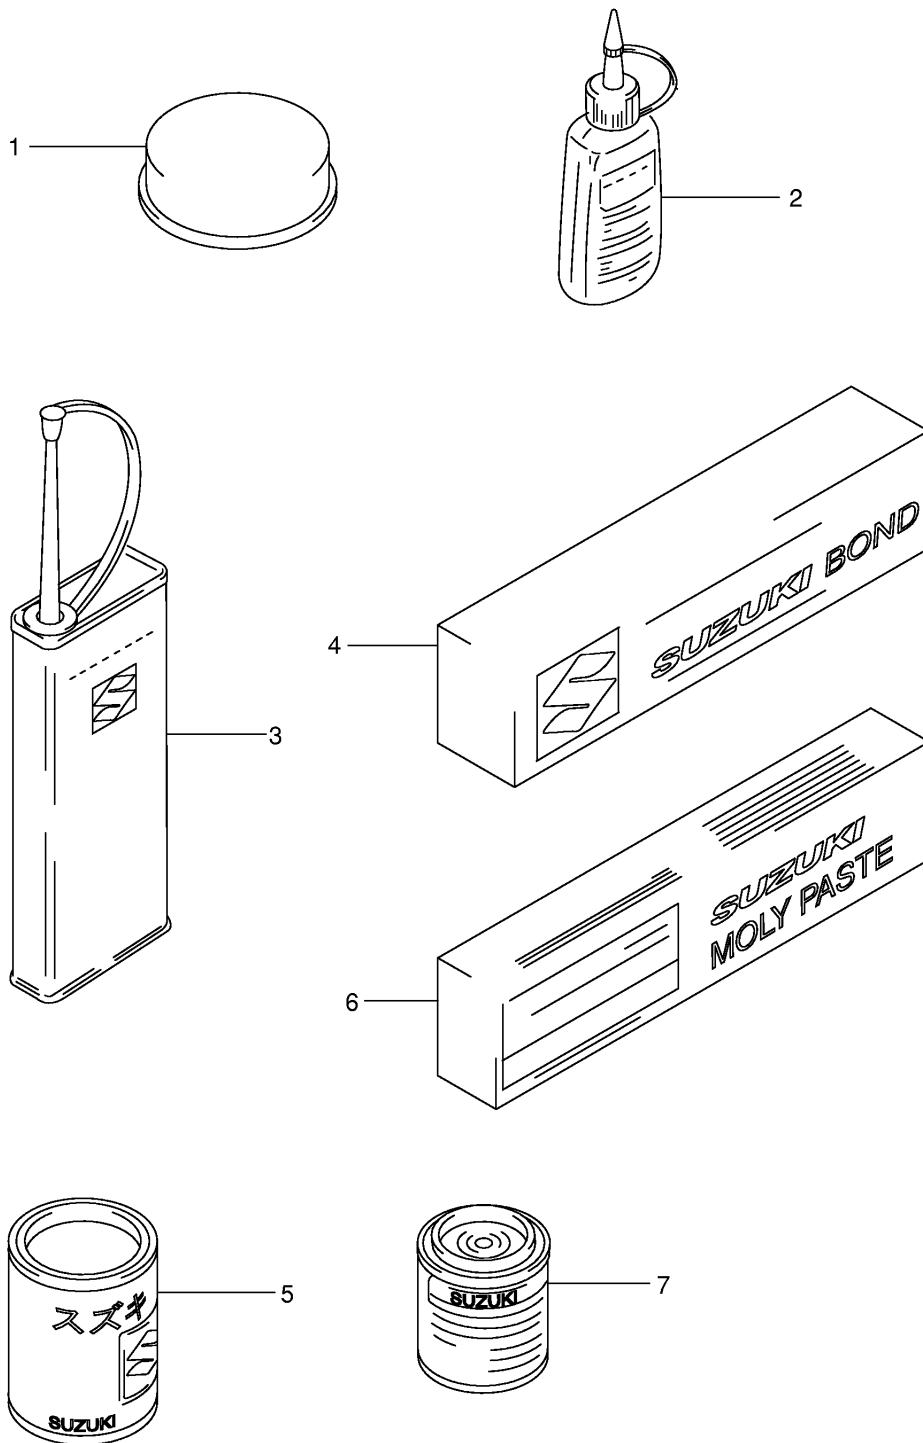

Ref No	Part No	Description
1	99000-25110	Suzuki Pbc Grease
2	99000-32020	Thread Lock Super (1333b)
2	99000-32030	Thread Lock Super (1303b)
2	99000-32050	Thread Lock Super (1342)
2	99000-32100	Thread Lock Super (1305)
2	99000-32130	Thread Lock Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31140	Suzuki Bond (1207b) (black)
4	99000-31110	Suzuki Bond (1215)
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	99000-10209-YD8	Paint (sonic Silver Metallic)
7	99000-10209-Y7H	Paint (pearl Dark Space Blue)
7	99000-10209-YU8	Paint (gray Metallic)
7	99000-10209-YU9	Paint (pearl Yellow)
7	99000-10209-YAY	Paint (pearl Nebular Black)
7	99000-10209-YHG	Paint (oort Gray Metallic)
7	99000-10209-YHL	Paint (candy Sonoma Red)